


Remote Control



Number Key	Input Signal
1	VGA
2	HDMI 1
3	HDMI 2
4	DVI
5	HDBaseT

Key position

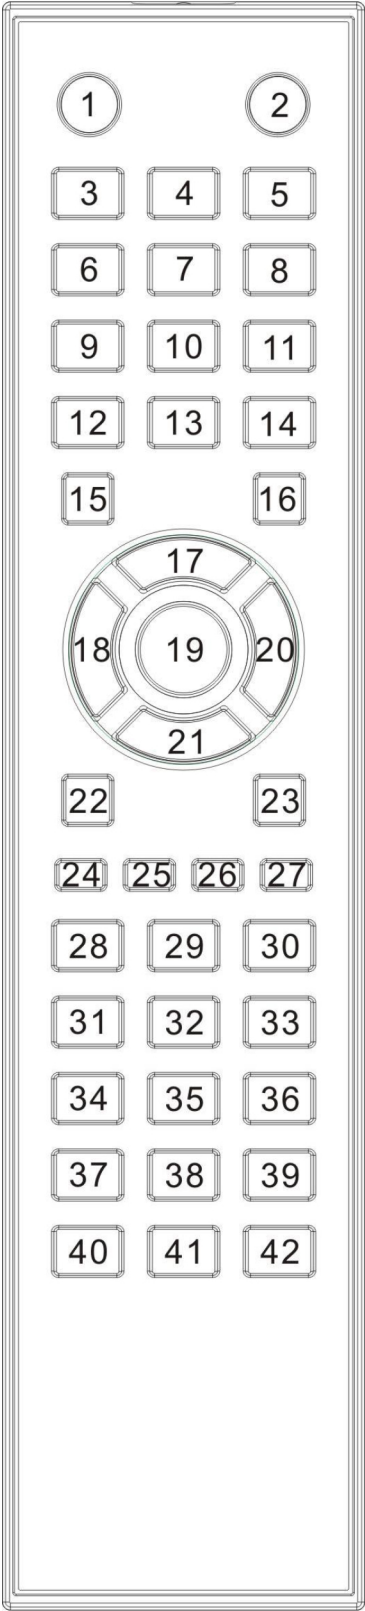

Key code table

Key Position	Key Legend	repeat format	Normal Function			
			Byte1	Byte2	Byte3	Byte4
1	ON	F1	7C	00	00	FF
2	OFF	F1	7C	00	01	FE
3	1	F1	7C	00	02	FD
4	2	F1	7C	00	03	FC
5	3	F1	7C	00	04	FB
6	4	F1	7C	00	05	FA
7	5	F1	7C	00	06	F9
8	6	F1	7C	00	07	F8
9	7	F1	7C	00	08	F7
10	8	F1	7C	00	09	F6
11	9	F1	7C	00	0A	F5
12	INFO	F1	7C	00	0B	F4
13	0	F1	7C	00	0C	F3
14	Mode	F1	7C	00	0D	F2
15	Auto Syncn	F1	7C	00	0E	F1
16	Source	F1	7C	00	0F	F0
17	UP	F1	7C	00	10	EF
18	LEFT	F1	7C	00	11	EE
19	Enter	F1	7C	00	12	ED
20	RIGHT	F1	7C	00	13	EC
21	DOWN	F1	7C	00	14	EB
22	Menu	F1	7C	00	15	EA
23	Exit	F1	7C	00	16	E9
24	Gamma	F1	7C	00	17	E8
25	Bright	F1	7C	00	18	E7
26	Contr	F1	7C	00	19	E6
27	PIP	F1	7C	00	1A	E5
28	LENS H ◀	F1	7C	00	1B	E4
29	LENS H ▶	F1	7C	00	1C	E3
30	FOCUS ▲	F1	7C	00	1D	E2
31	LENS V ▲	F1	7C	00	1E	E1
32	LENS V ▼	F1	7C	00	1F	E0
33	FOCUS ▼	F1	7C	00	20	DF
34	KEystone H ◻	F1	7C	00	21	DE
35	KEystone H ▽	F1	7C	00	22	DD
36	ZOOM ▲	F1	7C	00	23	DC
37	KEystone V ◻	F1	7C	00	24	DB
38	KEystone V ▽	F1	7C	00	25	DA
39	ZOOM ▼	F1	7C	00	26	D9
40	Shutter(AV Mute)	F1	7C	00	27	D8
41	Hot key	F1	7C	00	28	D7
42	Pattern	F1	7C	00	29	D6

ID code	Change mode	Customer code
0	Press "Mode",release,enter 0 within 1 sec	7C00
1	Press "Mode",release,enter 1 within 1 sec	7C01
2	Press "Mode",release,enter 2 within 1 sec	7C02
3	Press "Mode",release,enter 3 within 1 sec	7C03
4	Press "Mode",release,enter 4 within 1 sec	7C04
5	Press "Mode",release,enter 5 within 1 sec	7C05
6	Press "Mode",release,enter 6 within 1 sec	7C06
7	Press "Mode",release,enter 7 within 1 sec	7C07
8	Press "Mode",release,enter 8 within 1 sec	7C08
9	Press "Mode",release,enter 9 within 1 sec	7C09

Note: The original code: Press"Mode" one time as usual keys,then release,enter 0 within 1 second.