

EXPAND SERIAL COMMAND

FUNCTIONAL SPECIFICATIONS

LC-W3

SANYO Electric Co., Ltd
Home Electronics Group
AV Company
Projector BU

CONTENTS

1. Overview 8

2. Serial Interface Specification 8

 2.1 Transfer Specification 8

 2.2 Connection 8

3. Notes for communication 9

4. Notation Convention 9

5. Functional Execution Command Table 10

 5.1 Image Command Table 10

 5.2 PC Adjust Control Command Table 10

 5.3 Input Control Command Table 10

 5.4 Screen Control Command Table 10

 5.5 Lamp Command Table 11

 5.6 Sound Command Table 11

 5.7 Setting Command Table 11

 5.8 Other Command Table 11

6. Status Read Command Table 12

 6.1 Image Status Read Command Table 12

 6.2 PC Adjust Status Read Command Table 12

 6.3 Video Status Read Command Table 12

 6.4 Input Status Read Command Table 12

 6.5 Screen Status Read Command Table 12

 6.6 Lamp Status Read Command Table 13

 6.7 Sound Status Read Command Table 13

 6.8 Setting Status Read Command Table 13

 6.9 Other Status Read Command Table 13

7. Error Code Table 14

8. Functional Execution Command 15

 8.1 Format 15

 8.2 Transfer Example 15

 8.3 Operation Requirements 15

 8.4 Image Command 16

 8.4.1 CF_ BRIGHT Command 16

 8.4.2 CF_ CONT Command 16

 8.4.3 CF_ COLOR Command 16

 8.4.4 CF_ TINT Command 16

 8.4.5 CF_ SHARP Command 17

 8.4.6 CF_ GAMMA Command 17

 8.4.7 CF_ WBAL- Command 17

8.4.8	CF_COLTEMP Command	17
8.4.9	CF_NZRED Command	18
8.4.10	CF_PROGV Command	18
8.4.11	CF_IMAGE Command	18
8.4.12	CF_IMAGEADJ Command	19
8.4.13	CF_APCTRL Command	19
8.4.14	CF_COLMNSAV Command	19
8.4.15	CF_COLMNLD Command	19
8.5	PC Adjust Control Command	20
8.5.1	CF_FSYNC Command	20
8.5.2	CF_TDOTS Command	20
8.5.3	CF_CLPPHASE Command	20
8.5.4	CF_H-POS Command	20
8.5.5	CF_V-POS Command	21
8.5.6	CF_DDOTS Command	21
8.5.7	CF_DLINE Command	21
8.5.8	CF_SETPCADJ Command	22
8.5.9	CF_ORGMODE Command	22
8.5.10	CF_PCSTORE Command	23
8.5.11	CF_PCMODEFREE Command	23
8.6	Input Control Command	23
8.6.1	CF_INPUT Command	23
8.6.2	CF_SOURCE Command	24
8.6.3	CF_INPUT 1 Command	24
8.6.4	CF_INPUT 2 Command	24
8.6.5	CF_INPUT 3 Command	25
8.6.6	CF_SYSTEM Command	25
8.7	Screen Control Command	26
8.7.1	CF_SCREEN Command	26
8.7.2	CF_DZCENT Command	26
8.7.3	CF_KEYSTONE Command	26
8.7.4	CF_KYSTNMODE Command	27
8.8	Lamp Command	27
8.8.1	CF_LAMPH Command	27
8.8.2	CF_LAMPMODE Command	27
8.9	Sound Command	27
8.9.1	CF_VOLUME Command	27
8.9.2	CF_MUTE Command	28
8.10	Setting Command	28
8.10.1	CF_BACKGND Command	28

8.10.2	CF_DISP Command	28
8.10.3	CF_LOGO Command	28
8.10.4	CF_CEIL Command	29
8.10.5	CF_REAR Command	29
8.10.6	CF_RCODE Command	29
8.10.7	CF_LANG Command	30
8.10.8	CF_ON-STA Command	30
8.10.9	CF_P-MANE Command	30
8.10.10	CF_P-MANETIME Command	31
8.10.11	CF_FANSPEED Command	31
8.10.12	CF_KEYDIS Command	31
8.10.13	CF_FDEFAULT Command	31
8.10.14	CF_PJPINCODE Command	31
8.11	Other Commands	32
8.11.1	CF_KEYEMU Command	32
8.11.2	CF_MENU Command	32
8.11.3	CF_POWER Command	32
8.11.4	CF_FREEZE Command	33
9.	Status Read Command	34
9.1	Format	34
9.2	Transfer Example	34
9.3	Operation Condition	34
9.4	Image Status Read Command	34
9.4.1	CR_BRIGHT Command	34
9.4.2	CR_CONT Command	34
9.4.3	CR_COLOR Command	34
9.4.4	CR_TINT Command	35
9.4.5	CR_SHARP Command	35
9.4.6	CR_GAMMA Command	35
9.4.7	CR_WBAL-R Command	35
9.4.8	CR_WBAL-G Command	35
9.4.9	CR_WBAL-B Command	35
9.4.10	CR_COLTEMP Command	36
9.4.11	CR_NZRED Command	36
9.4.12	CR_PROGV Command	36
9.4.13	CR_IMAGE Command	36
9.4.14	CR_IMGGMD Command	37
9.4.15	CR_APCTRL Command	37
9.5	PC Adjust Status Read Command	37
9.5.1	CR_FSYNC Command	37

9.5.2	CR_TDOTS Command	37
9.5.3	CR_CLPPHASE Command	37
9.5.4	CR_H-POS Command	38
9.5.5	CR_V-POS Command	38
9.5.6	CR_DDOTS Command	38
9.5.7	CR_DLINE Command	38
9.5.8	CR_ORGMODE Command	38
9.5.9	CR_PCSTORE Command	39
9.5.10	CR_SETPCADJ Command	39
9.6	Video Status Read Command	40
9.6.1	CR_SERSYS Command	40
9.7	Input Read Command	40
9.7.1	CR_INPUT Command	40
9.7.2	CR_SOURCE Command	40
9.7.3	CR_SRCINP1 Command	41
9.7.4	CR_SRCINP2 Command	41
9.7.5	CR_SRCINP3 Command	41
9.7.6	CR_SYSTEM Command	41
9.7.7	CR_SYSLIST Command	42
9.7.8	CR_MODELIST Command	43
9.8	Screen Status Read Command	44
9.8.1	CR_SCREEN Command	44
9.8.2	CR_KYSTNMODE Command	44
9.9	Lamp Status Read Command	44
9.9.1	CR_LAMPREPL Command	44
9.9.2	CR_LAMPH Command	44
9.9.3	CR_LAMPCORRESPH Command	44
9.9.4	CR_LAMPMODE Command	45
9.9.5	CR_LAMPSTS Command	45
9.9.6	CR_PROJH Command	45
9.9.7	CR_HMLAMP Command	45
9.10	Sound Status Read Command	45
9.10.1	CR_VOLUME Command	45
9.10.2	CR_MUTE Command	46
9.11	Setting Status Read Command	46
9.11.1	CR_BACKGND Command	46
9.11.2	CR_DISP Command	46
9.11.3	CR_LOGO Command	46
9.11.4	CR_LOGOLOCK Command	46
9.11.5	CR_CEIL Command	47

9.11.6	CF_REAR Command	47
9.11.7	CF_RCODE Command	47
9.11.8	CR_LANG Command	47
9.11.9	CR_ON-STA Command	48
9.11.10	CR_P-MANE Command	48
9.11.11	CR_P-MANETIME Command	48
9.11.12	CR_FANSPEED Command	48
9.11.13	CR_KEYDIS Command	48
9.11.14	CR_SECURITY Command	48
9.11.15	CR_PJLOCKNOW Command	49
9.11.16	CR_PJLOCKMENU Command	49
9.12	Other Status Read Commands	49
9.12.1	CR_STATUS Command	49
9.12.2	CR_PRESSURE Command	50
9.12.3	CR_SIGNAL Command	50
9.12.4	CR_VMUTE Command	50
9.12.5	CR_FREEZE Command	50
9.12.6	CR_ALLPFAIL Command	50
9.12.7	CR_HMPFAIL Command	51
9.12.8	CR_PFAIL01 Command	51
9.12.9	CR_PFAIL02 Command	51
9.12.10	CR_PFAIL03 Command	51
9.12.11	CR_PFAIL04 Command	51
9.12.12	CR_PFAIL05 Command	52
9.12.13	CR_PFAIL06 Command	52
9.12.14	CR_PFAIL07 Command	52
9.12.15	CR_PFAIL08 Command	52
9.12.16	CR_PFAIL09 Command	53
9.12.17	CR_PFAIL10 Command	53
9.12.18	CR_PFAIL11 Command	53
9.12.19	CR_PFAIL12 Command	53
9.12.20	CR_PFAIL13 Command	53
9.12.21	CR_PFAIL14 Command	54
9.12.22	CR_PFAIL15Command	54
9.12.23	CR_PFAIL16 Command	54
9.12.24	CR_PFAIL17 Command	54
9.12.25	CR_PFAIL18 Command	54
9.12.26	CR_PFAIL19 Command	55
9.12.27	CR_PFAIL20 Command	55
9.12.28	CR_PFAIL21 Command	55

9.12.29 CR_PFAIL22 Command.....	55
9.12.30 CR_PFAIL23 Command.....	55
9.12.31 CR_PFAIL24 Command.....	56
9.12.32 CR_PFAIL25 Command.....	56
9.12.33 CR_PFAIL26 Command.....	56
9.12.34 CR_PFAIL27 Command.....	56
9.12.35 CR_PFAIL28 Command.....	57
9.12.36 CR_PFAIL29 Command.....	57
9.12.37 CR_PFAIL30 Command.....	57
9.12.38 CR_PFAIL31 Command.....	57
9.12.39 CR_PFAIL32 Command.....	57
9.12.40 CR_PFAIL33 Command.....	58
9.12.41 CR_PFAIL34 Command.....	58
9.12.42 CR_PFAIL35 Command.....	58
9.12.43 CR_PFAIL36 Command.....	58
9.12.44 CR_PFAIL37 Command.....	58
9.12.45 CR_PFAIL38 Command.....	59
9.12.46 CR_PFAIL39 Command.....	59
9.12.47 CR_PFAIL40 Command.....	59
9.12.48 CR_PFAIL41 Command.....	59
9.12.49 CR_PFAIL42 Command.....	59
9.12.50 CR_PFAIL43 Command.....	60
9.12.51 CR_PFAIL44 Command.....	60
9.12.52 CR_PFAIL45 Command.....	60
9.12.53 CR_PFAIL46 Command.....	60
9.12.54 CR_PFAIL47 Command.....	61
9.12.55 CR_PFAIL48 Command.....	61
9.12.56 CR_PFAIL49 Command.....	61
9.12.57 CR_PFAIL50 Command.....	61
9.12.58 CR_TEMPFAIL Command.....	61
9.12.59 CR_TEMP Command.....	62

1. Overview

- 1.1 This Functional Specification defines communication functions with Network cards for LC-W3.
- 1.2 Compatible to Farmware Ver. 1.x of the projector.
- 1.3 Commands in this document are to communicate with Network cards, but most commands are used to control a projector remotely from a computer with RS-232C. Therefore commands in this document are defined as Expand Serial Commands.

2. Serial Interface Specification

2.1 Transfer Specification


Item	Specification
Synchronous System	Asynchronous
Transmission Speed	9600 / 19200
Data Length	8 bits
Parity	N/A
Stop Bit	1
Flow Control	N/A

Note1) Transmission Speed: initial setting value is 19200

Note2) Transmission Speed can be changed in Service mode.

2.2 Connection

Dedicated serial cables that come with the projector must be used for the connection between a computer and a projector.

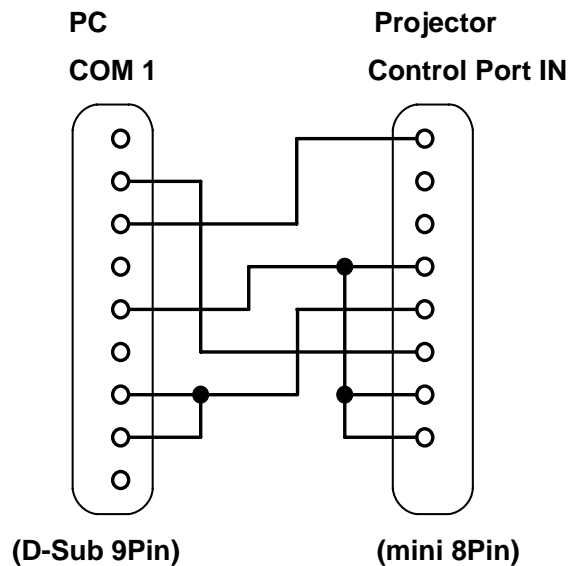

3. Notes for communication

3.1 Expand Serial Command is defined as single command/a line that starts with “C” and ends with carriage return (0x0D).

3.2 There are two types of commands; Functional Execution Commands and Status Read Command.

- Example of Functional Execution Command: “CF_BRIGHT_032” [CR]


- Example of Status Read Command: “CR_BRIGHT” [CR]

Note) “_” means a space

3.3 When it takes more than a second to receive single command, it is not executed.

When it takes more than a second to receive carriage return (0x0D) since the reception of the first data “C”, it clears information of receive buffer.

3.4 When the command pipelining, allow the interval time of more than 100ms after receiving return value.

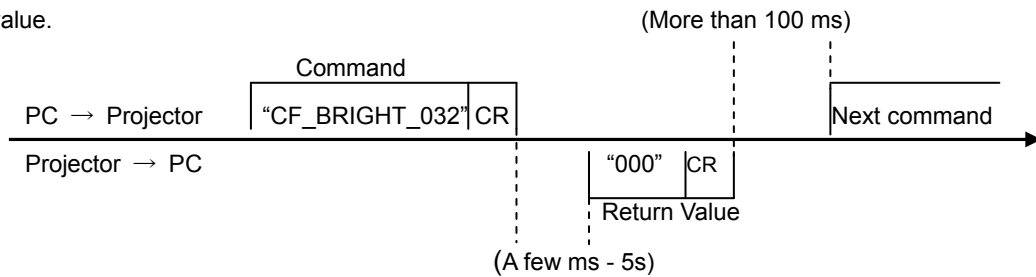

3.4.1 Do not send any subsequent command before reception of return value; however this is not the case when no response is returned after more than 5 seconds.

3.4.2 However this is not the case when no response is returned after more than 5 seconds.

3.5 It takes about 5 seconds for internal initialization after plugging in AC power. During this time, it cannot process commands. Do not issue any command.

4. Notation Convention

4.1 Data from a controller to a projector is represented as COMMAND, and data from a projector to a controller for the incoming command is represented as RESPONSE.

4.2 [CR]: Carriage Return Code

Carriage Return code is added to the end of the command.

Response also ends with carriage return code.

4.3 _: Space Code

Space Code is represented as (_).

4.4 %1: Parameter included in Command

When there are more than one parameter, they are defined as %2, %3...

4.5 %%%: Error Code returned from a projector

Acceptable: “000”.

Unacceptable: See [7. Error Code Table].

5. Functional Execution Command Table

5.1 Image Command Table

Execute command	Item
CF_BRIGHT_%1 [CR]	Set value of Brightness
CF_CONT_%1 [CR]	Set value of Contrast
CF_COLOR_%1 [CR]	Set value of Color
CF_TINT_%1 [CR]	Set value of Tint
CF_SHARP_%1 [CR]	Set value of Sharpness
CF_GAMMA_%1 [CR]	Set value of Gamma
CF_WBAL-R_%1 [CR]	Set Red value of White Balance
CF_WBAL-G_%1 [CR]	Set Green value of White Balance
CF_WBAL-B_%1 [CR]	Set Blue value of White Balance
CF_COLTEMP_%1 [CR]	Set value of Color Temperature
CF_NZRED_%1 [CR]	Set Noise reduction
CF_PROGV_%1 [CR]	Set Progressive scan
CF_IMAGE_%1 [CR]	Set Image mode
CF_IMAGEADJ_%1 [CR]	Reset or Store values of Image Adjustment
CF_APCTRL_%1 [CR]	Set Auto Picture Control
CF_COLMSAV_%1 [CR]	Store current settings of Color Management
CF_COLMNLD_%1 [CR]	Load settings of Color Management

5.2 PC Adjust Control Command Table

Execute command	Item
CF_FSYNC_%1 [CR]	Set value of Fine Sync
CF_TDOTS_%1 [CR]	Set value of Total Dots
CF_CLPPHASE_%1 [CR]	Set value of Clamp Phase
CF_CLPWIDTH_%1 [CR]	Set value of Clamp Width
CF_H-POS_%1 [CR]	Set value of Horizontal Position
CF_V-POS_%1 [CR]	Set value of Vertical Position
CF_DDOTS_%1 [CR]	Set value of Display Dots
CF_DLINE_%1 [CR]	Set value of Display Line
CF_SETPCADJ_%1 [CR]	Turn values set in PC Adjust menu into screen image
CF_ORGMODE_%1 [CR]	Set the original signal for PC mode
CF_PCSTORE_%1 [CR]	Store current setting values in PC Adjust menu in Mode %1
CF_PCMODEFREE_%1 [CR]	Delete the registered values in Mode %1 and return it to Free status.

5.3 Input Control Command Table

Execute command	Item
CF_INPUT_%1 [CR]	Select Input
CF_SOURCE_%1 [CR]	Select Source of selected Input
CF_INPUT1_%1 [CR]	Select Input1 and also set input source to %1
CF_INPUT2_%1 [CR]	Select Input2 and also set input source to %1
CF_INPUT3_%1 [CR]	Select Input3 and also set input source to %1
CF_SYSTEM_%1 [CR]	Select System of currently selected Input

5.4 Screen Control Command Table

Execute command	Item
CF_SCREEN_%1 [CR]	Select Screen size
CF_DZCENT_%1 [CR]	Cancel Digital Zoom mode
CF_KEystone_%1 [CR]	Set Keystone
CF_KYSTNMODE_%1 [CR]	Set Keystone Store mode

5.5 Lamp Command Table

Execute command	Item
CF_LAMPH_%1 [CR]	Reset total running time for each lamp
CF_LAMPMODE_%1 [CR]	Select Lamp mode

5.6 Sound Command Table

Execute command	Item
CF_VOLUME_%1 [CR]	Set value of Volume
CF_MUTE_%1 [CR]	Control ON/OFF of Sound Mute

5.7 Setting Command Table

Execute command	Item
CF_BACKGND_1[CR]	Set screen status when there is no signal
CF_DISP_%1 [CR]	Set On Screen Display function
CF_LOGO_%1_%2 [CR]	Set Logo function
CF_CEIL_%1 [CR]	Set Ceiling function
CF_REAR_%1 [CR]	Set Rear Function
CF_RCODE_%1 [CR]	Select Remote Control Reception Code
CF_LANG_%1 [CR]	Select language for OSD
CF_ON-STA_%1 [CR]	Set Power ON Start function
CF_P-MANE_%1 [CR]	Set Power Management function
CF_P-MANETIME_%1 [CR]	Set time for Power Management
CF_FANSPEED_%1 [CR]	Select Fan Speed
CF_KEYDIS_%1 [CR]	Prohibit RC/KEY control
CF_FDEFAULT_%1 [CR]	Reset to Factory Default settings
CF_PJPINCODE_%1[CR]	Enter PJ PIN code to cancel PJ lock

5.8 Other Command Table

Execute command	Item
CF_KEYEMU_%1 [CR]	The same operation as RC/Control Key
CF_MENU_%1 [CR]	Set ON/OFF of Menu
CF_POWER_%1 [CR]	Set ON/OFF of Power
CF_FREEZE_%1 [CR]	Set Freeze function

6. Status Read Command Table

6.1 Image Status Read Command Table

Status Read command	Item
CR_BRIGHT [CR]	Get value of Brightness
CR_CONT [CR]	Get value of Contrast
CR_COLOR [CR]	Get value of Color
CR_TINT [CR]	Get value of Tint
CR_SHARP [CR]	Get value of Sharpness
CR_GAMMA [CR]	Get value of Gamma
CR_WBAL-R [CR]	Get Red value of White Balance
CR_WBAL-G [CR]	Get Green value of White Balance
CR_WBAL-B [CR]	Get Blue value of White Balance
CR_COLTEMP [CR]	Get setting value of Color temperature
CR_NZRED [CR]	Get setting status of Noise reduction
CR_PROGV [CR]	Get setting status of Progressive scan
CR_IMAGE [CR]	Get Selected Image status
CR_IMGGMD [CR]	Get setting value of Image Gamma
CR_APCTRL [CR]	Get setting status of Auto Picture Control

6.2 PC Adjust Status Read Command Table

Status Read command	Item
CR_FSYNC [CR]	Get setting value of Fine Sync
CR_TDOTS [CR]	Get setting value of Total Dots
CR_CLPPHASE [CR]	Get setting value of Clamp phase
CR_CLPWIDTH [CR]	Get setting value of Clamp width
CR_H-POS [CR]	Get setting value of Horizontal Position
CR_V-POS [CR]	Get setting value of Vertical Position
CR_DDOTS [CR]	Get setting value of Display Dots
CR_DLINE [CR]	Get setting value of Display Line
CR_ORGMODE [CR]	Get the original signal for PC Adj. mode
CR_PCSTORE [CR]	Get Free or Stored status for PC Adj. mode 1-10
CR_SETPCADJ [CR]	Get current PC signal for PC display status

6.3 Video Status Read Command Table

Status Read command	Item
CR_SERSYS [CR]	Get currently selected signal. In Auto mode, it returns a result by Auto detection.

6.4 Input Status Read Command Table

Status Read command	Item
CR_INPUT [CR]	Get selected Input status
CR_SOURCE [CR]	Get selected source of currently selected Input
CR_SRCINP1 [CR]	Get selected source for Input 1
CR_SRCINP2 [CR]	Get selected source for Input 2
CR_SRCINP3 [CR]	Get selected source for Input 3
CR_SYSTEM [CR]	Get selected system of currently selected Input
CR_SYSLIST [CR]	Get possible system list
CR_MODELIST [CR]	Get possible mode list

6.5 Screen Status Read Command Table

Status Read command	Item
CR_SCREEN [CR]	Get selected screen size
CR_KYSTNMODE [CR]	Get setting status of Keystone Store Mode

6.6 Lamp Status Read Command Table

Status Read command	Item
CR_LAMPREPL [CR]	Get information for Lamp replacement time
CR_LAMPH [CR]	Get information for Lamp running time
CR_LAMPCORRESPH [CR]	Get lamp running time multiplied by a coefficient
CR_LAMPMODE [CR]	Get Lamp Mode status
CR_PROJH [CR]	Get total running time of projector

6.7 Sound Status Read Command Table

Status Read command	Item
CR_VOLUME [CR]	Get value of Volume
CR_MUTE [CR]	Get setting status of Sound Mute

6.8 Setting Status Read Command Table

Status Read command	Item
CR_BACKGND [CR]	Get setting status of Screen when there is no signal
CR_DISP [CR]	Get setting status of Display
CR_LOGO [CR]	Get setting status of Logo
CR_LOGOLOCK[CR]	Get setting status of Logo Lock
CR_CEIL [CR]	Get setting status of Ceiling
CR_REAR [CR]	Get setting status of Rear
CR_RCODE [CR]	Get selected Remote Control code
CR_LANG [CR]	Get selected language
CR_ON-STA [CR]	Get ON Start setting status
CR_P-MANE [CR]	Get Power management setting status
CR_P-MANETIME [CR]	Get setting time for Power Management
CR_FANSPEED [CR]	Get selected Fan Control Speed
CR_KEYDIS [CR]	Get RC/KEY prohibited status
CR_SECURITY [CR]	Get setting status of Security
CR_PJLOCKNOW[CR]	Get setting status of current PJ Lock
CR_PJLOCKMENU[CR]	Get PJ Lock setting status on the menu

6.9 Other Status Read Command Table

Status Read command	Item
CR_STATUS [CR]	Get operating status of Projector
CR_SIGNAL [CR]	Get status of signal existence
CR_VMUTE [CR]	Get setting status of No show function
CR_FREEZE [CR]	Get setting status of Freeze function
CR_ALLPFAIL [CR]	Get all information of Power Failure
CR_HMPFAIL [CR]	Get total number of detectable Power Failure
CR_PFAIL01 [CR]	Get Item name of Power Failure No.01 and error status
CR_PFAIL02 [CR]	Get Item name of Power Failure No.02 and error status
⋮	⋮
CR_PFAIL50 [CR]	Get Item name of Power Failure No.50 and error status
CR_TEMPFAIL [CR]	Get temperature when sensors approach abnormal temperature
CR_TEMP [CR]	Get current temperature

7. Error Code Table

Error Code	Contents
?	-When the received data cannot be decoded -Parameter designation error (wrong digit number, including invalid value, etc.)
000	Normal reception (This is "Not" error)
102	Directly specified value or values are out of range. (Not reflected)
103	Command mismatched to Hardware (the command is for Optional function which is not implemented)
201	Incremented or decremented value or values are beyond upper or lower limits.
301	Not executable due to screen capturing in process. Prompting reissue of the command after a while.
402	Not executable due to PIN code in operation. Prompting reissue of the command after a while.
101	Error not applicable to above errors

8. Functional Execution Command

8.1 Format

1) PC issues commands in format as below:

Pattern1: “CF_ COMMAND” [CR]

Pattern2: “CF_ COMMAND _” %1 [CR]

CF_: Header

COMMAND: String

%1: Parameter (String)

_: Space (To separate COMMAND and Parameter)

2) The projector decodes the received command and when it is ready to receive the next command, it returns the response.

“000” [CR]: (0x06,0x0D) When receiving Functional Execution Command

“nnn” [CR]: Except “000”, when it is unable to execute command for any specific reason.

See Error Code Table for details

3) When the received data cannot be decoded, the projector returns “?” [CR]

8.2 Transfer Example

When setting projector’s total dots to 1344 by Expand Serial command

PC → PJ: “CF_TDOTS_1344” [CR]

PC → PJ: “000” [CR] ----- Acceptable

8.3 Operation Requirements

Functional Execution Command is limited when the projector status is as below.

However, Status Read Command is still effective under following conditions.

Projector Status	Available Functional Execution Command
Standby Mode	C00: Power ON CF POWER ON
Countdown in process	C00: Power ON CF POWER ON (Terminates Count Down)
Cooling Down in process	N/A
Cooling Down due to Abnormal Temperature	N/A
Abnormal Temperature	N/A
Power Failure (60 seconds after Power failure occurred)	N/A
Power-Save Cooling Down in process	N/A
Cooling Down in process due to Shutter management	N/A
Power Save in process	C00: Power ON C01: Power OFF CF POWER ON CF POWER OFF

Note) When projector receives the another command in the above status, it returns error code which shows the status.

8.4 Image Command

8.4.1 CF_BRIGHT Command

Command	"CF_BRIGHT_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Brightness "UP"----- Increment setting value of Brightness by 1 "DN"----- Decrement setting value of Brightness by 1	
Details	Set user controlled value of Brightness (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.2 CF_CONT Command

Command	"CF_CONT_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Contrast "UP"----- Increment setting value of Contrast by 1 "DN"----- Decrement setting value of Contrast by 1	
Details	Set user controlled value of Contrast (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.3 CF_COLOR Command

Command	"CF_COLOR_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Color "UP"----- Increment setting value of Color by 1 "DN"----- Decrement setting value of Color by 1	
Details	Set user controlled value of Color (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.4 CF_TINT Command

Command	"CF_TINT_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Tint "UP"----- Increment setting value of Tint by 1 "DN"----- Decrement setting value of Tint by 1	
Details	Set Tint value (Available only in the normal Power ON status) The value set by this command will not be saved to the projector. Therefore, when ALL is OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.5 CF_SHARP Command

Command	"CF_SHARP_%1" [CR]	
%1	"000-031"----- Directly specify setting value of Sharpness "UP"----- Increment setting value of Sharpness by 1 "DN"----- Decrement setting value of Sharpness by 1	
Details	Set user controlled value of Sharpness (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.6 CF_GAMMA Command

Command	"CF_GAMMA_%1" [CR]	
%1	"000-015"----- Directly specify setting value of Gamma "UP"----- Increment setting value of Gamma by 1 "DN"----- Decrement setting value of Gamma by 1	
Details	Set user controlled value of Gamma (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.7 CF_WBAL- Command

Command	"CF_WBAL-_%1_%2" [CR]	
%1	"R" ----- RED "G" ----- GREEN "B" ----- BLUE	
%2	"000-063"----- Directly specify value of Color selected in White Balance %1 "UP"----- Increment setting value of Color specified in White Balance %1 by 1 "DN"----- Decrement setting value of Color specified in White Balance %1 by 1	
Details	Set value of Color specified in White Balance %1 (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code"[CR]

8.4.8 CF_COLTEMP Command

Command	"CF_COLTEMP_%1" [CR]	
%1	"000" ----- Xlow "001" ----- Low "002" ----- Mid "003" ----- High	
Details	Set Color Temperature (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is	

	stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.9 CF_NZRED Command

Command	"CF_NZRED_%1" [CR]	
%1	"OFF" ----- Cancel Noise Reduction "L1" ----- Set Noise Reduction L1 "L2" ----- Set Noise Reduction L2 "UP" ----- Switch setting forward direction (OFF→L1→L2→OFF) "DN" ----- Switch setting backward direction (OFF→L2→L1→OFF)	
Details	Set or Cancel Noise Reduction (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It returns to the original setting in Standby mode as well.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.10 CF_PROGV Command

Command	"CF_PROGV_%1" [CR]	
%1	"ON" ----- Select Progressive scan On mode "FILM" ----- Select Film mode "OFF" ----- Select Progressive scan Off mode "UP" ----- Switch setting forward direction (OFF→ON→FILM→OFF) "DN" ----- Switch setting backward direction (OFF→FILM→ON→OFF)	
Details	Set or Cancel Progressive scan (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.11 CF_IMAGE Command

Command	"CF_IMAGE__%1" [CR]	
%1	"STANDPC" ----- Standard (PC) (Image adjust value is set to factory default for Still Image) "STANDAV" ----- Standard (AV) (Image adjust value is set to factory default for Moving Image) "REAL"----- Real (Fixed value to display graphic image with natural tone) "CINEMA"----- Cinema (Fixed value to focus on tone reproduction for movie) "CUSTOM1" ----- Image1 (the value set and stored by user) "CUSTOM2" ----- Image2 (the value set and stored by user) "CUSTOM3" ----- Image3 (the value set and stored by user) "CUSTOM4" ----- Image4 (the value set and stored by user) "CUSTOM5" ----- Image5 (the value set and stored by user) "CUSTOM6" ----- Image6 (the value set and stored by user) "CUSTOM7" ----- Image7 (the value set and stored by user) "CUSTOM8" ----- Image8 (the value set and stored by user) "CUSTOM9" ----- Image9 (the value set and stored by user) "CUSTOM10" ----- Image10 (the value set and stored by user)	
Details	Select Image Mode (Available only in the normal Power ON status) Parameter "CUSTOM1" to "CUSTOM10" corresponds to "Image1" to "Image10"	

	displayed when selecting Image on OSD menu. The value set by this command is stored in EEPROM so that the setting can remain effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.12 CF_IMAGEADJ Command

Command	"CF_IMAGEADJ_%1"[CR]	
%1	"RST"----- Reset Image adjustment value "STR1"---- Store current image adjustment value to Image 1 "STR2"---- Store current image adjustment value to Image 2 "STR3"---- Store current image adjustment value to Image 3 "STR4"---- Store current image adjustment value to Image 4 "STR5"---- Store current image adjustment value to Image 5 "STR6"---- Store current image adjustment value to Image 6 "STR7"---- Store current image adjustment value to Image 7 "STR8"---- Store current image adjustment value to Image 8 "STR9"---- Store current image adjustment value to Image 9 "STR10"---- Store current image adjustment value to Image 10	
Details	Reset or Store Image adjustment value. (Available only in the normal Power ON status) "STR1"- "STR10" corresponds to "Image1"- "Image10" displayed when selecting "Store" for Image adjustment on OSD menu. The setting value set in "Image1" to "Image10" is stored and can be retrieved when turning on the projector again after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.13 CF_APCTRL Command

Command	"CF_APCTRL_%1" [CR]	
%1	"L1" ----- Set Auto Picture Control to Level 1 operation "L2" ----- Set Auto Picture Control to Level 2 operation "OFF" ----- Set Auto Picture Control Off "UP" ----- Switch setting forward direction (OFF→L1→L2→OFF) "DN" ----- Switch setting backward direction (OFF→L2→L1→OFF)	
Details	Set Auto Picture Control (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.14 CF_COLMNSAV Command

Command	"CF_COLMNSAV_%1" [CR]	
%1	"000 – 009" ----- Specify the area to store	
Details	Store current setting status of Color Management to the area specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.4.15 CF_COLMNL D Command

Command	"CF_COLMNL D_%1" [CR]	
%1	"000 – 009" ----- Specify the area to store	
Details	Retrieve Color Management setting status from the area specified in %1.	

	(Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.5 PC Adjust Control Command

8.5.1 CF_FSYNC Command

Command	"CF_FSYNC_%1" [CR]	
%1	"0000-0031" ----- Directly specify setting value of Fine Sync "UP" ----- Increment setting value of Fine Sync by 1 "DN" ----- Decrement setting value of Fine Sync by 1	
Details	Set value of Fine Sync in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.2 CF_TDOTS Command

Command	"CF_TDOTS_%1" [CR]	
%1	"mmmm - nnnn" ----- Directly specify setting value of Total Dots "mmmm" indicates minimum value, which is current (Display area H + Position H) value "nnnn" indicates maximum value, which is <i>less than 140 MHz in Dot Clocks</i> "UP" ----- Increment setting value of Total Dots by 1 "DN" ----- Decrement setting value of Total Dots by 1	
Details	Set value of Total Dots in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.3 CF_CLPPHASE Command

Command	"CF_CLPPHASE_%1" [CR]	
%1	"0001-0225" ----- Directly specify setting value of Clamp Phase "UP" ----- Increment setting value of Clamp Phase by 1 "DN" ----- Decrement setting value of Clamp Phase by 1	
Details	Set value of Clamp Phase (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.5.4 CF_H-POS Command

Command	"CF_H-POS_%1" [CR]	
%1	"0000-nnnn" ----- Directly specify setting value of Horizontal Position "nnnn" indicates maximum value, which is current (Total dots - Display area H) value "UP" ----- Increment setting value of Horizontal Position by 1 "DN" ----- Decrement setting value of Horizontal Position by 1	

Details	Set value of Horizontal Position in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.5 CF_V-POS Command

Command	"CF_V-POS_%1" [CR]	
%1	"000-nnnn" ----- Directly specify setting value of Vertical Position "nnnn" indicates maximum value, which is current (Total Line – Display Area V) value "UP" ----- Increment setting value of Vertical Position by 1 "DN" ----- Decrement setting value of Vertical Position by 1	
Details	Set Vertical Position value (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] ---- When input is Video signal

8.5.6 CF_DDOTS Command

Command	"CF_DDOTS_%1" [CR]	
%1	"0100-nnnn" ----- Directly specify setting value of Display Dots "nnnn" indicates maximum value, which is current (Total Dots - Position H) value In this projector, the value should be "even number" and if "odd number" is specified, it adds 1 to make the value even number. "UP" ----- Increment setting value of Display Dots by 2 "DN" ----- Decrement setting value of Display Dots by 2	
Details	Set setting value of Display Dots in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.7 CF_DLINE Command

Command	"CF_DLINE_%1" [CR]	
%1	"0100-nnnn" ----- Directly specify setting value of Display Line "nnnn" indicates maximum value, which is current (Total Line - Position V) value "UP" ----- Increment setting value of Display Line by 1 "DN" ----- Decrement setting value of Display line by 1	
Details	Set setting value of Display Line in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting. (It is stored in Standby mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.8 CF_SETPCADJ Command

Command	"CF_SETPCADJ_%1" [CR]	
%1	None "EXT11-60"	
Details	<p>1. Apply value set in PC Adjust Menu to projected image. Specifying setting value directly in the following PC Adjust related commands immediately reflects them on projected image, while issuing this command after these commands also triggers the reflection. (Available only in the normal Power ON status)</p> <p>----- CF_FSYNC ----- CF_TDOTS ----- CF_CLAMP ----- CF_H-POS ----- CF_V-POS ----- CF_DLINE ----- CF_DDOTS ----- CF_FLSCREEN</p> <p>2. When "EXT11-60" is specified in %1, "Ex Mode" (not like XGA1) is displayed in "SYSTEM" menu.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.9 CF_ORGMODE Command

Command	"CF_ORGMODE_%1" [CR]	
%1	<p>When input signal is PC Analog; "VGA1" ----- Specify VGA1 "VGA2" ----- Specify VGA2 : : "XGA1" ----- Specify XGA1 : : "WXGA3" ----- Specify WXGA3 "1080i60" ----- Specify 1080i60 "1080i50" ----- Specify 1080i50 "1035i" ----- Specify 1035i "720p60" ----- Specify 720p60 "720p50" ----- Specify 720p50 "575p" ----- Specify 575p "480p" ----- Specify 480p "575i" ----- Specify 575i "480i" ----- Specify 480i "1080psf/24" ----- Specify 1080psf/24 "1080psf/25" ----- Specify 1080psf/25 "1080psf/30" ----- Specify 1080psf/30 * When input signal is not PC Analog, error code "101" is returned.</p>	
Details	<p>After "EXT n" is set by PC control command such as CF_FSYNC/CF_TDOTS and CF_SETPCADJ command, specify the signal originated with by issuing this command. This command is used to specify projector internal settings such as whether or not to get PC signal through IP (Available only in the normal Power ON status) Note; To differentiate between 60Hz and 50Hz in 1080i and 720p, "60" or "50" is necessary to add to the parameter in this command.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.10 CF_PCSTORE Command

Command	"CF_PCSTORE_%1" [CR]	
%1	"1" ----- Store current PC Adjust status to Mode1 "2" ----- Store current PC Adjust status to Mode2 "3" ----- Store current PC Adjust status to Mode3 "4" ----- Store current PC Adjust status to Mode4 "5" ----- Store current PC Adjust status to Mode5 "6" ----- Store current PC Adjust status to Mode6 "7" ----- Store current PC Adjust status to Mode7 "8" ----- Store current PC Adjust status to Mode8 "9" ----- Store current PC Adjust status to Mode9 "10" ----- Store current PC Adjust status to Mode10 	
Details	Store current PC Adjust status (each parameter status such as Total dots) to Mode1-50. This command operates the same way as storing to Mode1-50 in PC Adjust Menu. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.5.11 CF_PCMODEFREE Command

Command	"CF_PCMODEFREE_%1" [CR]	
%1	"1" ----- Free current PC Adjust data in Mode1 "2" ----- Free current PC Adjust data in Mode2 "3" ----- Free current PC Adjust data in Mode3 "4" ----- Free current PC Adjust data in Mode4 "5" ----- Free current PC Adjust data in Mode5 "6" ----- Free current PC Adjust data in Mode6 "7" ----- Free current PC Adjust data in Mode7 "8" ----- Free current PC Adjust data in Mode8 "9" ----- Free current PC Adjust data in Mode9 "10" ----- Free current PC Adjust data in Mode10 	
Details	Delete the registered data in Custom Mode1-50 and returns it to Free. This command operates the same way as storing to Mode1-50 in PC Adjust Menu. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal

8.6 Input Control Command

8.6.1 CF_INPUT Command

Command	"CF_INPUT_%1" [CR]	
%1	"1" ----- Select Input 1 (not switching Source) "2" ----- Select Input 2 (not switching Source) "3" ----- Select Input 3 (not switching Source) "UP" ----- Increment Input No. by 1 (Input 3 to Input 1) "DN" ----- Decrement Input No. by 1 (Input 1 to Input 3)	
Details	Select Input (Available only in the normal Power ON status) This command switches only Input No, not Source. For instance, when Input 1 has been selected, receiving the command to select Input 1 does not invoke souce-switching operation. That means it operates differently from "INPUT" button of Projector or Remote Control.	
Response	Acceptable	"000" [CR]
	Unacceptable	"%%%" [CR]

8.6.2 CF_SOURCE Command

Command	"CF_SOURCE_%1" [CR]	
%1	Input 1	"DIGITAL" ----- Select RGB(PC Digital) Input "ANALOG" ----- Select RGB(PC Analog) Input "SCART" ----- Select RGB(Scart) input "HDCP" ----- Select RGB(AV HDCP) input "UP" ----- Selectin PC Analog → Scart → PC Digital → AV HDCP → PC Analog order "DN" ----- Select in PC Analog → AV HDCP → PC Digital → Scart → PC Analog order
	Input 2	"VIDEO" ----- Select Video input "YPBPR"----- Select Y,Pb/Cb,Pr/Cr input "ANALOG" ----- Select RGB input "UP" ----- Select in VIDEO → YPBPR → RGB → VIDEO order "DN" ----- Select in VIDEO → RGB → YPBPR → VIDEO order
	Input 3	"VIDEO" -----Select Video input "S-VIDEO" ----- Select S-Video input "YPBPR" ----- Select Y,Pb/Cb,Pr/Cr input "UP" ----- Select in VIDEO → YPBPR → S-VIDEO → VIDEO order "DN" ----- Select in VIDEO → S-VIDEO → YPBPR → VIDEO order
Details	Select Source of currently selected Input (Available only in the normal Power ON status) When selected input does not include specified %1, error code "101" is returned and it is not executed.	
Response	Acceptable	"000" [CR]
	Unacceptable	"%%%" [CR]

8.6.3 CF_INPUT 1 Command

Command	"CF_INPUT1_%1" [CR]	
%1	"DIGITAL" ----- Select PC Digital Input "ANALOG" ----- Select PC Analog Input "SCART" ----- Select SCART Input "HDCP" ----- Select DVI HDCP Input	
Details	Select Input 1 as well as Source specified in %1 (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"%%%" [CR]

8.6.4 CF_INPUT 2 Command

Command	"CF_INPUT2_%1" [CR]	
%1	"VIDEO" ----- Select Composite Video Input "YPBPR" ----- Select Y/Pb/Pr Input "ANALOG" ----- Select RGB Input	
Details	Select Input 2 as well as Source specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"%%%" [CR]

8.6.5 CF_INPUT 3 Command

Command	"CF_INPUT3_%1" [CR]	
%1	"VIDEO" ----- Select Composite Video Input "S-VIDEO" ----- Select S-Video Input "YPBPR" ----- Select Y/Pb/Pr Input	
Details	Select Input 3 as well as Source specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"%%%" [CR]

8.6.6 CF_SYSTEM Command

Command	"CF_SYSTEM_%1" [CR]	
%1	Input is PC Analog	"VGA1" ----- Select VGA1 "VGA2" ----- Select VGA2 : : "XGA1" ----- Select XGA1 : : "WXGA3" ----- Select WXGA3 "1080I" ----- Select 1080i "1035I" ----- Select 1035i "720p" ----- Select 720p "575p" ----- Select 575p "480p" ----- Select 480p "575I" ----- Select 575i "480I" ----- Select 480i "1080psf/24" ----- Select 1080psf/24 "1080psf/25" ----- Select 1080psf/25 "1080psf/30" ----- Select 1080psf/30 "MODE1 - 10" ----- Select MODE1 – MODE10 "EXT11 - 60" ----- Select Ex Mode11-60 * Mode1-10 is not returned.
	Input is PC Digital/AV HDCP	"D-XGA1" ----- Select D-XGA1 : : "D-WXGA3" ----- Select D-WXGA3 "D-1080I" ----- Select D-1080i "D-1035I" ----- Select D-1035i "D-720p" ----- Select D-720p "D-575p" ----- Select D-575p "D-480p" ----- Select D-480p "D-1080psf/24" ----- Select D-1080psf/24 "D-1080psf/25" ----- Select D-1080psf/25 "D-1080psf/30" ----- Select D-1080psf/30
	Input is Y,Pb/Cb,Pr/Cr	"AUTO" ----- Select System "Auto" "1080I" ----- Select 1080i "1035I" ----- Select 1035i "720P" ----- Select 720p "575P" ----- Select 575p "480P" ----- Select 480p "575I" ----- Select 575i "480I" ----- Select 480i
	Input is Video / S-Video	"AUTO" ----- Select System "Auto" "NTSC" ----- Select NTSC "NTSC443" ----- Select NTSC4.43 "PAL" ----- Select PAL "SECAM" ----- Select SECAM "PAL-M" ----- Select PAL-M "PAL-N" ----- Select PAL-N
	Details	Select Input System of currently selected Input

	(Available only in the normal Power ON status) When selected input does not include specified %1, error code "101" [CR] is returned and it is not executed.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.7 Screen Control Command

8.7.1 CF_SCREEN Command

Command	"CF_SCREEN_%1" [CR]	
%1	Input is Computer	"NORMAL" ----- Select Normal mode "FULL" ----- Select Full Screen mode "TRUE" ----- Select True mode "DZOOM_UP" ----- Scale up with Digital zoom "DZOOM_DN" ----- Scale down with Digital zoom "UP" ----- Select screen size with forward swiching in possible range "DN" ----- Select screen size with backward swiching in possible range
	Input is Video	"NORMAL" ----- Select Normal mode "FULL" ----- Select Full Screen mode "ZOOM" ----- Select Zoom mode "NATURAL" ----- Select Natural wide mode "UP" ----- Select screen size with forward swiching in possible range "DN" ----- Select screen size with backward swiching in possible range
Details	Select screen size (Available only in the normal Power ON status) When selected input does not include specified %1, error code "101" [CR] is returned and it is not executed. Receiving "DZOOM_UP" or "DZOOM_DN" command immediately executes the function.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.7.2 CF_DZCENT Command

Command	"CF_DZCENT_%1" [CR]	
%1	"CENT" ----- Cancel Digital Zoom (CENT: "CENTER")	
Details	Cancel Digital Zoom function (Available only in the normal Power ON status and Input for Computer is selected)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] ----- When iput is Video

8.7.3 CF_KEYSTONE Command

Command	"CF_KEYSTONE_%1" [CR]	
%1	"UP" ----- Correct Keystone distortion to reduce upper part of image "FUP" ----- Correct Keystone distortion to reduce upper part largely "DN" ----- Correct Keystone distortion to reduce lower part of image "FDN" ----- Correct Keystone distortion to reduce lower part largely "LEFT" ----- Correct Keystone distortion to reduce left part of image "FLFT" ----- Correct Keystone distortion to reduce left part largely "RIGHT" ----- Correct Keystone distortion to reduce right part of image "FRGT" ----- Correct Keystone distortion to reduce right part largely	

	"RST" ----- Set Keystone OFF	
Details	<p>Change level of Keystone distortion correction (Available only in the normal Power ON status). When reached the limit of the correction level, projector accepts the command but does not execute it. Receiving this command immediately invokes the operation. When trying to set the value beyond available range, error code "201" is returned and setting is not executed. Example 1: When the correction level of the right part has reached its upper limit and then the command "RIGHT" is received Example 2: When the upper part correction allows only another step, and then the command "FUP" is received.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.7.4 CF_KYSTNMODE Command

Command	"CF_KYSTNMODE_%1" [CR]	
%1	<p>"STR" ----- Set Keystone store mode to Store "RST" ----- Set Keystone store mode to Reset</p>	
Details	Set Keystone store mode (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.8 Lamp Command

8.8.1 CF_LAMPH Command

Command	"CF_LAMPH_%1" [CR]	
%1	"RST"	
Details	Reset lamp running time (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.8.2 CF_LAMPMODE Command

Command	"CF_AUTOLAMPCTRL_%1" [CR]	
%1	<p>"NORMAL" ----- Set Lamp status to Normal mode "ECO" ----- Set Lamp status to Eco mode "AUTO" ----- Set Lamp status to Auto mode</p>	
Details	<p>Select Lamp mode (Available only in the normal Power ON status) The value set by this command is stored in EEPROM and the setting remains effective after the power is turned to ALL OFF. Note: In PLV-75 which does not provide lamp mode switching, "?" is returned for this command.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.9 Sound Command

8.9.1 CF_VOLUME Command

Command	"CF_VOLUME_%1" [CR]	
%1	"000-063" ----- Directly select Volume setting value	

	"UP" ----- Increment setting value of Volume by 1 "DN" ----- Decrement setting value of Volume by 1	
Details	Control level of Volume (Available only in the normal Power ON status) Set Volume Up/Down the same way as RC and also directly select Volume setting value. When setting Volume value, the Sound Mute ON status is canceled just like RC operation. The value set by this command is stored in Projector.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.9.2 CF_MUTE Command

Command	"CF_MUTE_%1" [CR]	
%1	"ON" ----- Set Sound Mute ON "OFF" ----- Set Sound Mute OFF	
Details	Control On or Off of Sound Mute function (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10 Setting Command

8.10.1 CF_BACKGND Command

Command	"CF_BACKGND_%1" [CR]	
%1	"BLUE" ----- Select Blue Back "MYLOGO" ----- Select My Logo "BLACK" ----- Select Black Back "UP" ----- Switch forward (Blue Back→My Logo→Black Back→Blue Back) "DN" ----- Switch backward (Blue Back→Black Back→My Logo→Blue Back)	
Details	Set Screen status when there is no signal (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.2 CF_DISP Command

Command	"CF_DISP_%1" [CR]	
%1	"ON" ----- Select Display "CNTDWN OFF" ----- Select Count down Off "OFF" ----- Cancel Display "UP" ----- Switch forward (On → Count down Off → Off → On → ---) "DN" ----- Switch backward (On → Off → Count down Off → On → ---)	
Details	Set/Cancel Display (Available only in the normal Power ON status) The value set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.3 CF_LOGO Command

Command	"CF_LOGO_%1_%2" [CR]	
%1	"0000 – 9999" ----- Directly set Logo PIN code	

LC-W3 Expand Serial Command Functional Specifications

%2	<p>“OFF” -----Cancel Logo display “DFLT” ----- Select Logo of Factory Default “MYLOGO” ----- Select My Logo “UP” ----- Select functions to choose forward (OFF → DFLT → MYLOGO → OFF → --) “DN” ----- Select functions to choose backward (OFF → MYLOGO → DFLT → OFF → --)</p>	
Details	<p>Set Logo status (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF. Set Logo PIN code in %1.</p> <p>When Logo Lock is enabled: PIN code is matched ----- Command is valid (Acceptable) PIN code is mismatched----- Command is invalid (Error code “102”) PIN code is beyond %1 available range ----- Command is invalid (Error code“?”) When Logo Lock is disabled: PIN code is within %1 available range ----- Command is valid (Acceptable) PIN code is out of %1 available range ----- Command is invalid (Error code “?”)</p> <p>Note: When Logo Lock is enabled, matching Logo PIN code switches Logo but Logo Lock is not cancelled (Lock status is kept).</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

8.10.4 CF_CEIL Command

Command	“CF_CEIL_%1” [CR]	
%1	<p>“ON” ----- Set Ceiling function “OFF” ----- Cancel Ceiling function</p>	
Details	<p>Set/Cancel Ceiling function (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

8.10.5 CF_REAR Command

Command	“CF_REAR_%1” [CR]	
%1	<p>“ON” ----- Set Rear function “OFF” ----- Cancel Rear function</p>	
Details	<p>Set/Cancel Rear function (Available only in the normal Power ON status) When Rear is ON, projected image is left/right reversed. The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

8.10.6 CF_RCODE Command

Command	“CF_RCODE_%1” [CR]	
%1	<p>“001” ----- Select Code 1 “002” ----- Select Code 2 “003” ----- Select Code 3 “004” ----- Select Code 4 “005” ----- Select Code 5</p>	

	"006" ----- Select Code 6 "007" ----- Select Code 7 "008" ----- Select Code 8	
Details	Select Code of Remote Control (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]
Command	"CF_RFID_%1" [CR]	

8.10.7 CF_LANG Command

Command	"CF_LANG_%1" [CR]	
%1	"ENG" ----- Select ENGLISH "DEU" ----- Select German "FRA" ----- Select French "ITA" ----- Select Italian "ESP" ----- Select Spanish "POR" ----- Select Portuguese "NED" ----- Select Dutch "SVE" ----- Select Swedish "JPN" ----- Select Japanese "CHI" ----- Select Chinese "KOR" ----- Select Korean "RUS" ----- Select Russian	
Details	Set language for OSD (Available only in the normal Power ON status) The language set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.8 CF_ON-STA Command

Command	"CF_ON-STA_%1" [CR]	
%1	"ON" ----- Set Power On Start "OFF" ----- Cancel Power On Start	
Details	Set/Cancel Power ON Start (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting value remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.9 CF_P-MANE Command

Command	"CF_P-MANE_%1" [CR]	
%1	"OFF" ----- Set Power Management Off "READY" ----- Set Power Management Ready "SHUTDOWN" ----- Set Power Management to Shut Down mode "UP" ----- Switch forward (Off→Ready→Shut down→Off) "DN" ----- Switch backward (Off→Shut down→Ready→Off)	
Details	Set/Cancel Power Management (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.10 CF_P-MANETIME Command

Command	"CF_P-MANETIME_%1" [CR]	
%1	"01" - "30" ----- Directly specify setting time by the minute "UP" ----- Increment value by 1 (Switched in 01→02→ --- → 30 → 01 order) "DN" ----- Decrement value by 1 (Switched in 30→29→ --- → 01 → 30 order)	
Details	Set Power Management time (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.11 CF_FANSPEED Command

Command	"CF_FANSPEED_%1" [CR]	
%1	"MAX" ----- Select maximum fan speed "NOR" ----- Select normal fan speed	
Details	Switch Fan Control Speed (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.12 CF_KEYDIS Command

Command	"CF_KEYDIS_%1" [CR]	
%1	"NONE" ----- RC and KEY are valid "RC" ----- RC is invalid "KEY" ----- KEY is invalid	
Details	Disable RC and/or KEY functions (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.13 CF_FDEFAULT Command

Command	"CF_FDEFAULT_%1" [CR]	
%1	"RST"	
Details	Reset to Factory Default setting (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.10.14 CF_PJPINCODE Command

Command	"CF_PJPINCODE_%1" [CR]	
%1	"0000 – 9999" ----- Directly set PJ PIN code	
Details	Enter PIN code to cancel PJ lock (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF. Set PJ PIN code at %1	

	When PJ Lock is enabled: PIN code is matched ----- Command is valid (Acceptable) PIN code is mismatched ----- Command is invalid (Error code "102") PIN code is beyond %1 available range ----- Command is invalid (Error code "?") When PJ Lock is canceled: PIN code is within %1 range ----- Command is valid (Acceptable) PIN code is out of %1 range ----- Command is invalid (Error code is 102)	
	This command is only valid when "PJ PIN code" dialog is displayed to enter PIN code after Power is ON and Countdown is completed. When PJ Lock is set to "On1", it needs to send this command every time the projector is turned on.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.11 Other Commands

8.11.1 CF_KEYEMU Command

Command	"CF_KEYEMU_%1" [CR]	
%1	"RIGHT" ----- Move Pointer rightward in On-Screen Display Menu "LEFT" ----- Move Pointer leftward in On-Screen Display Menu "UP" ----- Move Pointer to upward On-Screen Display Menu "DN" ----- Move Pointer to downward in On-Screen Display Menu "SELECT" ----- The same operation as "SELECT" button of RC "AUTO PC" ----- Execute Auto PC Adj. operation The same operation as "AUTO PC" button of RC When this is sent during Auto PC Adj. operation, the operation is stopped. This is same way as pressing "AUTO PC" button of RC.	
Details	The same operation as RC/Control Key.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.11.2 CF_MENU Command

Command	"CF_MENU_%1" [CR]	
%1	"ON" ----- Display On-Screen Display Menu "OFF" ----- Hide On-Screen Display Menu	
Details	Display/Hide On-Screen Display Menu (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.11.3 CF_POWER Command

Command	"CF_POWER_%1" [CR]	
%1	"ON" ----- Power ON "OFF" ----- Power OFF * Issuing another command during countdown process forced countdown operation to be terminated. * Error Code is returned in some projector status, which indicates the command is impossible to be executed. (See [8.3] for details) * Returning the response "000" [CR] (acceptable) does not always mean that the status has already changed to Power ON. Example: When the temperature approaches abnormal status after returning "000" [CR] to the command CF POWER ON.	

LC-W3 Expand Serial Command Functional Specifications

	Therefore, to get the projector status requires using Status Read command.	
Details	Set Power ON/OFF	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.11.4 CF_FREEZE Command

Command	"CF_FREEZE_%1" [CR]	
%1	"ON" ----- Set Freeze "OFF" ----- Cancel Freeze "UP" ----- Switch forward (On→Off→On→---) "DN" ----- Switch backward (On→Off→On→---) * The same operation for "UP" and "DN" as this model has only "ON" / "OFF".	
Details	Set / Cancel Freeze function. (Available only in the normal Power ON status) Receiving FREEZE_ON command when the projector is Freeze enabled, Freeze status is kept.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

9. Status Read Command

9.1 Format

- 1) PC issues commands in format as below:
 “CR_ **COMMAND**” [CR]
 Command: String
- 2) When projector receives the appropriate command, it returns the required data as a string.
 “000_” %1 [CR]
 %1: Required Data (String)
- 3) When the received data cannot be decoded, the projector returns “?” [CR]

9.2 Transfer Example

Get total dots of projector by Expand Serial Commands

PC → PJ: “CR_TDOTS” [CR]

PC ← PJ: “000_1344” [CR]

9.3 Operation Condition

Basically it should be always operated.

9.4 Image Status Read Command

9.4.1 CR_BRIGHT Command

Command	“CR_BRIGHT” [CR]	
Details	Get user controlled value of Brightness	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“?” [CR]

9.4.2 CR_CONT Command

Command	“CR_CONT” [CR]	
Details	Get user controlled value of Contrast	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“?” [CR]

9.4.3 CR_COLOR Command

Command	“CR_COLOR” [CR]	
Details	Get user controlled value of Color	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“?” [CR]

9.4.4 CR_TINT Command

Command	"CR_TINT" [CR]	
Details	Get user controlled value of Tint	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input). "?" [CR] --- When unknown command is received

9.4.5 CR_SHARP Command

Command	"CR_SHARP" [CR]	
Details	Get user controlled value of Sharpness	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 031"
	Unacceptable	"?" [CR]

9.4.6 CR_GAMMA Command

Command	"CR_GAMMA" [CR]	
Details	Get user controlled value of Gamma	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 015"
	Unacceptable	"?" [CR]

9.4.7 CR_WBAL-R Command

Command	"CR_WBAL-R" [CR]	
Details	Get user controlled Red value of White Balance	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

9.4.8 CR_WBAL-G Command

Command	"CR_WBAL-G" [CR]	
Details	Get user controlled Green value of White Balance	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

9.4.9 CR_WBAL-B Command

Command	"CR_WBAL-B" [CR]	
Details	Get user controlled Blue value of White Balance	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

9.4.10 CR_COLTEMP Command

Command	"CR_COLTEMP" [CR]	
Details	Get Color Temperature setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"000" ----- Xlow "001" ----- Low "002" ----- Mid "003" ----- High "BLANK" ---- OSD Menu is blank (Neither of Xlow / Low / Mid / High)
	Unacceptable	"?" [CR]

9.4.11 CR_NZRED Command

Command	"CR_NZRED" [CR]	
Details	Get Noise Reduction setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Cancel Noise Reduction "L1" ----- Noise Reduction L1 "L2" ----- Noise Reduction L2
	Unacceptable	"?" [CR]

9.4.12 CR_PROGV Command

Command	"CR_PROGV" [CR]	
Details	Get Progressive scan setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Set Progressive scan On "FILM" ----- Select FILM mode "OFF" ----- Set Progressive scan Off
	Unacceptable	"?" [CR]

9.4.13 CR_IMAGE Command

Command	"CR_IMAGE" [CR]	
Details	Get image setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"STANDPC" ----- Standard (PC) "STANDAV" ----- Standard (AV) "REAL" ----- Real "CINEMA" ----- Cinema "CUSTOM1" ----- "Image1" "CUSTOM2" ----- "Image2" "CUSTOM3" ----- "Image3" "CUSTOM4" ----- "Image4" "CUSTOM5" ----- "Image5" "CUSTOM6" ----- "Image6" "CUSTOM7" ----- "Image7" "CUSTOM8" ----- "Image8" "CUSTOM9" ----- "Image9" "CUSTOM10" ----- "Image10"
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

9.4.14 CR_IMGGMD Command

Command	"CR_IMGGMD" [CR]	
Details	Get setting status of Standard/Real/Cinema in Image Gamma	
Response	Acceptable	"000_%1" [CR]
	%1	"STDPC" ----- Standard (PC) "STDAV" ----- Standard (AV) "REL" ----- Real "CNM" ----- Cinema
	Unacceptable	"?" [CR]

9.4.15 CR_APCTRL Command

Command	"CR_APCTRL" [CR]	
Details	Get setting status of Auto Picture Control	
Response	Acceptable	"000_%1" [CR]
	%1	"L1" ----- Operate Auto Picture Control with Level1 "L2" ----- Operate Auto Picture Control with Level2 "OFF" ----- Set Auto Picture Control OFF
	Unacceptable	"?" [CR]

9.5 PC Adjust Status Read Command

9.5.1 CR_FSYNC Command

Command	"CR_FSYNC" [CR]	
Details	Get value of Fine Sync	
Response	Acceptable	"000_%1" [CR]
	%1	"0000 – 0031"
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input) "?" [CR] --- When unknown command is received

9.5.2 CR_TDOTS Command

Command	"CR_TDOTS" [CR]	
Details	Get value of Total Dots	
Response	Acceptable	"000_%1" [CR]
	%1	"mmmm" – "nnnn" (mmmm = Display area H + Position H) (nnnn = Maximum value less than 140 MHz of Dot Clock)
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

9.5.3 CR_CLPPHASE Command

Command	"CR_CLPPHASE" [CR]	
Details	Get value of Clamp Phase value	
Response	Acceptable	"000_%1" [CR]
	%1	"0001 – 0255"
	Unacceptable	"Error Code" [CR]

9.5.4 CR_H-POS Command

Command	"CR_H-POS" [CR]	
Details	Get value of Horizontal Position	
Response	Acceptable	"000_%1" [CR]
	%1	"0000 – nnnn" (nnnn = Total Dots – Display area H)
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

9.5.5 CR_V-POS Command

Command	"CR_V-POS" [CR]	
Details	Get value of Vertical Position	
Response	Acceptable	"000_%1" [CR]
	%1	"0000 – nnnn" (nnnn = Total Line – Display area V)
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

9.5.6 CR_DDOTS Command

Command	"CR_DDOTS" [CR]	
Details	Get value of Display Dots	
Response	Acceptable	"000_%1" [CR]
	%1	"0100 – nnnn" (nnnn = Total Dots – Position H)
	Unacceptable	"Error Code" [CR] ---- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

9.5.7 CR_DLINE Command

Command	"CR_DLINE" [CR]	
Details	Get value of Display Line	
Response	Acceptable	"000_%1" [CR]
	%1	"0100 – nnnn" (nnnn = Total Line – Position V)
	Unacceptable	"Error Code" [CR] ---- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

9.5.8 CR_ORGMODE Command

Command	"CR_ORGMODE" [CR]	
Details	Get the original signal of current selected Mode that is set in PC Adj. When MODE1- 10 or EXT11-50 is not selected, get the current signal.	
Response	Acceptable	"000_%1" [CR]

	%1	When input signal is PC Analog; "VGA1" ----- Indicates signal is VGA1 "VGA2" ----- Indicates signal is VGA2 : : "XGA1" ----- Indicates signal is XGA1 : : "WXGA3" ----- Indicates signal is WXGA3 "1080i60" ----- Indicates signal is 1080i60 "1080i50" ----- Indicates signal is 1080i50 "1035i" ----- Indicates signal is 10350i "720p60" ----- Indicates signal is 720p60 "720p50" ----- Indicates signal is 720p50 "575p" ----- Indicates signal is 575p "480p" ----- Indicates signal is 480p "575i" ----- Indicates signal is 575i "480i" ----- Indicates signal is 480i "1080psf/24" ----- Indicates signal is 1080psf/24 "1080psf/25" ----- Indicates signal is 1080psf/25 "1080psf/30" ----- Indicates signal is 1080psf/30 Note; To differentiate between 60Hz and 50Hz in 1080i and 720p, "60" or "50" is necessary to add to the parameter in this command * When input signal is not PC Analog, error code "101" is returned.
	Unacceptable	"?" [CR]

9.5.9 CR_PCSTORE Command

Command	"CR_PCSTORE" [CR]	
Details	Get Free or Stored status of MODE1 - 5 in PC Adjust. Data consists of 10 bytes and each byte represents MODE1-10. (F:Free, S:Stored)	
Response	Acceptable	"000_%1" [CR]
	%1	"FFFFFFFF" ----- ALL Free "SFFFFFFFF" ----- Mode1 is Stored, others are Free : : "FFFFFFFFS" ----- Mode10 is Stored, others are Free "SSSSSSSSSS" ----- ALL Stored
	Unacceptable	"?" [CR]

9.5.10 CR_SETPCADJ Command

Command	"CR_SETPCADJ" [CR]	
Details	Get PC signal for current system	
Response	Acceptable	"000_%1" [CR]
	%1	When input signal is PC Analog; "VGA1" ----- Indicates VGA1 is selected "VGA2" ----- Indicates VGA2 is selected : : "XGA1" ----- Indicates XGA1 is selected : : "WXGA3" ----- Indicates WXGA3 is selected "1080i" ----- Indicates 1080i is selected "1035i" ----- Indicates 10350i is selected "720p" ----- Indicates 720p is selected "575p" ----- Indicates 575p is selected "480p" ----- Indicates 480p is selected "575i" ----- Indicates 575i is selected "480i" ----- Indicates 480i is selected

		"1080psf/24" ----- Indicates 1080psf/24 is selected "1080psf/25" ----- Indicates 1080psf/25 is selected "1080psf/30" ----- Indicates 1080psf/30 is selected : "MODE10" ----- Indicates Mode10 is selected "EXT11" ----- EXT11 is selected : "EXT60" ----- EXT60 is selected * Error Code "101" [CR] is returned for no signal. * When input signal is not PC Analog, error code "101" is returned.
	Unacceptable	"?" [CR]

9.6 Video Status Read Command

9.6.1 CR_SERSYS Command

Command	"CR_SERSYS" [CR]	
Details	Get presently selected signal Auto detected signal returned in Auto mode Only available when Input is Y,Pb/Cb,Pr/Cr, S-Video and Video. (This is not the case for PC-Analog/PC-Digital/AV HDCP signals)	
Response	Acceptable	"000_%1" [CR]
	%1	"1080I60" ----- 1080i 60Hz "1080I50" ----- 1080i 50Hz "1035I" ----- 1035i "720P60" ----- 720p 60Hz "720P50" ----- 720p 50Hz "575P" ----- 575p "480P" ----- 480p "575I" ----- 575i (includes Composite signal such as PAL) "480I" ----- 480i (includes Composite signal such as NTSC) "NO_SIGNAL" ----- No signal
	Unacceptable	"101" [CR] --- When input signal is PC-Analog, PC-Digital or PC signals in AV HDCP "?" [CR]

9.7 Input Read Command

9.7.1 CR_INPUT Command

Command	"CR_INPUT" [CR]	
Details	Get selected INPUT No.	
Response	Acceptable	"000_%1" [CR]
	%1	"1 - 3"
	Unacceptable	"?" [CR]

9.7.2 CR_SOURCE Command

Command	"CR_SOURCE" [CR]	
Details	Get selected source	
Response	Acceptable	"000_%1" [CR]

	%1	"DIGITAL" ----- RGB (PC Digital) is selected "ANALOG" ----- RGB (PC Analog) is selected "SCART" ----- RGB (Scart) is selected "HDCP" ----- RGB (AV HDCP) is selected "VIDEO" ----- Video is selected "S-VIDEO" ----- S-Video is selected "YPBPR" ----- Y,Pb/Cb,Pr/Cr is selected
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input) "?" [CR] ----- When unknown command is received

9.7.3 CR_SRCINP1 Command

Command	"CR_SRCINP1" [CR]	
Details	Get Source of INPUT1	
Response	Acceptable	"000_%1" [CR]
	%1	"DIGITAL" ----- in PC Digital mode "ANALOG" ----- in PC Analog mode "SCART" ----- in Scart mode "HDCP" ----- in AV HDCP mode
	Unacceptable	"?" [CR]

9.7.4 CR_SRCINP2 Command

Command	"CR_SRCINP2" [CR]	
Details	Get Source of INPUT2	
Response	Acceptable	"000_%1" [CR]
	%1	"VIDEO" ----- in Video mode "YPBPR" ----- in Y,Pb/Cb,Pr/Cr mode "ANALOG" ----- in RGB mode
	Unacceptable	"?" [CR]

9.7.5 CR_SRCINP3 Command

Command	"CR_SRCINP3" [CR]	
Details	Get Source of INPUT3	
Response	Acceptable	"000_%1" [CR]
	%1	"VIDEO" ----- in Video mode "S-VIDEO" ----- in S-video mode "YPBPR" ----- in Y,Pb/Cb,Pr/Cr mode
	Unacceptable	"?" [CR]

9.7.6 CR_SYSTEM Command

Command	"CR_SYSTEM" [CR]	
Details	Get selected System	
Response	Acceptable	"000_%1" [CR]
	%1	Input is PC Analog "VGA1" ----- indicates VGA1 is selected "VGA2" ----- indicates VGA2 is selected : : "XGA1" ----- indicates XGA1 is selected : "WXGA3" ----- indicates WXGA3 is selected "1080i" ----- indicates 1080i is selected

		<p>“1030I” ----- indicates 1035i is selected “720p” ----- indicates 720p is selected “575p” ----- indicates 575p is selected “480p” ----- indicates 480p is selected “575I” ----- indicates 575i is selected “480I” ----- indicates 480i is selected “1080PSF/24” ----- indicates 1080psf/24 is selected “1080PSF/25” ----- indicates 1080psf/25 is selected “1080PSF/30” ----- indicates 1080psf/30 is selected “MODE1” ----- indicates Mode1 is selected : : “MODE10” ----- indicates Mode10 is selected “EXT11” ----- indicates EXT11 is selected : : “EXT60” ----- indicates EXT60 is selected * Error Code “101” [CR] is returned for no signal</p>
	Input is PC-Digital/ AV-HDCP	<p>“D-XGA1” ----- indicates D-XGA1 is selected : “D-WXGA3” ----- indicates D-WXGA3 is selected “D-1080I” ----- indicates D-1080i is selected “D-1035I” ----- indicates D-1035i is selected “D-720P” ----- indicates D-720p is selected “D-575P” ----- indicates D-575p is selected “D-480P” ----- indicates D-480p is selected “D-575I” ----- indicates D-575i is selected “D-480I” ----- indicates D-480i is selected “D-1080PSF/24” ----- indicates D-1080psf/24 is selected “D-1080PSF/25” ----- indicates D-1080psf/25 is selected “D-1080PSF/30” ----- indicates D-1080psf/30 is selected * Error Code “101” [CR] is returned for no signal</p>
	Input is Y,Pb/Cb,Pr/Cr	<p>“AUTO” ----- indicates Auto is selected “1080I” ----- indicates 1080i is selected “1035I” ----- indicates 1035i is selected “720P” ----- indicates 720p is selected “575P” ----- indicates 575p is selected “480P” ----- indicates 480p is selected “575I” ----- indicates 575i is selected “480I” ----- indicates 480i is selected * Selected System is returned, whether or not signal is coming.</p>
	Input is Video or S-video	<p>“AUTO” ----- indicates Auto is selected “NTSC” ----- indicates NTSC is selected “NTSC443” ----- indicates NTSC4.43 is selected “PAL” ----- indicates PAL is selected “SECAM” ----- indicates SECAM is selected “PAL-M” ----- indicates PAL-M is selected “PAL-N” ----- indicates PAL-N is selected * Selected System is returned, whether or not signal is coming.</p>
	Unacceptable	“Error Code” [CR]

9.7.7 CR_SYSLIST Command

Command	“CR_SYSLIST” [CR]	
Details	Get possible systems for System list	
Response	Acceptable	“000_%1_%2_---_%x” [CR]
	%1	<p>Error Code “101” is returned for no signal. Otherwise following values are returned according to Source.</p> <p>When input is PC-Analog; “XGA1” ----- XGA1 is in the list</p>

		<p>“AUTO” ----- Auto is in the list “1080I” ----- 1080i is in the list “1080PSF/24” ----- 1080psf/24 is in the list “1080PSF/25” ----- 1080psf/25 is in the list “1080PSF/30” ----- 1080psf/30 is in the list</p> <p>* Mode1-10 shall not be returned.</p> <p>When input is PC-digital or AV-HDCP;</p> <p>“D-XGA” ----- D-XGA is in the list “D-720p” ----- D720p is in the list “D-1080PSF/24” ----- D1080psf/24 is in the list “D-1080PSF/25” ----- D1080psf/25 is in the list “D-1080PSF/30” ----- D1080psf/30 is in the list</p> <p>When input is Y,Pb/Cb,Pr/Cr; All possible systems in Menu, including Auto, are returned; “AUTO” ----- Auto is in the list “1080I” ----- 1080i is in the list “1035I” ----- 1035i is in the list : : “575I” ----- 575i is in the list “480I” ----- 480i is in the list</p> <p>When input is Video or S-video; All possible systems in Menu, including Auto, are returned; “AUTO” ----- Auto is in the list “PAL” ----- PAL is in the list “SECAM” ----- SECAM is in the list : : “PAL-N” ----- PAL-N is in the list</p>
	Unacceptable	“Error Code” [CR]

9.7.8 CR_MODELIST Command

Command	“CR_MODELIST” [CR]	
Details	Get possible modes for Mode list	
Response	Acceptable	“000_%1_%2_---_%x” [CR]
	%1	<p>Error Code “101” is returned except for PC-Analog and for no signal with PC-Analog Possible modes in Mode1-10 are returned when PC-Analog signal is coming.</p> <p>“MODE1” “MODE2” “MODE3” : : “MODE8” “MODE9” “MODE10”</p>
	Unacceptable	“Error Code” [CR]

9.8 Screen Status Read Command

9.8.1 CR_SCREEN Command

Command	"CR_SCREEN" [CR]	
Details	Get selected screen image size	
Response	Acceptable	"000_%1" [CR]
	%1	"NORMAL" ----- Normal mode "FULLL" ----- Full mode "ZOOM" ----- Zoom mode "TRUE" ----- True mode "NATURAL" ----- Natural wide mode
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input). "?" [CR] --- When unknown command is received

9.8.2 CR_KYSTNMODE Command

Command	"CR_KYSTNMODE" [CR]	
Details	Get setting status of Keystone Store Mode	
Response	Acceptable	"000_%1" [CR]
	%1	"STR" ----- Store mode is "Store" "RST" ----- Store mode is "Reset"
	Unacceptable	"?" [CR] ----- When unknown command is received

9.9 Lamp Status Read Command

9.9.1 CR_LAMPREPL Command

Command	"CR_LAMPREPL" [CR]	
Details	Get information of Lamp Replacement time	
Response	Acceptable	"000_%1" [CR]
	%1	"1Y" ----- indicates over lamp replacement time "1N" ----- indicates under lamp replacement time
	Unacceptable	"?" [CR]

9.9.2 CR_LAMPH Command

Command	"CR_LAMPH" [CR]	
Details	Get Lamp running time (in hours) * return actual lamp running time	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 - 99999"
	Unacceptable	"Error Code" [CR]

9.9.3 CR_LAMPCORRESPH Command

Command	"CR_LAMPCORRESPH" [CR]	
Details	Get Lamp running time (in hours) *return lamp running time multiplied by a coefficient (not actual running time) Note; In PLV-75, same value as CR_LAMPH is returned since the coefficient is 1.	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 - 99999"

	Unacceptable	"Error Code" [CR]
--	--------------	-------------------

9.9.4 CR_LAMPMODE Command

Command	"CR_LAMPMODE" [CR]	
Details	Get setting status of Lamp mode Note; In PLV-75, "?" is returned for this command since lamp mode switching function is not implimented.	
Response	Acceptable	"000_%1" [CR]
	%1	"NORMAL" ----- Lamp mode is Normal status "ECO" ----- Lamp mode is Eco status "AUTO" ----- Lamp mode is Auto status
	Unacceptable	"?" [CR]

9.9.5 CR_LAMPSTS Command

Command	"CR_LAMPSTS" [CR]	
Details	Get Lamp status	
Response	Acceptable	"000_%1" [CR]
	%1	"1" ----- Lamp is ON "10" ----- Lamp is OFF "1X" ----- Lamp Failure
	Unacceptable	"Error Code" [CR]

9.9.6 CR_PROJH Command

Command	"CR_PROJH" [CR]	
Details	Get total running time of Projector (in hours)	
Response	Acceptable	"000_%1" [CR]
	%1	"0000000 – 9999999"
	Unacceptable	"?" [CR]

9.9.7 CR_HMLAMP Command

Command	"CR_HMLAMP" [CR]	
Details	Get total lamp number	
Response	Acceptable	"000_%1" [CR]
	%1	"001"
	Unacceptable	"Error Code" [CR]

9.10 Sound Status Read Command

9.10.1 CR_VOLUME Command

Command	"CR_VOLUME "[CR]	
Details	Get volume value by user control	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

9.10.2 CR_MUTE Command

Command	"CR_MUTE" [CR]	
Details	Get setting status of sound mute function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Set Sound Mute ON "OFF" ----- Cancel Sound Mute
	Unacceptable	"?" [CR]

9.11 Setting Status Read Command

9.11.1 CR_BACKGND Command

Command	"CR_BACKGND" [CR]	
Details	Get setting status of Screen for no signal	
Response	Acceptable	"000_%1" [CR]
	%1	"BLUE" ----- Set Blue Back "MY LOGO" ----- Set My Logo "BLACK" ----- Set Black Back
	Unacceptable	"Error Code" [CR]

9.11.2 CR_DISP Command

Command	"CR_DISP" [CR]	
Details	Get setting status of Display	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Display is ON "CNTDWN OFF" ----- Count down is OFF "OFF" ----- Display is OFF
	Unacceptable	"?" [CR]

9.11.3 CR_LOGO Command

Command	"CR_LOGO" [CR]	
Details	Get setting status of Logo	
Response	Acceptable	"000_%1" [CR]
	%1	"DFLT" ----- Default Logo is enabled "MY LOGO" ----- My Logo is enabled "OFF" ----- Logo is disabled
	Unacceptable	"?" [CR]

9.11.4 CR_LOGOLOCK Command

Command	"CR_LOGOLOCK" [CR]	
Details	Get setting status of Logo Lock function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Logo Lock is ON "OFF" ----- Logo Lock is OFF
	Unacceptable	"Error Code" [CR]

9.11.5 CR_CEIL Command

Command	"CR_CEIL" [CR]	
Details	Get setting status of Ceiling function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Ceiling projection is enabled "OFF" ----- Ceiling projection is disabled
	Unacceptable	"Error Code" [CR]

9.11.6 CF_REAR Command

Command	"CF_REAR" [CR]	
Details	Get setting status of Rear function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Rear projection is enabled "OFF" ----- Rear projection is disabled
	Unacceptable	"Error Code" [CR]

9.11.7 CF_RCODE Command

Command	"CF_RCODE" [CR]	
Details	Get selected Remote Control Code	
Response	Acceptable	"000_%1" [CR]
	%1	"001" ----- Code 1 is selected "002" ----- Code 2 is selected "003" ----- Code 3 is selected "004" ----- Code 4 is selected "005" ----- Code 5 is selected "006" ----- Code 6 is selected "007" ----- Code 7 is selected "008" ----- Code 8 is selected
	Unacceptable	"?" [CR]

9.11.8 CR_LANG Command

Command	"CR_LANG" [CR]	
Details	Get selected language	
Response	Acceptable	"000_%1" [CR]
	%1	"ENG" ----- English is selected "DEU" ----- German is selected "FRA" ----- French is selected "ITA" ----- Italian is selected "ESP" ----- Spanish is selected "POR" ----- Portuguese is selected "NED" ----- Dutch is selected "SVE" ----- Swedish is selected "JPN" ----- Japanese is selected "CHI" ----- Chinese is selected "KOR" ----- Korean is selected "RUS" ----- Russian is selected
	Unacceptable	"?" [CR]

9.11.9 CR_ON-STA Command

Command	"CR_ON-STA" [CR]	
Details	Get settin status of Power ON Start	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Power ON Start is ON "OFF" ----- Power ON Start is OFF
	Unacceptable	"?" [CR]

9.11.10 CR_P-MANE Command

Command	"CR_P-MANE" [CR]	
Details	Get setting status of Power management	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Power Management is disabled "READY" ----- Power Management is set to Ready "SHUTDOWN" ----- Power Management is set to Shut Down mode
	Unacceptable	"?" [CR]

9.11.11 CR_P-MANETIME Command

Command	"CR_P-MAETIME" [CR]	
Details	Get setting time for starting Power Management function	
Response	Acceptable	"000_%1" [CR]
	%1	"001 – 030" ----- 1 to 30 minutes
	Unacceptable	"?" [CR]

9.11.12 CR_FANSPEED Command

Command	"CR_FANSPEED" [CR]	
Details	Get Speed selected in Fan Contorol functon	
Response	Acceptable	"000_%1" [CR]
	%1	"MAX" ----- Max speed is seleted "NOR" ----- Normal speed is selected
	Unacceptable	"?" [CR]

9.11.13 CR_KEYDIS Command

Command	"CR_KEYDIS" [CR]	
Details	Get status of RC/KEY (valid or invalid)	
Response	Acceptable	"000_%1" [CR]
	%1	"NONE" ----- RC and KEY, both are valid "RC" ----- RC is invalid "KEY" ----- KEY is invalid
	Unacceptable	"?" [CR]

9.11.14 CR_SECURITY Command

Command	"CR_SECURITY" [CR]	
Details	Get Security ON/OFF setting status on the menu.	

Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- PJ/USB is locked "OFF" ----- PJ/USB is freed
	Unacceptable	"Error Code" [CR]

9.11.15 CR_PJLOCKNOW Command

Command	"CR_PJLOCKNOW" [CR]	
Details	Get actual status of PJ lock	
Response	Acceptable	"000_%1" [CR]
	%1	"LOCK" ----- PJ is locked PJ lock is set ON1/ON2 on the menu and PJ PIN code is not entered, therefore PJ is actually locked. "FREE" ----- PJ is unlocked (either A or B) A. PJ lock is set OFF on the menu B. PJ lock is set ON1/ON2 on the menu, but PJ Lock is canceled because PJ PIN code is entered.
	Unacceptable	"Error Code" [CR]

9.11.16 CR_PJLOCKMENU Command

Command	"CR_PJLOCKMENU" [CR]	
Details	Get PJ Lock ON/OFF setting status on the menu	
Response	Acceptable	"000_%1" [CR]
	%1	"ON1" ----- PJ Lock ON 1 is set on the menu "ON2" ----- PJ Lock ON 2 is set on the menu "OFF" ----- PJ Lock OFF is set on the menu
	Unacceptable	"Error Code" [CR]

9.12 Other Status Read Commands

9.12.1 CR_STATUS Command

COMMAND	"CR_STATUS" [CR]	
Detail	Get operating status of Projector Same as "CR0" in basic command except error code follows it.	
Response	Acceptable	"000_%1" [CR]
	%1	"00" = Power ON "80" = Standby "40" = Countdown in process "20" = Cooling Down in process "10" = Power Failure "28" = Cooling Down in process due to abnormal temperature "88" = Standby after Cooling Down due to abnormal temperature "02" = Invalid RS-232C Command "24" = Power Save/Cooling Down in process "04" = Power Save "21" = Cooling Down in process after turedned to Off due to lamp failure "81" = Standby after Cooling Down due to lamp failure
	Unacceptable	"Error Code" [CR]

9.12.2 CR_PRESSURE Command

Command	"CR_PRESSURE" [CR]	
Details	Flowing is the formula to work out Air Pressure from the given value ("Vn" represents the value): $\text{Air Pressure (hPa)} = (5 \cdot Vn / 1024 - 0.204) / 0.00459 + 150$ Obtains accuracy of +/- 2%	
Response	Acceptable	"000_%1" [CR]
	%1	"0000" – "1023"
	Unacceptable	"Error Code" [CR]

9.12.3 CR_SIGNAL Command

Command	"CR_SIGNAL" [CR]	
Details	Get status if there is signal or not	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- There is signal "OFF" ----- There is no signal
	Unacceptable	"?" [CR]

9.12.4 CR_VMUTE Command

Command	"CR_VMUTE" [CR]	
Details	Get setting status of No Show function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Shutter function is enabled "OFF" ----- Shutter function is disabled
	Unacceptable	"?" [CR]

9.12.5 CR_FREEZE Command

Command	"CR_FREEZE" [CR]	
Details	Get setting status of Freeze function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Freeze function is enabled "OFF" ----- Freeze function is disabled
	Unacceptable	"?" [CR]

9.12.6 CR_ALLPFAIL Command

Command	"CR_ALLPFAIL" [CR]	
Details	Get all the information on Power Failure Return all the responses of "CR_PFAIL01" – "PFAIL50" at once Therefore it consists of 1200 (24 bytes x 50) bytes totally	
Response	Acceptable	"000_%1_%2" [CR] "000_%3_%4" [CR] "000_%5_%6" [CR] : : : "000_%97_%98" [CR] "000_%99_%100" [CR] (Send all 50 blocks above at one time)

LC-W3 Expand Serial Command Functional Specifications

	%1 - %100	%1, %3, ...%99 (Odd number) ----- Item name of Power Failure (16-byte fixed length) %2, %4, ...%100 (Even number) ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.7 CR_HMPFAIL Command

Command	"CR_HMPFAIL" [CR]	
Details	Get total number of detectable Power Failure	
Response	Acceptable	"000_%1" [CR]
	%1	"000 - 050"
	Unacceptable	"Error Code" [CR]

9.12.8 CR_PFAIL01 Command

Command	"CR_PFAIL01" [CR]	
Details	Get item name and status of Power Failure No.1	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.9 CR_PFAIL02 Command

Command	"CR_PFAIL02" [CR]	
Details	Get the item name and status of Power Failure No.2	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.10 CR_PFAIL03 Command

Command	"CR_PFAIL03" [CR]	
Details	Get the item name and status of Power Failure No.3	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.11 CR_PFAIL04 Command

Command	"CR_PFAIL04" [CR]	
---------	-------------------	--

LC-W3 Expand Serial Command Functional Specifications

Details	Get the item name and status of Power Failure No.4	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.12 CR_PFAIL05 Command

Command	"CR_PFAIL05" [CR]	
Details	Get the item name and status of Power Failure No.5	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.13 CR_PFAIL06 Command

Command	"CR_PFAIL06" [CR]	
Details	Get the item name and status of Power Failure No.6	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.14 CR_PFAIL07 Command

Command	"CR_PFAIL07" [CR]	
Details	Get the item name and status of Power Failure No.7	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.15 CR_PFAIL08 Command

Command	"CR_PFAIL08" [CR]	
Details	Get the item name and status of Power Failure No.8	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.16 CR_PFAIL09 Command

Command	"CR_PFAIL09" [CR]	
Details	Get the item name and status of Power Failure No.9	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.17 CR_PFAIL10 Command

Command	"CR_PFAIL10" [CR]	
Details	Get the item name and status of Power Failure No.10	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.18 CR_PFAIL11 Command

Command	"CR_PFAIL11" [CR]	
Details	Get the item name and status of Power Failure No.11	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.19 CR_PFAIL12 Command

Command	"CR_PFAIL12" [CR]	
Details	Get the item name and status of Power Failure No.12	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.20 CR_PFAIL13 Command

Command	"CR_PFAIL13" [CR]	
Details	Get the item name and status of Power Failure No.13	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"

	Unacceptable	"Error Code" [CR]
--	--------------	-------------------

9.12.21 CR_PFAIL14 Command

Command	"CR_PFAIL14" [CR]	
Details	Get the item name and status of Power Failure No.14	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.22 CR_PFAIL15Command

Command	"CR_PFAIL15" [CR]	
Details	Get the item name and status of Power Failure No.15	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.23 CR_PFAIL16 Command

Command	"CR_PFAIL16" [CR]	
Details	Get the item name and status of Power Failure No.16	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.24 CR_PFAIL17 Command

Command	"CR_PFAIL17" [CR]	
Details	Get the item name and status of Power Failure No.17	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.25 CR_PFAIL18 Command

Command	"CR_PFAIL18" [CR]	
Details	Get the item name and status of Power Failure No.18	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length)

		%2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.26 CR_PFAIL19 Command

Command	"CR_PFAIL19" [CR]	
Details	Get the item name and status of Power Failure No.19	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.27 CR_PFAIL20 Command

Command	"CR_PFAIL20" [CR]	
Details	Get the item name and status of Power Failure No.20	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.28 CR_PFAIL21 Command

Command	"CR_PFAIL21" [CR]	
Details	Get the item name and status of Power Failure No.21	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.29 CR_PFAIL22 Command

Command	"CR_PFAIL22" [CR]	
Details	Get the item name and status of Power Failure No.22	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.30 CR_PFAIL23 Command

Command	"CR_PFAIL23" [CR]	
---------	-------------------	--

LC-W3 Expand Serial Command Functional Specifications

Details	Get the item name and status of Power Failure No.23	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.31 CR_PFAIL24 Command

Command	"CR_PFAIL24" [CR]	
Details	Get the item name and status of Power Failure No.24	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.32 CR_PFAIL25 Command

Command	"CR_PFAIL25" [CR]	
Details	Get the item name and status of Power Failure No.25	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.33 CR_PFAIL26 Command

Command	"CR_PFAIL26" [CR]	
Details	Get the item name and status of Power Failure No.26	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.34 CR_PFAIL27 Command

Command	"CR_PFAIL27" [CR]	
Details	Get the item name and status of Power Failure No.27	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.35 CR_PFAIL28 Command

Command	"CR_PFAIL28" [CR]	
Details	Get the item name and status of Power Failure No.28	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.36 CR_PFAIL29 Command

Command	"CR_PFAIL29" [CR]	
Details	Get the item name and status of Power Failure No.29	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.37 CR_PFAIL30 Command

Command	"CR_PFAIL30" [CR]	
Details	Get the item name and status of Power Failure No.30	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.38 CR_PFAIL31 Command

Command	"CR_PFAIL31" [CR]	
Details	Get the item name and status of Power Failure No.31	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.39 CR_PFAIL32 Command

Command	"CR_PFAIL32" [CR]	
Details	Get the item name and status of Power Failure No.32	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"

	Unacceptable	"Error Code" [CR]
--	--------------	-------------------

9.12.40 CR_PFAIL33 Command

Command	"CR_PFAIL33" [CR]	
Details	Get the item name and status of Power Failure No.33	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.41 CR_PFAIL34 Command

Command	"CR_PFAIL34" [CR]	
Details	Get the item name and status of Power Failure No.34	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.42 CR_PFAIL35 Command

Command	"CR_PFAIL35" [CR]	
Details	Get the item name and status of Power Failure No.35	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.43 CR_PFAIL36 Command

Command	"CR_PFAIL36" [CR]	
Details	Get the item name and status of Power Failure No.36	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.44 CR_PFAIL37 Command

Command	"CR_PFAIL37" [CR]	
Details	Get the item name and status of Power Failure No.37	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length)

		%2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.45 CR_PFAIL38 Command

Command	"CR_PFAIL38" [CR]	
Details	Get the item name and status of Power Failure No.38	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.46 CR_PFAIL39 Command

Command	"CR_PFAIL39" [CR]	
Details	Get the item name and status of Power Failure No.39	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.47 CR_PFAIL40 Command

Command	"CR_PFAIL40" [CR]	
Details	Get the item name and status of Power Failure No.40	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.48 CR_PFAIL41 Command

Command	"CR_PFAIL41" [CR]	
Details	Get the item name and status of Power Failure No.41	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.49 CR_PFAIL42 Command

Command	"CR_PFAIL42" [CR]	
---------	-------------------	--

LC-W3 Expand Serial Command Functional Specifications

Details	Get the item name and status of Power Failure No.42	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.50 CR_PFAIL43 Command

Command	"CR_PFAIL43" [CR]	
Details	Get the item name and status of Power Failure No.43	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.51 CR_PFAIL44 Command

Command	"CR_PFAIL44" [CR]	
Details	Get the item name and status of Power Failure No.44	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.52 CR_PFAIL45 Command

Command	"CR_PFAIL45" [CR]	
Details	Get the item name and status of Power Failure No.45	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.53 CR_PFAIL46 Command

Command	"CR_PFAIL46" [CR]	
Details	Get the item name and status of Power Failure No.46	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.54 CR_PFAIL47 Command

Command	"CR_PFAIL47" [CR]	
Details	Get the item name and status of Power Failure No.47	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.55 CR_PFAIL48 Command

Command	"CR_PFAIL48" [CR]	
Details	Get the item name and status of Power Failure No.48	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.56 CR_PFAIL49 Command

Command	"CR_PFAIL49" [CR]	
Details	Get the item name and status of Power Failure No.49	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.57 CR_PFAIL50 Command

Command	"CR_PFAIL50" [CR]	
Details	Get the item name and status of Power Failure No.50	
Response	Acceptable	"000_%1_%2" [CR]
	%1	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

9.12.58 CR_TEMPFAIL Command

Command	"CR_TEMPFAIL" [CR]	
Details	Get the temperature inside a projector when abnormal temperature occurs. It is possible to get the temperatures all at once with several sensors installed.	
Response	Acceptable	"000_%1_%2_%3_%4" [CR]
	%1, %2, %3	%1 ----- Sensor 1 temp. (External temp.) %2 ----- Sensor 2 temp. (Internal temp.1) %3 ----- Sensor 3 temp. (Internal temp.2)

		<p>%1, %2 are fixed six characters There is one space between %1 and %2 There is one space between %2 and %3 There is one space between %3 and %4</p> <p>(Ex.) “_31.5F” “_” indicates a space. When the temperature goes under 0, the first character is “-”, not a space, as in “-05.5F”.</p> <p>With more than one temperature sensors installed, projector returns responses in a row.</p> <p>(Ex.1) “_31.5F _35.2S _38.0W ” [CR] The first data indicates sensor 1 data, then one space, and sensor 2 data. Last character in each data indicates the sensor’s status. “F” ----- Exceeding critical temp. (abnormal temp.) “W” ----- Approaching critical temp. (Warning temp.) “S” ----- Sensor temp. is safe (Safe temp.) “N” ----- Sensor detects no critical temp. “E” ----- Unable to return the temp. data</p> <p>The example 1 shows that sensor 1 indicates 31.5 degrees and the temperature is abnormal, sensor 2 indicates 35.2 degrees and the temperature is safe, sensor 3 indicates 38.0 degrees and the temperature is approaching critical state.</p> <p>When the temperature is safe, all data is represented as “_00.0S”. When the projector is reset, “□00.0S” is set, and every time abnormal temperature occurs, it renews the data and returns it. In short, it only returns the renewed data of the latest abnormal temperature and the previous data is deleted.</p>
	Unacceptable	“?” [CR]

9.12.59 CR_TEMP Command

Command	“CR_TEMP” [CR]	
Details	Get the current temperature information inside a projector. It is possible to get the temperatures all at once with several sensors installed.	
Response	Acceptable	“000_%1_%2_%3” [CR]
	%1, %2, %3	<p>%1 ----- Sensor 1 temp. (External temp.) %2 ----- Sensor 2 temp. (Internal temp.1) %3 ----- Sensor 3 temp. (Internal temp.2)</p> <p>%1, %2 are fixed 6 characters There is one space between %1 and %2 There is one space between %2 and %3 (Ex.) “_31.5F” “_” indicates a space. When the temperature goes under 0, the first character is “-”, not a space, as in “-05.5F”.</p> <p>Last character in each data indicates the sensor’s status. “F” ----- Exceeding critical temp. (abnormal temp.) “W” ----- Approaching critical temp. (Warning temp.) “S” ----- Sensor temp. is safe (Safe temp.) “N” ----- Sensor detects no critical temp. “E” ----- Unable to return the temp. data</p> <p>With more than one temperature sensors installed, projector returns responses in a row.</p> <p>(Ex.1) “_31.5F _35.2S _38.0W ” [CR]</p>

LC-W3 Expand Serial Command Functional Specifications

		<p>The first data indicates sensor 1 data, then one space, and sensor 2 data.</p> <p>The example 1 shows that sensor 1 indicates 31.5 degrees and the temperature is abnormal, sensor 2 indicates 35.2 degrees and the temperature is safe, sensor 3 indicates 38.0 degrees and the temperature is approaching critical state.</p> <p>When it cannot return the temperature data due to hardware error, the last character is "E" as in "_00.0E"</p> <p>.</p> <p>It might happen for some projectors that the temperature continues to go up to abnormal status as long as lamp ballasts are hot. Therefore when in StandBy mode or for several tens of seconds after Power is ON, any treatment of Power Failure is not processed. In that case, the temperature data is represented as "_ - - - - N".</p>
	Unacceptable	"Error Code" [CR]