

### LC-X85 IR Command List

- Transmission format of LCD projector operation key  
: NEC Format (single command / command pipelining mode)
- Transmission format of PC mouse operation button (mouse cursor button) / L / R key  
: SMK Mouse Code Format (Includes 3 bit of ID)
- Custom Code + Custom Code  
: 8 patterns as below  
33h+00h(Default; code1), 33h+11h(code2), 33h+22h(code3), 33h+33h(code4),  
33h+44h(code5), 33h+55h(code6), 33h+66h(code7), 33h+77h(code8)

Key No.	Data Code (HEX)	Function
S1	*1	L-CLICK □ Back-side Click Trigger Key
S2	11	ON
S3	10	STAND-BY
S4	05	INPUT
S5	89	AUTO PC
S6	16	INFO
S7	1C	MENU
S8	82	SCREEN
S9	8B	SHUTTER
S10	8C	CURSOR UP
S11	1E	CURSOR LEFT / VOLUME -
S12	1D	CURSOR RIGHT / VOLUME +
S13	8D	CURSOR DOWN / MUTE
S14	38	INPUT 1
S15	84	POINTER
S16	*1	R-CLICK
S17	39	INPUT2 (Number 1)
S18	88	D.ZOOM (Number 2)
S19	8A	P-TIMER (Number 3)
S20	06	INPUT3 (Number 4)
S21	5B	KEYSTONE (Number 5)
S22	43	FREEZE (Number 6)
S23	47	ZOOM + (Number 7)
S24	4A	FOCUS + (Number 8)
S25	40	LENS SHIFT (Number 9)
S26	46	ZOOM -
S27	4B	FOCUS - (Number 0)
S28	1A	FILTER
S29	OF / *1	SELECT / Mouse Cursor button

\*1... Transmit code for Mouse