



EXPAND SERIAL COMMAND  
FUNCTIONAL SPECIFICATIONS

LC-XG400L

SANYO Electric Co., Ltd  
Personal Mobile Group  
DI Company  
Projector Division

**Contents**

1. Overview ..... 8

2. Serial Interface Specification ..... 8

    2.1 Transfer Specification ..... 8

    2.2 Connection ..... 8

3. Notes for communication ..... 9

4. Notation Convention ..... 9

5. Functional Execution Command Table ..... 10

    5.1 Image Command Table ..... 10

    5.2 PC Adjust Control Command Table ..... 10

    5.3 Input Control Command Table ..... 10

    5.4 Screen Control Command Table ..... 10

    5.5 Lamp Command Table ..... 11

    5.6 Sound Command Table ..... 11

    5.7 Setting Command Table ..... 11

    5.8 Other Command Table ..... 11

6. Status Read Command Table ..... 12

    6.1 Image Status Read Command Table ..... 12

    6.2 PC Adjust Status Read Command Table ..... 12

    6.3 Video Status Read Command Table ..... 12

    6.4 Input Status Read Command Table ..... 12

    6.5 Screen Status Read Command Table ..... 13

    6.6 Lamp Status Read Command Table ..... 13

    6.7 Sound Status Read Command Table ..... 13

    6.8 Setting Status Read Command Table ..... 13

    6.9 Other Status Read Command Table ..... 14

7. Error Code Table ..... 14

8. Functional Execution Command ..... 15

    8.1 Format ..... 15

    8.2 Transfer Example ..... 15

    8.3 Operation Requirements ..... 15

    8.4 Image Command ..... 16

        8.4.1 CF\_ BRIGHT Command ..... 16

        8.4.2 CF\_ CONT Command ..... 16

        8.4.3 CF\_ COLOR Command ..... 16

        8.4.4 CF\_ TINT Command ..... 16

        8.4.5 CF\_ SHARP Command ..... 17

        8.4.6 CF\_ GAMMA Command ..... 17

        8.4.7 CF\_ WBAL- Command ..... 17

        8.4.8 CF\_ COLTEMP Command ..... 17

8.4.9 CF_NZRED Command .....	18
8.4.10 CF_PROGV Command .....	18
8.4.11 CF_IMAGE Command .....	18
8.4.12 CF_IMAGEADJ Command .....	19
8.5 PC Adjust Control Command .....	20
8.5.1 CF_FSYNC Command .....	20
8.5.2 CF_TDOTS Command .....	20
8.5.3 CF_CLPPHASE Command .....	20
8.5.4 CF_H-POS Command .....	20
8.5.5 CF_V-POS Command .....	21
8.5.6 CF_DDOTS Command .....	21
8.5.7 CF_DLINE Command .....	21
8.5.8 CF_SETPCADJ Command .....	22
8.5.9 CF_ORGMODE Command .....	22
8.5.10 CF_PCSTORE Command .....	23
8.5.11 CF_PCMODEFREE Command .....	23
8.6 Input Control Command .....	24
8.6.1 CF_INPUT Command .....	24
8.6.2 CF_SOURCE Command .....	24
8.6.3 CF_INPUT 1 Command .....	25
8.6.4 CF_INPUT 2 Command .....	25
8.6.5 CF_INPUT 3 Command .....	25
8.6.6 CF_INPUT 4 Command .....	25
8.6.7 CF_SYSTEM Command .....	26
8.7 Screen Control Command .....	27
8.7.1 CF_SCREEN Command .....	27
8.7.2 CF_DZCENT Command .....	27
8.7.3 CF_KEYSTONE Command .....	27
8.7.4 CF_KYSTNMODE Command .....	28
8.7.5 CF_VSCALE Command .....	28
8.7.6 CF_VPOS Command .....	28
8.7.7 CF_HSCALE Command .....	29
8.7.8 CF_HPOS Command .....	29
8.8 Lamp Command .....	30
8.8.1 CF_LAMPH Command .....	30
8.8.2 CF_LAMPMODE Command .....	30
8.9 Sound Command .....	30
8.9.1 CF_VOLUME Command .....	30
8.9.2 CF_MUTE Command .....	30
8.10 Setting Command .....	31

8.10.1 CF_BACKGND Command .....	31
8.10.2 CF_DISP Command .....	31
8.10.3 CF_LOGO Command .....	31
8.10.4 CF_CEIL Command .....	32
8.10.5 CF_REAR Command .....	32
8.10.6 CF_RCODE Command .....	32
8.10.7 CF_RCSENSOR Command .....	32
8.10.8 CF_LANG Command .....	33
8.10.9 CF_ON-STA Command .....	33
8.10.10 CF_P-MANE Command .....	33
8.10.11 CF_P-MANETIME Command .....	34
8.10.12 CF_FANSPEED Command .....	34
8.10.13 CF_HIGHLAND Command .....	34
8.10.14 CF_SLANT Command .....	34
8.10.15 CF_KEYDIS Command .....	35
8.10.16 CF_FDEFAULT Command .....	35
8.10.17 CF_PJPINCODE Command .....	35
8.10.18 CF_TESTPAT Command .....	35
8.10.19 CF_FILH Command .....	36
8.10.20 CF_FILTIMER Command .....	36
8.10.21 CF_POINTER Command .....	36
8.11 Other Commands .....	36
8.11.1 CF_KEYEMU Command .....	36
8.11.2 CF_MENU Command .....	37
8.11.3 CF_POWER Command .....	37
8.11.4 CF_FREEZE Command .....	37
9. Status Read Command .....	38
9.1 Format .....	38
9.2 Transfer Example .....	38
9.3 Operation Condition .....	38
9.4 Image Status Read Command .....	38
9.4.1 CR_BRIGHT Command .....	38
9.4.2 CR_CONT Command .....	38
9.4.3 CR_COLOR Command .....	38
9.4.4 CR_TINT Command .....	39
9.4.5 CR_SHARP Command .....	39
9.4.6 CR_GAMMA Command .....	39
9.4.7 CR_WBAL-R Command .....	39
9.4.8 CR_WBAL-G Command .....	39
9.4.9 CR_WBAL-B Command .....	39

9.4.10 CR_COLTEMP Command.....	40
9.4.11 CR_NZRED Command.....	40
9.4.12 CR_PROGV Command.....	40
9.4.13 CR_IMAGE Command.....	40
9.4.14 CR_IMGGMD Command.....	41
9.5 PC Adjust Status Read Command.....	41
9.5.1 CR_FSYNC Command.....	41
9.5.2 CR_TDOTS Command.....	41
9.5.3 CR_CLPPHASE Command.....	41
9.5.4 CR_H-POS Command.....	42
9.5.5 CR_V-POS Command.....	42
9.5.6 CR_DDOTS Command.....	42
9.5.7 CR_DLINE Command.....	42
9.5.8 CR_ORGMODE Command.....	43
9.5.9 CR_PCSTORE Command.....	43
9.5.10 CR_SETPCADJ Command.....	44
9.6 Video Status Read Command.....	45
9.6.1 CR_SERSYS Command.....	45
9.7 Input Read Command.....	45
9.7.1 CR_INPUT Command.....	45
9.7.2 CR_SOURCE Command.....	45
9.7.3 CR_SRCINP1 Command.....	46
9.7.4 CR_SRCINP2 Command.....	46
9.7.5 CR_SRCINP3 Command.....	46
9.7.6 CR_SRCINP4 Command.....	46
9.7.7 CR_SYSTEM Command.....	47
9.7.8 CR_SYSLIST Command.....	48
9.7.9 CR_MODELIST Command.....	48
9.7.10 CR_HMSLOT Command.....	49
9.7.11 CR_NMSLOT1 Command.....	49
9.7.12 CR_NMSLOT2 Command.....	49
9.7.13 CR_NMSLOT3 Command.....	49
9.7.14 CR_NMSLOT4 Command.....	49
9.7.15 CR_IDSLOT1 Command.....	50
9.7.16 CR_IDSLOT2 Command.....	50
9.7.17 CR_IDSLOT3 Command.....	50
9.7.18 CR_IDSLOT4 Command.....	50
9.8 Screen Status Read Command.....	51
9.8.1 CR_SCREEN Command.....	51
9.8.2 CR_KYSTNMODE Command.....	51

9.8.3 CR_VSCALE Command .....	51
9.8.4 CR_VPOS Command .....	51
9.8.5 CR_HSCALE Command .....	51
9.8.6 CR_HPOS Command .....	52
9.9 Lamp Status Read Command .....	52
9.9.1 CR_LAMPREPL Command .....	52
9.9.2 CR_LAMPH Command .....	52
9.9.3 CR_LAMPCORRESPH Command .....	52
9.9.4 CR_LAMPMODE Command .....	53
9.9.5 CR_LAMPSTS Command .....	53
9.9.6 CR_PROJH Command .....	53
9.9.7 CR_HMLAMP Command .....	53
9.10 Sound Status Read Command .....	54
9.10.1 CR_VOLUME Command .....	54
9.10.2 CR_MUTE Command .....	54
9.11 Setting Status Read Command .....	54
9.11.1 CR_BACKGND Command .....	54
9.11.2 CR_DISP Command .....	54
9.11.3 CR_LOGO Command .....	54
9.11.4 CR_LOGOLOCK Command .....	55
9.11.5 CR_CEIL Command .....	55
9.11.6 CR_REAR Command .....	55
9.11.7 CR_RCODE Command .....	55
9.11.8 CR_RCSENSOR Command .....	55
9.11.9 CR_RTYPE Command .....	56
9.11.10 CR_LANG Command .....	56
9.11.11 CR_ON-STA Command .....	56
9.11.12 CR_P-MANE Command .....	56
9.11.13 CR_P-MANETIME Command .....	57
9.11.14 CR_FANSPEED Command .....	57
9.11.15 CR_HIGHLAND Command .....	57
9.11.16 CR_SLANT Command .....	57
9.11.17 CR_KEYDIS Command .....	57
9.11.18 CR_SECURITY Command .....	58
9.11.19 CR_PJLOCKNOW Command .....	58
9.11.20 CR_PJLOCKMENU Command .....	58
9.11.21 CR_TESTPAT Command .....	58
9.11.22 CR_FILH Command .....	59
9.11.23 CR_FILCOND Command .....	59
9.11.24 CR_FILREPL Command .....	59

9.11.25 CR_FILTERTIMER Command.....	59
9.11.26 CR_POINTER Command.....	59
9.12 Other Status Read Commands.....	60
9.12.1 CR_STATUS Command.....	60
9.12.2 CR_SIGNAL Command.....	60
9.12.3 CR_VMUTE Command.....	60
9.12.4 CR_FREEZE Command.....	60
9.12.5 CR_ALLPFAIL Command.....	61
9.12.6 CR_HMPFAIL Command.....	61
9.12.7 CR_PFAIL01 Command.....	61
9.12.8 CR_PFAIL02 Command.....	61
9.12.9 CR_PFAIL03 Command.....	62
9.12.10 CR_PFAIL04 Command.....	62
9.12.11 CR_PFAIL05 Command.....	62
9.12.12 CR_PFAIL06 Command.....	62
9.12.13 CR_PFAIL07 Command.....	63
9.12.14 CR_PFAIL08 Command.....	63
9.12.15 CR_PFAIL09 Command.....	63
9.12.16 CR_PFAIL10 Command.....	63
9.12.17 CR_PFAIL11 Command.....	63
9.12.18 CR_PFAIL12 Command.....	64
9.12.19 CR_TEMPFAIL Command.....	64
9.12.20 CR_TEMP Command.....	65

## 1. Overview

- This Functional Specification defines communication with PJ-Net organizer for LC-XG400L.
- Supporting Firmware Ver. 1.x of the projector.
- Commands in this document are to communicate with PJ-Net organizer, but most commands are used to control a projector remotely from a computer with RS-232C. Therefore commands in this document are defined as Expand Serial Commands.

## 2. Serial Interface Specification

### 2.1 Transfer Specification


Item	Specification
Synchronous System	Asynchronous
Transmission Speed	9600 / 19200
Data Length	8 bits
Parity	N/A
Stop Bit	1
Flow Control	N/A

Note1) Transmission Speed: initial setting value is 19200

Note2) Transmission Speed can be changed in Service mode.

### 2.2 Connection

 Dedicated serial cables that come with the projector must be used for the connection between a computer and a projector.

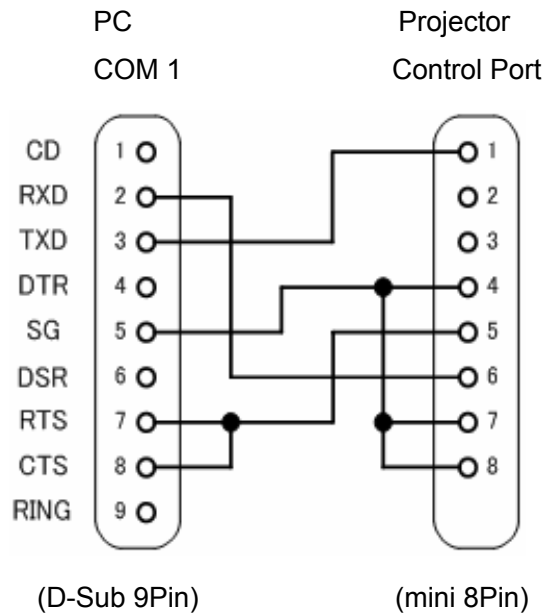




### 3. Notes for communication

- Expand Serial Command is defined as a single command per line that starts with "C" and ends with carriage return (0x0D).
- There are two types of commands; Functional Execution Commands and Status Read Command.
  - Example of Functional Execution Command: "CF\_BRIGHT\_032" [CR]
  - Example of Status Read Command: "CR\_BRIGHT" [CR]

Note) "\_" means a space

- When it takes more than a second to receive a single command, it is not executed.  
When it takes more than a second to receive carriage return (0x0D) since the reception of the first data "C", it clears the information of the receive buffer.
- When the command pipelining, allow the interval time of no less than 100ms after receiving return value.

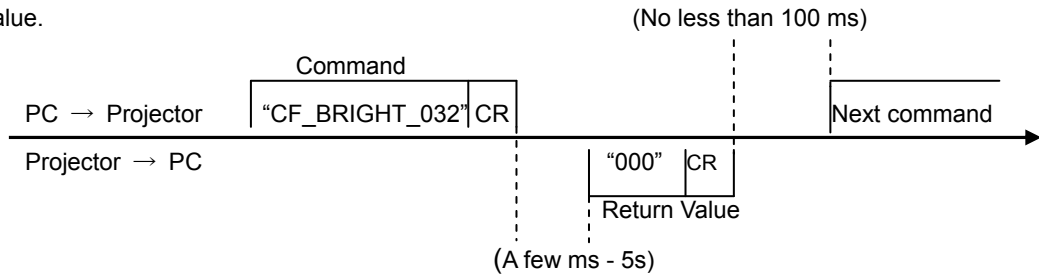

- Do not send another command before the reception of the return value; the operation by the command is not ensured.  
However this is not the case when no response is returned after more than 5 seconds.
- It takes about 5 seconds for internal initialization after plugging in AC power. During this time, it cannot process commands. Do not issue any command.

### 4. Notation Convention

- Data from a controller to a projector is represented as COMMAND, and data from a projector to a controller in response to the incoming command is represented as RESPONSE.
- [CR]: Carriage Return Code  
Carriage Return code is added to the end of the command.  
Response is also followed by carriage return code.
- \_ : Space Code  
Space Code is represented as (\_).
- %1: Parameter included in Command  
When there are more than one parameter, they are defined as %2, %3...
- %%: Error Code returned from a projector  
Acceptable: "000".  
Unacceptable: See [7. Error Code Table].

## 5. Functional Execution Command Table

### 5.1 Image Command Table

Execute command	Item
<b>CF_BRIGHT_%1 [CR]</b>	Set value of Brightness
<b>CF_CONT_%1 [CR]</b>	Set value of Contrast
<b>CF_COLOR_%1 [CR]</b>	Set value of Color
<b>CF_TINT_%1 [CR]</b>	Set value of Tint
<b>CF_SHARP_%1 [CR]</b>	Set value of Sharpness
<b>CF_GAMMA_%1 [CR]</b>	Set value of Gamma
<b>CF_WBAL-R_%1 [CR]</b>	Set Red value of White Balance
<b>CF_WBAL-G_%1 [CR]</b>	Set Green value of White Balance
<b>CF_WBAL-B_%1 [CR]</b>	Set Blue value of White Balance
<b>CF_COLTEMP_%1 [CR]</b>	Set level of Color Temperature
<b>CF_NZRED_%1 [CR]</b>	Set ON/OFF of Noise reduction
<b>CF_PROGV_%1 [CR]</b>	Set mode of Progressive scan
<b>CF_IMAGE_%1 [CR]</b>	Set Image mode
<b>CF_IMAGEADJ_%1 [CR]</b>	Set Store/Reset of values in Image Adjustment

### 5.2 PC Adjust Control Command Table

Execute command	Item
<b>CF_FSYNC_%1 [CR]</b>	Set value of Fine Sync
<b>CF_TDOTS_%1 [CR]</b>	Set value of Total Dots
<b>CF_CLPPHASE_%1 [CR]</b>	Set value of Clamp Phase
<b>CF_H-POS_%1 [CR]</b>	Set value of Horizontal Position
<b>CF_V-POS_%1 [CR]</b>	Set value of Vertical Position
<b>CF_DDOTS_%1 [CR]</b>	Set value of Display Dots
<b>CF_DLINE_%1 [CR]</b>	Set value of Display Line
<b>CF_SETPCADJ_%1 [CR]</b>	Apply values set in PC Adjust menu to screen image
<b>CF_ORGMODE_%1 [CR]</b>	Specify the original signal for PC mode
<b>CF_PCSTORE_%1 [CR]</b>	Store current setting values in PC Adjust menu to Mode %1
<b>CF_PCMODEFREE_%1 [CR]</b>	Delete the values registered in Mode %1 and return it to Free status.

### 5.3 Input Control Command Table

Execute command	Item
<b>CF_INPUT_%1 [CR]</b>	Select Input
<b>CF_SOURCE_%1 [CR]</b>	Select Source of selected Input
<b>CF_INPUT1_%1 [CR]</b>	Select Input1 and also set input source to %1
<b>CF_INPUT2_%1 [CR]</b>	Select Input2 and also set input source to %1
<b>CF_INPUT3_%1 [CR]</b>	Select Input3 and also set input source to %1
<b>CF_INPUT4_%1 [CR]</b>	Select Input4 and also set input source to %1
<b>CF_SYSTEM_%1 [CR]</b>	Select System of currently selected Input

### 5.4 Screen Control Command Table

Execute command	Item
<b>CF_SCREEN_%1 [CR]</b>	Select Screen size
<b>CF_DZCENT_%1 [CR]</b>	Cancel Digital Zoom mode
<b>CF_KEystone_%1 [CR]</b>	Set Keystone correction
<b>CF_KYSTNMODE_%1 [CR]</b>	Set Keystone store mode
<b>CF_VSCALE_%1[CR]</b>	Set V Scale
<b>CF_VPOS_%1[CR]</b>	Set V Position
<b>CF_HSCALE_%1[CR]</b>	Set H Scale

<b>CF_HPOS_%1[CR]</b>	Set H Position
-----------------------	----------------

**5.5 Lamp Command Table**

Execute command	Item
<b>CF_LAMPH_%1 [CR]</b>	Reset total running time for each lamp
<b>CF_LAMPMODE_%1 [CR]</b>	Select Lamp mode

**5.6 Sound Command Table**

Execute command	Item
<b>CF_VOLUME_%1[CR]</b>	Set Volume value
<b>CF_MUTE_%1[CR]</b>	Control ON/OFF of Sound Mute

**5.7 Setting Command Table**

Execute command	Item
<b>CF_BACKGND_%1[CR]</b>	Select screen for no signal
<b>CF_DISP_%1 [CR]</b>	Set ON/OFF of On Screen Display
<b>CF_LOGO_%1 [CR]</b>	Set PIN code and mode for Logo
<b>CF_CEIL_%1 [CR]</b>	Set ON/OFF of Ceiling
<b>CF_REAR_%1 [CR]</b>	Set ON/OFF of Rear
<b>CF_RCODE_%1 [CR]</b>	Select Remote Control Code
<b>CF_RCSENSOR_%1 [CR]</b>	Select location of infrared remote receiver of remote control
<b>CF_LANG_%1 [CR]</b>	Select language for OSD
<b>CF_ON-STA_%1 [CR]</b>	Set ON/OFF of Power ON Start
<b>CF_P-MANE_%1 [CR]</b>	Set Power Management function
<b>CF_P-MANETIME_%1 [CR]</b>	Set time of Power Management
<b>CF_FANSPEED_%1 [CR]</b>	Set level of Fan Speed
<b>CF_HIGHLAND_%1[CR]</b>	Set Highland mode
<b>CF_SLANT_%1[CR]</b>	Set slant of projector installed
<b>CF_KEYDIS_%1 [CR]</b>	Prohibit RC/KEY control
<b>CF_FDEFAULT_%1 [CR]</b>	Reset to Factory Default settings
<b>CF_PJPINCODE_%1[CR]</b>	Enter PJ PIN code to cancel PJ lock
<b>CF_TESTPAT_%1[CR]</b>	Set Test pattern display function
<b>CF_FILH_%1[CR]</b>	Reset Filter used time
<b>CF_FILTIMER_%1[CR]</b>	Set time to display Filter cleaning / replacement warning on screen
<b>CF_POINTER_%1[CR]</b>	Set Pointer function

**5.8 Other Command Table**

Execute command	Item
<b>CF_KEYEMU_%1 [CR]</b>	The same operation as RC/Control Key
<b>CF_MENU_%1 [CR]</b>	Set ON/OFF of Menu
<b>CF_POWER_%1 [CR]</b>	Set ON/OFF of Power
<b>CF_FREEZE_%1 [CR]</b>	Set ON/OFF of Freeze

## 6. Status Read Command Table

### 6.1 Image Status Read Command Table

Status Read command	Item
<b>CR_BRIGHT [CR]</b>	Get value of Brightness
<b>CR_CONT [CR]</b>	Get value of Contrast
<b>CR_COLOR [CR]</b>	Get value of Color
<b>CR_TINT [CR]</b>	Get value of Tint
<b>CR_SHARP [CR]</b>	Get value of Sharpness
<b>CR_GAMMA [CR]</b>	Get value of Gamma
<b>CR_WBAL-R [CR]</b>	Get Red value of White Balance
<b>CR_WBAL-G [CR]</b>	Get Green value of White Balance
<b>CR_WBAL-B [CR]</b>	Get Blue value of White Balance
<b>CR_COLTEMP [CR]</b>	Get value of Color temperature
<b>CR_NZRED [CR]</b>	Get setting status of Noise reduction
<b>CR_PROGV [CR]</b>	Get setting status of Progressive scan
<b>CR_IMAGE [CR]</b>	Get Selected Image status
<b>CR_IMGGMD [CR]</b>	Get setting value of Image Gamma

### 6.2 PC Adjust Status Read Command Table

Status Read command	Item
<b>CR_FSYNC [CR]</b>	Get setting value of Fine Sync
<b>CR_TDOTS [CR]</b>	Get setting value of Total Dots
<b>CR_CLPPHASE [CR]</b>	Get setting value of Clamp phase
<b>CR_H-POS [CR]</b>	Get setting value of Horizontal Position
<b>CR_V-POS [CR]</b>	Get setting value of Vertical Position
<b>CR_DDOTS [CR]</b>	Get setting value of Display Dots
<b>CR_DLINE [CR]</b>	Get setting value of Display Line
<b>CR_ORGMODE [CR]</b>	Get the original signal for PC-Adjusted mode
<b>CR_PCSTORE [CR]</b>	Get status Free/ Stored for PC Adj. mode 1-10
<b>CR_SETPCADJ [CR]</b>	Get currently displayed PC signal in system

### 6.3 Video Status Read Command Table

Status Read command	Item
<b>CR_SERSYS [CR]</b>	Get currently selected signal. In Auto mode, it returns a result by Auto detection.

### 6.4 Input Status Read Command Table

Status Read command	Item
<b>CR_INPUT [CR]</b>	Get selected Input
<b>CR_SOURCE [CR]</b>	Get selected Source
<b>CR_SRCINP1 [CR]</b>	Get selected source for Input 1
<b>CR_SRCINP2 [CR]</b>	Get selected source for Input 2
<b>CR_SRCINP3 [CR]</b>	Get selected source for Input 3
<b>CR_SRCINP4 [CR]</b>	Get selected source for Input 4
<b>CR_SYSTEM [CR]</b>	Get selected system in current Input mode
<b>CR_SYSLIST [CR]</b>	Get possible system list
<b>CR_MODELIST [CR]</b>	Get possible mode list
<b>CR_HMSLOT [CR]</b>	Get total number of Inputs
<b>CR_NMSLOT1 [CR]</b>	Get terminal information of Input1.
<b>CR_NMSLOT2 [CR]</b>	Get terminal information of Input2.
<b>CR_NMSLOT3 [CR]</b>	Get terminal information of Input3
<b>CR_NMSLOT4 [CR]</b>	Get terminal information of Input4.
<b>CR_IDSLOT1 [CR]</b>	Get ID information of Input1
<b>CR_IDSLOT2 [CR]</b>	Get ID information of Input2

<b>CR_IDSLOT3[CR]</b>	Get ID information of Input3
<b>CR_IDSLOT4[CR]</b>	Get ID information of Input4

**6.5 Screen Status Read Command Table**

Status Read command	Item
<b>CR_SCREEN [CR]</b>	Get selected screen size
<b>CR_KYSTNMODE[CR]</b>	Get selected Keystone store mode
<b>CR_VSCALE[CR]</b>	Get setting status of V Scale
<b>CR_VPOS[CR]</b>	Get setting status of V Position
<b>CR_HSCALE[CR]</b>	Get setting status of H Scale
<b>CR_HPOS[CR]</b>	Get setting status of H Position

**6.6 Lamp Status Read Command Table**

Status Read command	Item
<b>CR_LAMPREPL [CR]</b>	Get information of Lamp replacement time
<b>CR_LAMPH [CR]</b>	Get information of actual Lamp running time
<b>CR_LAMPCORRESPH [CR]</b>	Get lamp running time multiplied by a coefficient
<b>CR_LAMPMODE [CR]</b>	Get selected Lamp mode
<b>CR_PROJH [CR]</b>	Get total running time of projector
<b>CR_HMLAMP</b>	Get the number of lamps

**6.7 Sound Status Read Command Table**

Status Read command	Item
<b>CR_VOLUME[CR]</b>	Get Volume value
<b>CR_MUTE[CR]</b>	Get Sound Mute setting status

**6.8 Setting Status Read Command Table**

Status Read command	Item
<b>CR_BACKGND [CR]</b>	Get setting status of Screen for no signal
<b>CR_DISP [CR]</b>	Get setting status of Display
<b>CR_LOGO [CR]</b>	Get setting status of Logo
<b>CR_LOGOLOCK[CR]</b>	Get setting status of Logo Lock
<b>CR_CEIL [CR]</b>	Get setting status of Ceiling
<b>CR_REAR [CR]</b>	Get setting status of Rear
<b>CR_RCODE [CR]</b>	Get selected Remote Control code
<b>CR_RCSENSOR [CR]</b>	Get setting status of Remote Control Sensor (Enable/Disable)
<b>CR_RTYPE [CR]</b>	Get supported Remote Control type (IR/RF)
<b>CR_LANG [CR]</b>	Get selected language
<b>CR_ON-STA [CR]</b>	Get ON Start setting status
<b>CR_P-MANE [CR]</b>	Get Power management setting status
<b>CR_P-MANETIME [CR]</b>	Get setting time for Power Management
<b>CR_FANSPEED [CR]</b>	Get selected Fan Control Speed
<b>CR_HIGHLAND[CR]</b>	Get selected status of Highland mode
<b>CR_SLANT[CR]</b>	Get setting status of Slant
<b>CR_KEYDIS [CR]</b>	Get RC/KEY prohibited status
<b>CR_SECURITY [CR]</b>	Get setting status of Security
<b>CR_PJLOCKNOW [CR]</b>	Get setting status of current PJ Lock
<b>CR_PJLOCKMENU [CR]</b>	Get PJ Lock setting status on the menu
<b>CR_TESTPAT[CR]</b>	Get setting status of Test pattern
<b>CR_FILH[CR]</b>	Get Filter used time
<b>CR_FILCOND[CR]</b>	Get status of filter clog
<b>CR_FILREPL[CR]</b>	Get status of Filter cleaning / replacement time
<b>CR_FILTIMER[CR]</b>	Get time to display Filter cleaning / replacement warning on screen

<b>CR_POINTER[CR]</b>	Get setting status of Pointer
-----------------------	-------------------------------

**6.9 Other Status Read Command Table**

Status Read command	Item
<b>CR_STATUS [CR]</b>	Get operating status of Projector
<b>CR_SIGNAL [CR]</b>	Get status of signal existence
<b>CR_VMUTE [CR]</b>	Get setting status of No show
<b>CR_FREEZE [CR]</b>	Get setting status of Freeze
<b>CR_ALLPFAIL [CR]</b>	Get all information of Power Failure
<b>CR_HMPFAIL [CR]</b>	Get total number of detectable Power Failure
<b>CR_PFAIL01 [CR]</b>	Get Item name of Power Failure No.01 and error status
<b>CR_PFAIL02 [CR]</b>	Get Item name of Power Failure No.02 and error status
<b>CR_PFAIL12 [CR]</b>	Get Item name of Power Failure No.12 and error status
<b>CR_TEMPFAIL [CR]</b>	Get temperature when sensors approach abnormal temperature
<b>CR_TEMP [CR]</b>	Get current temperature

**7. Error Code Table**

Error Code	Contents
?	-When the received data cannot be decoded -Parameter designation error (wrong digit number, including invalid value, etc.)
000	Normal reception (This is "Not" error)
102	Directly specified value or values are out of range. (Not reflected)
103	Command mismatched to Hardware (the command is for Optional function which is not implemented)
201	Incremented or decremented value or values are beyond upper or lower limits.
301	Not executable due to screen capturing in process. Prompting reissue of the command after a while.
402	Not executable due to PIN code in operation. Prompting reissue of the command after a while.
101	Error not applicable to above errors

## 8. Functional Execution Command

### 8.1 Format

1) PC issues commands in format as below:

**Pattern1:** "CF\_ COMMAND" [CR]

**Pattern2:** "CF\_ COMMAND\_" %1 [CR]

CF\_: Header

COMMAND: String

%1: Parameter (String)

\_ : Space (To separate COMMAND and Parameter)

2) The projector decodes the received command and when it is ready to receive the next command, it returns the response.

**"000" [CR]:** (0x06,0x0D) When receiving Functional Execution Command

**"nnn" [CR]:** Except "000", when it is unable to execute command for any specific reason.

See Error Code Table for details

3) When the received data cannot be decoded, the projector returns "?" [CR]

### 8.2 Transfer Example

When setting projector's total dots to 1344 by Expand Serial command

PC → PJ: "CF\_TDOTS\_1344" [CR]

PC ← PJ: "000" [CR] ----- Acceptable

### 8.3 Operation Requirements

Functional Execution Command is limited when the projector status is as below.

However, Status Read Command is still effective under following conditions.

Projector Status	Available Functional Execution Command
Standby Mode	C00: Power ON CF POWER ON
Countdown in process	C00: Power ON CF POWER ON (Terminates Count Down)
Cooling Down in process	N/A
Cooling Down due to Abnormal Temperature	N/A
Abnormal Temperature	N/A
Power Failure (60 seconds after Power failure occurred)	N/A
Power-Save Cooling Down in process	N/A
Cooling Down in process due to Shutter management	N/A
Power Save in process	C00: Power ON C01: Power OFF CF POWER ON CF POWER OFF

Note) When projector receives another command in the above status, it returns error code which shows the status. And when projector receives Functional execution commands, OSD menu disappears except pop-up menu.

## 8.4 Image Command

### 8.4.1 CF\_BRIGHT Command

Command	"CF_BRIGHT_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Brightness "UP"----- Increment setting value of Brightness by 1 "DN"----- Decrement setting value of Brightness by 1	
Details	Set user controlled value of Brightness (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.4.2 CF\_CONT Command

Command	"CF_CONT_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Contrast "UP"----- Increment setting value of Contrast by 1 "DN"----- Decrement setting value of Contrast by 1	
Details	Set user controlled value of Contrast (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.4.3 CF\_COLOR Command

Command	"CF_COLOR_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Color "UP"----- Increment setting value of Color by 1 "DN"----- Decrement setting value of Color by 1	
Details	Set user controlled value of Color (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.4.4 CF\_TINT Command

Command	"CF_TINT_%1" [CR]	
%1	"000-063"----- Directly specify setting value of Tint "UP"----- Increment setting value of Tint by 1 "DN"----- Decrement setting value of Tint by 1	
Details	Set Tint value (Available only in the normal Power ON status) The value set by this command will not be saved to the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]



### 8.4.5 CF\_SHARP Command

Command	"CF_SHARP_%1" [CR]	
%1	"000-015"----- Directly specify setting value of Sharpness "UP"----- Increment setting value of Sharpness by 1 "DN"----- Decrement setting value of Sharpness by 1	
Details	Set user controlled value of Sharpness (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.4.6 CF\_GAMMA Command

Command	"CF_GAMMA_%1" [CR]	
%1	"000-015"----- Directly specify setting value of Gamma "UP"----- Increment setting value of Gamma by 1 "DN"----- Decrement setting value of Gamma by 1	
Details	Set user controlled value of Gamma (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.4.7 CF\_WBAL- Command

Command	"CF_WBAL-%1_%2" [CR]	
%1	"R" ----- RED "G" ----- GREEN "B" ----- BLUE	
%2	"000-063"----- Directly specify value of Color selected in %1 of White Balance. "UP"----- Increment setting value of Color specified in %1 of White Balance by 1. "DN"----- Decrement setting value of Color specified in %1 of White Balance by 1.	
Details	Set value of Color specified in %1 of White Balance (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code"[CR]

### 8.4.8 CF\_COLTEMP Command

Command	"CF_COLTEMP_%1" [CR]	
%1	"000" ----- Xlow "001" ----- Low "002" ----- Mid "003" ----- High	

Details	Set Color Temperature (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.4.9 CF\_NZRED Command

Command	"CF_NZRED_%1" [CR]	
%1	"OFF" ----- Cancel Noise Reduction "L1" ----- Set Noise Reduction L1 "L2" ----- Set Noise Reduction L2 "UP" ----- Toggle between ON and OFF. (OFF→L1→L2→OFF...) "DN" ----- Toggle between ON and OFF. (OFF→L2→L1→OFF...)	
Details	Set Noise Reduction level (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It returns to the original setting in Suspend mode as well.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.4.10 CF\_PROGV Command

Command	"CF_PROGV_%1" [CR]	
%1	"OFF" ----- Set Progressive scan to OFF. "L1" ----- Set Progressive scan to L1(for movie image). "L2" ----- Set Progressive scan to L2(for still image). "FILM" ----- Set Progressive scan to Film. "UP" ----- Switch setting forward direction (OFF→L1→L2→FILM→OFF) "DN" ----- Switch setting backward direction (OFF→FILM→L2→L1→OFF)	
Details	Set Progressive scan mode. (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.4.11 CF\_IMAGE Command

Command	"CF_IMAGE_%1" [CR]	
%1	"DYNAMIC" ---Dynamic (Fixed value to enable projection with a sharp, powerful picture tone) "STAND" -----Standard(Image adjust value is set to factory default for Still Image) "REAL"----- Real (Fixed value to display graphic image with natural tone) "CINEMA"----- Cinema (Fixed value to focus on tone reproduction for movie) "CUSTOM1" ----- Image1 (the value adjusted and stored by user) "CUSTOM2" ----- Image2 (the value adjusted and stored by user) "CUSTOM3" ----- Image3 (the value adjusted and stored by user) "CUSTOM4" ----- Image4 (the value adjusted and stored by user)	
Details	Select Image Mode (Available only in the normal Power ON status) Parameter "CUSTOM1" to "CUSTOM4" corresponds to "Image1" to "Image4" displayed in projector OSD menu on selecting Image. The value set by this command is stored in EEPROM so that the setting can remain effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]

	Unacceptable	"Error Code" [CR]
--	--------------	-------------------

#### 8.4.12 CF\_IMAGEADJ Command

Command	"CF_IMAGEADJ_%1"[CR]	
%1	"RST"----- Reset adjusted value for the Image "STR1"---- Store current adjusted value to Image 1 "STR2"---- Store current adjusted value to Image 2 "STR3"---- Store current adjusted value to Image 3 "STR4"---- Store current adjusted value to Image 4	
Details	Reset or Store adjusted value for Image. (Available only in the normal Power ON status) "STR1"- "STR4" corresponds to "Image1"- "Image4" displayed in projector OSD menu on selecting "Store" for adjusted value of Image. The setting value set in "Image1" to "Image4" is stored and can be retrieved when turning on the projector again after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 8.5 PC Adjust Control Command

### 8.5.1 CF\_FSYNC Command

Command	"CF_FSYNC_%1" [CR]	
%1	"0000-0031" ----- Directly specify setting value of Fine Sync "UP" ----- Increment setting value of Fine Sync by 1 "DN" ----- Decrement setting value of Fine Sync by 1	
Details	Set value of Fine Sync in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

### 8.5.2 CF\_TDOTS Command

Command	"CF_TDOTS_%1" [CR]	
%1	"mmmm - nnnn" ----- Directly specify setting value of Total Dots "mmmm" indicates minimum value, which is current (Display area H + Position H) value "nnnn" indicates maximum value, which is <i>less than 140 MHz in Dot Clocks</i> "UP" ----- Increment setting value of Total Dots by 1 "DN" ----- Decrement setting value of Total Dots by 1	
Details	Set value of Total Dots in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

### 8.5.3 CF\_CLPPHASE Command

Command	"CF_CLPPHASE_%1"[CR]	
%1	"mmmm~nnnn" --- Directly select Clamp phase setting value "mmmm" shows minimum value, the fixed-value "0001". "nnnn" shows maximum value, it depends on input signal. "UP" ----- Current Clamp setting value + 1 "DN" ----- Current Clamp setting value - 1	
Details	Set Clamp value of PC signal (Available only in the normal Power ON status) The value set by this command will not be saved to the projector. Therefore, when ALL is OFF, the value returns to the original setting (The value is held in Suspend mode)	
Response	Acceptable	"000"[CR]
	Unacceptable	"101"[CR] ---- When input is Video signal / No signal

### 8.5.4 CF\_H-POS Command

Command	"CF_H-POS_%1" [CR]	
%1	"0000-nnnn" ----- Directly specify setting value of Horizontal Position "nnnn" indicates maximum value, which is current value of (Total dots - Display area H) "UP" ----- Increment setting value of Horizontal Position by 1 "DN" ----- Decrement setting value of Horizontal Position by 1	
Details	Set value of Horizontal Position in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory.	

	Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

### 8.5.5 CF\_V-POS Command

Command	"CF_V-POS_%1" [CR]	
%1	<p>"0000-nnnn" ----- Directly specify setting value of Vertical Position                      "nnnn" indicates maximum value, which is current (Total Line – Display Area V) value                      "UP" ----- Increment setting value of Vertical Position by 1                      "DN" ----- Decrement setting value of Vertical Position by 1</p>	
Details	<p>Set Vertical Position value (Available only in the normal Power ON status)                      The value set by this command will not be stored in the projector's memory.                      Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] ---- When input is Video signal / No signal

### 8.5.6 CF\_DDOTS Command

Command	"CF_DDOTS_%1" [CR]	
%1	<p>"0100-nnnn" ----- Directly specify setting value of Display Dots                      "nnnn" indicates maximum value, which is current value of (Total Dots - Position H).                      In this projector, the value should be "even number" and if "odd number" is specified, it adds 1 to make the value even number.                      "UP" ----- Increment setting value of Display Dots by 2                      "DN" ----- Decrement setting value of Display Dots by 2</p>	
Details	<p>Set setting value of Display Dots in PC signal (Available only in the normal Power ON status)                      The value set by this command will not be stored in the projector's memory.                      Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

### 8.5.7 CF\_DLINE Command

Command	"CF_DLINE_%1" [CR]	
%1	<p>"0100-nnnn" ----- Directly specify setting value of Display Line                      "nnnn" indicates maximum value, which is current value of (Total Line - Position V).                      "UP" ----- Increment setting value of Display Line by 1                      "DN" ----- Decrement setting value of Display line by 1</p>	
Details	<p>Set setting value of Display Line in PC signal (Available only in the normal Power ON status)                      The value set by this command will not be stored in the projector's memory.                      Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

### 8.5.8 CF\_SETPCADJ Command

Command	"CF_SETPCADJ_%1" [CR]	
%1	None "EXT11-60"	
Details	<p>1. Apply value set in PC Adjust Menu to projected image. Specifying setting value directly in the following PC Adjust related commands immediately reflects them on projected image, while issuing this command after these commands also triggers the reflection. (Available only in the normal Power ON status)</p> <ul style="list-style-type: none"> <li>• CF_FSYNC</li> <li>• CF_TDOTS</li> <li>• CF_CLAMPFAHSE</li> <li>• CF_H-POS</li> <li>• CF_V-POS</li> <li>• CF_DDOTS</li> <li>• CF_DLINE</li> </ul> <p>2. When "EXT11"~"EXT60" is specified in %1, "Ex Mode" (not like XGA1) is displayed in "SYSTEM" menu.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

### 8.5.9 CF\_ORGMODE Command

Command	"CF_ORGMODE_%1" [CR]	
%1	<p>When input signal is PC Analog;</p> <p>"VGA1" ----- Specify VGA1 "VGA2" ----- Specify VGA2 : : "XGA1" ----- Specify XGA1 : : "WXGA3" ----- Specify WXGA3 "1080i60" ----- Specify 1080i60 "1080i50" ----- Specify 1080i50 "1035i" ----- Specify 10350i "720p60" ----- Specify 720p60 "720p50" ----- Specify 720p50 "575p" ----- Specify 575p "480p" ----- Specify 480p "575i" ----- Specify 575i "480i" ----- Specify 480i "1080P60" ----- Specify 1080p60 "1080P50" ----- Specify 1080p50</p> <p>* When input signal is not PC Analog, error code "101" is returned.</p>	
Details	<p>After "EXT n" is set by PC control command such as CF_FSYNC/CF_TDOTS and CF_SETPCADJ command, specify the signal originated with by issuing this command.</p> <p>This command is used to specify projector internal settings such as whether or not to get PC signal through IP (Available only in the normal Power ON status) Note; To differentiate between 60Hz and 50Hz in 1080i and 720p, "60" or "50" is necessary to add to the parameter in this command.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When Input is other than PC Analog

**8.5.10 CF\_PCSTORE Command**

Command	"CF_PCSTORE_%1" [CR]	
%1	"1" ----- Store current value of PC Adjust to Mode1 "2" ----- Store current value of PC Adjust to Mode2 "3" ----- Store current value of PC Adjust to Mode3 "4" ----- Store current value of PC Adjust to Mode4 "5" ----- Store current value of PC Adjust to Mode5 "6" ----- Store current value of PC Adjust to Mode6 "7" ----- Store current value of PC Adjust to Mode7 "8" ----- Store current value of PC Adjust to Mode8 "9" ----- Store current value of PC Adjust to Mode9 "10" ----- Store current value of PC Adjust to Mode10	
Details	Store current value of PC Adjust (each parameter status such as Total dots) to Mode1-10. This command operates the same way as storing to Mode1-10 in PC Adjust Menu. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

**8.5.11 CF\_PCMODEFREE Command**

Command	"CF_PCMODEFREE_%1" [CR]	
%1	"1" ----- Set Mode1 to Free status "2" ----- Set Mode2 to Free status "3" ----- Set Mode3 to Free status "4" ----- Set Mode4 to Free status "5" ----- Set Mode5 to Free status "6" ----- Set Mode6 to Free status "7" ----- Set Mode7 to Free status "8" ----- Set Mode8 to Free status "9" ----- Set Mode9 to Free status "10" ----- Set Mode10 to Free status	
Details	Delete the data registered in Custom Mode1–10 and returns it to Free status. This command operates the same way as storing to Mode1-10 in PC Adjust Menu. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal / No signal

## 8.6 Input Control Command

### 8.6.1 CF\_INPUT Command

Command	"CF_INPUT_%1" [CR]	
%1	<p>"1"----- Select Input 1 (not switching Source)                  "2"----- Select Input 2 (not switching Source)                  "3"----- Select Input 3 (not switching Source)                  "4"----- Select Input 4 (Network viewer)                  "UP"----- Increment Input No. by 1                  &lt;with PJ-Net attached&gt;Input1→Input2→Input3→Input4→Input1→ - - -                  &lt;with PJ-Net unattached&gt;Input1→Input2→Input3→Input1→ - - -                  "DN"----- Decrement Input No. by 1                  &lt;with PJ-Net attached&gt;Input1→Input2→Input3→Input4→Input1→ - - -                  &lt;with PJ-Net unattached&gt;Input1→Input2→Input3→Input1→ - - -</p>	
Details	<p>Select Input (Available only in the normal Power ON status)                  This command switches only Input No, not Source. For instance, when Input 1 has been selected, receiving the command to select Input 1 does not invoke source-switching operation. That means it operates differently from "INPUT" button of Projector or Remote Control.                  *When selecting Input4 on a projector with PJ-Net unattached, it comes to "103".                  *When selecting Input1 on a projector with PJ-Net attached and power OFF, It comes to "101".</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.6.2 CF\_SOURCE Command

Command	"CF_SOURCE_%1" [CR]	
%1	Input 1	<p>"DIGITAL" ----- Select Digital Input                  "ANALOG" ----- Select Analog Input                  "SCART" ----- Select Scart Input                  "HDCP" ----- Select DVI HDCP Input                  "UP" ----- Select in Analog -&gt; Scart -&gt; DVI -&gt; HDCP -&gt; Analog order                  "DN" ----- Select in Analog -&gt; HDCP -&gt; DVI -&gt; Scart -&gt; Analog order</p>
	Input 2	<p>"VIDEO" ----- Select Composite Video Input                  "YPBPR" ----- Select Y,Pb/Cb,Pr/Cr Input                  "YCBCR" ----- Select Y,Pb/Cb,Pr/Cr Input                  "ANALOG" ----- Select RGB                  "UP" --- Select in Analog -&gt; Video -&gt; Y,Pb/Cb,Pr/Cr -&gt; Analog order                  "DN" --- Select in Analog -&gt; Y,Pb/Cb,Pr/Cr -&gt; Video -&gt; Analog order</p>
	Input 3	<p>"AUTO" ----- Select Composite Video Input / S-Video Input automatically. (S-Video has priority)                  "VIDEO" -----Select Composite Video input                  "S-VIDEO" ----- Select S-Video input                  "UP" ----- Select in Auto -&gt; Video -&gt; S-Video -&gt; Auto order                  "DN" ----- Select in Auto -&gt; S-Video -&gt; Video -&gt; Auto order</p>
	Input 4	<p>"NETWORK", "UP", "DN"                  *Input can not be selected, but above parameter is processed as Acceptable.</p>
Details	<p>Select Source of currently selected Input (Available only in the normal Power ON status)                  When selected input does not include specified %1, error code "101" is returned and it is not executed.                  When Input No is 4 and PJ-Net power is OFF, error code "101" is returned.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]



**8.6.3 CF\_INPUT 1 Command**

Command	"CF_INPUT1_%1" [CR]	
%1	"DIGITAL" ----- Select PC Digital Input "ANALOG" ----- Select PC Analog Input "SCART" ----- Select SCART Input "HDCP" ----- Select DVI HDCP Input	
Details	Select Input 1 as well as Source specified in %1 (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.6.4 CF\_INPUT 2 Command**

Command	"CF_INPUT2_%1" [CR]	
%1	"VIDEO" ----- Select Composite Video Input "YPBPR" ----- Select Y/Pb/Pr Input "ANALOG" ----- Select RGB Input	
Details	Select Input 2 as well as Source specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.6.5 CF\_INPUT 3 Command**

Command	"CF_INPUT3_%1" [CR]	
%1	"AUTO" ----- Select Composite Video Input / S-Video Input automatically. (S-Video has priority) "VIDEO" ----- Select Composite Video Input "S-VIDEO" ----- Select S-Video Input	
Details	Select Input 3 as well as Source specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.6.6 CF\_INPUT 4 Command**

Command	"CF_INPUT4_%1" [CR]	
%1	"NETWORK" ----- Select input from PJ-Net	
Details	Select Input 4 as well as Source specified in %1. (Available only in the normal Power ON status) *With PJ-Net unattached, this command is invalid and error code "103" is returned. *With PJ-Net attached and the power OFF, error code "101" is returned.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

8.6.7 CF\_SYSTEM Command

Command	"CF_SYSTEM_%1" [CR]	
%1	Input is PC Analog	"VGA1" ----- Select VGA1 "VGA2" ----- Select VGA2 : : "XGA1" ----- Select XGA1 : : "WXGA3" ----- Select WXGA3 "1080I" ----- Select 1080i "1035I" ----- Select 1035i "720p" ----- Select 720p "575p" ----- Select 575p "480p" ----- Select 480p "575I" ----- Select 575i "480I" ----- Select 480i "1080P" ----- Select 1080p "MODE1 - 10" ----- Select MODE1 – MODE10 "EXT11 - 60" ----- Select Ex Mode11-60 * Mode1-10 is not returned.
	Input is PC Digital/AV HDCP	"D-XGA1" ----- Select D-XGA1 : : "D-WXGA3" ----- Select D-WXGA3 "D-1080I" ----- Select D-1080i "D-1035I" ----- Select D-1035i "D-720p" ----- Select D-720p "D-575p" ----- Select D-575p "D-480p" ----- Select D-480p "D-1080p" ----- Select D-1080p
	Input is Y,Pb/Cb,Pr/Cr	"AUTO" ----- Select System "Auto" "1080I" ----- Select 1080i "1035I" ----- Select 1035i "720P" ----- Select 720p "575P" ----- Select 575p "480P" ----- Select 480p "575I" ----- Select 575i "480I" ----- Select 480i
	Input is Video / S-Video	"AUTO" ----- Select System "Auto" "NTSC" ----- Select NTSC "NTSC443" ----- Select NTSC4.43 "PAL" ----- Select PAL "SECAM" ----- Select SECAM "PAL-M" ----- Select PAL-M "PAL-N" ----- Select PAL-N
Details	Select System of currently selected Input (Available only in the normal Power ON status) When selected input does not include specified %1, error code "101" [CR] is returned and it is not executed. When Input No is 4, error code "101" [CR] is returned and it is not executed.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 8.7 Screen Control Command

### 8.7.1 CF\_SCREEN Command

Command	"CF_SCREEN_%1" [CR]	
%1	Input is Computer	"NORMAL" ----- Select Normal mode "WIDE" ----- Select Wide mode "TRUE" ----- Select True mode "FULL" ----- Select Full mode "CUSTOM" ----- Select Custom mode "DZOOM_UP" ----- Scale up with Digital zoom "DZOOM_DN" ----- Scale down with Digital zoom "UP" ----- Select screen size with forward swiching in possible range "DN" ----- Select screen size with backward swiching in possible range
	Input is Video	"NORMAL" ----- Select Normal mode "WIDE" ----- Select Wide mode "CUSTOM" ----- Select Custom mode "UP" ----- Select screen size with forward swiching in possible range "DN" ----- Select screen size with backward swiching in possible range
Details	Select screen size (Available only in the normal Power ON status) When selected input does not include specified %1, error code "101" [CR] is returned and it is not executed.Receiving "DZOOM_UP" or "DZOOM_DN" command immediately executes the function.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.7.2 CF\_DZCENT Command

Command	"CF_DZCENT_%1"[CR]	
%1	"CENT" ---- Cancel Digital Zoom (CENT : "CENTER")	
Details	Cancel Digital Zoom (Available only in the normal Power ON status and Input for Computer is selected)	
Response	Acceptable	"000"[CR]
	Unacceptable	"101"[CR] ----- when Input for Video is selected

### 8.7.3 CF\_KEYSTONE Command

Command	"CF_KEYSTONE_%1"[CR]	
%1	"UP" ----- Correct Keystone distortion to reduce upper part of image "FUP" ----- Correct Keystone distortion to reduce upper part largely "DN" ----- Correct Keystone distortion to reduce lower part of image "FDN" ----- Correct Keystone distortion to reduce lower part largely "RST" ----- Set Keystone OFF	
Details	Change Keystone distortion correction (Available only in the normal Power ON status) When reached the limit of the correction level, projector accepts the command but does not execute it. Receiving this command immediately invokes the operation. When trying to set the value beyond available range, error code "201" is returned and the operation is not executed. Example 1: When the correction level of the upper part has reached its upper limit and then the command "UP" is received. Example 2: When the upper part correction allows only another step, and then the command "FUP" is received.	
Response	Acceptable	"000"[CR]

	Unacceptable	"Error Code"[CR]
--	--------------	------------------

**8.7.4 CF\_KYSTNMODE Command**

Command	"CF_KYSTNMODE_%1"[CR]	
%1	"STR" ----- Set Keystone store mode to Store "RST" ----- Set Keystone store mode to Reset	
Details	Set Keystone store mode (Available only in the normal Power ON status)	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

**8.7.5 CF\_VSCALE Command**

Command	"CF_VSCALE_%1" [CR]	
%1	"032" ----- +32 "031" ----- +31 : "002" ----- +2 "001" ----- +1 "000" ----- ±0 " - 01" ----- - 1 " - 02" ----- - 2 : " - 31" ----- - 31 " - 32" ----- - 32 "UP" ----- Increment setting value of Vscale by 1 "DN" ----- Decrement setting value of Vscale by 1	
Details	Set Vscale (Available only in the normal Power ON status) * When selected screen mode is not "Custom", error code "101" [CR] is returned and it is not executed. * Error Code "101" [CR] is returned for no signal.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.7.6 CF\_VPOS Command**

Command	"CF_VPOS_%1" [CR]	
%1	"015" ----- +15 "014" ----- +14 : "002" ----- +2 "001" ----- +1 "000" ----- ±0 " - 01" ----- - 1 " - 02" ----- - 2 : " - 14" ----- - 14 " - 15" ----- - 15 "UP" ----- Increment setting value of Vposition by 1 "DN" ----- Decrement setting value of Vposition by 1	
Details	Set V Position (Available only in the normal Power ON status) * When selected screen mode is not "Custom", error code "101" [CR] is returned and it is not executed. * Error Code "101" [CR] is returned for no signal.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.7.7 CF\_HSCALE Command**

Command	"CF_HSCALE_%1" [CR]	
%1	"032" ----- +32 "031" ----- +31 : "002" ----- +2 "001" ----- +1 "000" ----- ±0 " - 01" ----- - 1 " - 02" ----- - 2 : " - 31" ----- - 31 " - 32" ----- - 32 "UP" ----- Increment setting value of Hscale by 1 "DN" ----- Decrement setting value of Hscale by 1	
Details	Set Hscale (Available only in the normal Power ON status) * When selected screen mode is not "Custom", error code "101" [CR] is returned and it is not executed. * Error Code "101" [CR] is returned for no signal.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.7.8 CF\_HPOS Command**

Command	"CF_HPOS_%1" [CR]	
%1	"015" ----- +15 "014" ----- +14 : "002" ----- +2 "001" ----- +1 "000" ----- ±0 " - 01" ----- - 1 " - 02" ----- - 2 : " - 14" ----- - 14 " - 15" ----- - 15 "UP" ----- Increment setting value of Hposition by 1 "DN" ----- Decrement setting value of Hposition by 1	
Details	Set H Position (Available only in the normal Power ON status) * When selected screen mode is not "Custom", error code "101" [CR] is returned and it is not executed. * Error Code "101" [CR] is returned for no signal.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 8.8 Lamp Command

### 8.8.1 CF\_LAMPH Command

Command	"CF_LAMPH_%1" [CR]	
%1	"RST"	
Details	Reset lamp running time (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.8.2 CF\_LAMPMODE Command

Command	"CF_LAMPMODE_%1" [CR]	
%1	"AUTO1" ----- Set lamp status to Auto1 mode "AUTO2" ----- Set lamp status to Auto2 mode "HIGH" ----- Set lamp status to High mode "NORMAL" ----- Set Lamp status to Normal mode "ECO1" ----- Set Lamp status to Eco1 mode "ECO2" ----- Set Lamp status to Eco2 mode "UP" ----- Select lamp mode forward direction "DN" ----- Select lamp mode backward direction	
Details	Select Lamp mode (Available only in the normal Power ON status) The value set by this command is stored in EEPROM and the setting remains effective after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 8.9 Sound Command

### 8.9.1 CF\_VOLUME Command

Command	"CF_VOLUME_%1"[CR]	
%1	"000-063" ----- Directly select Volume setting value "UP" ----- Current Volume setting value +1 "DN" ----- Current Volume setting value -1	
Details	Control level of volume. (Available only in the normal Power ON status) Set Volume Up/Down the same way as remote control and also directly select Volume setting value. When setting Volume value, the Sound Mute ON status is canceled just like RC operation. The value set by this command is stored in Projector.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

### 8.9.2 CF\_MUTE Command

Command	"CF_MUTE_%1"[CR]	
%1	"ON" ----- Set Sound Mute ON "OFF" ----- Set Sound Mute OFF	
Details	Control Sound Mute ON/OFF (Available only in the normal Power ON status)	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

## 8.10 Setting Command

### 8.10.1 CF\_BACKGND Command

Command	"CF_BACKGND_%1" [CR]	
%1	"BLUE" ----- Select Blue Back "USER" ----- Select User "BLACK" ----- Select Black Back "UP" ----- Switch forward (Blue Back→User→Black Back→Blue Back) "DN" ----- Switch backward (Blue Back→Black Back→User→Blue Back)	
Details	Set Screen status for no signal.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF status. *When %1="USER" is received, error code "101" is returned, in the case of Capture non-practice.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.10.2 CF\_DISP Command

Command	"CF_DISP_%1" [CR]	
%1	"ON" ----- Select Display "CNTDWN OFF" ----- Select Count down Off "OFF" ----- Cancel Display "UP" ----- Switch forward (On → Count down Off → Off → On → ---) "DN" ----- Switch backward (On → Off → Count down Off → On → ---)	
Details	Set Display mode.(Available only in the normal Power ON status) The value set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.10.3 CF\_LOGO Command

Command	"CF_LOGO_%1_%2" [CR]	
%1	"0000 – 9999" ----- Directly set Logo PIN code	
%2	"OFF" -----Cancel Logo display "DFLT" ----- Select Logo of Factory Default "USER" ----- Select User "UP" -----Select functions to choose forward (OFF→DFLT→USER→OFF→ --) "DN" -----Select functions to choose backward(OFF→USER→DFLT→OFF→ --)	
Details	Set Logo mode.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status. Set Logo PIN code in %1. When Logo Lock is enabled: PIN code is matched ----- Command is valid (Acceptable) PIN code is mismatched----- Command is invalid (Error code "102") PIN code is beyond %1 available range ----- Command is invalid (Error code"?") When Logo Lock is disabled: PIN code is within %1 available range ----- Command is valid (Acceptable) PIN code is out of %1 available range ----- Command is invalid (Error code "?") Note: When Logo Lock is enabled, matching Logo PIN code switches Logo but Logo Lock is not cancelled (Lock status is kept). *When %2="USER" is received, error code "101" is returned, in the case of Capture non-practice.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.4 CF\_CEIL Command**

Command	"CF_CEIL_%1" [CR]	
%1	"ON" ----- Set Ceiling to ON. "OFF" ----- Set Ceiling to OFF.	
Details	Set/Cancel Ceiling mode.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.5 CF\_REAR Command**

Command	"CF_REAR_%1" [CR]	
%1	"ON" ----- Set Rear to ON. "OFF" ----- Setl Rear to OFF.	
Details	Set/Cancel Rear mode (Available only in the normal Power ON status) When Rear is ON, projected image is left/right reversed. The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.6 CF\_RCODE Command**

Command	"CF_RCODE_%1" [CR]	
%1	"001" ----- Select Code 1 "002" ----- Select Code 2 "003" ----- Select Code 3 "004" ----- Select Code 4 "005" ----- Select Code 5 "006" ----- Select Code 6 "007" ----- Select Code 7 "008" ----- Select Code 8 "UP" ----- Switch forward (Code1→Code2→Code3 - - - →Code8→Code1) "DN" ----- Switch backward (Code8→Code7→Code6 - - →Code1→Code8)	
Details	Select Code of Remote Control (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.7 CF\_RCSENSOR Command**

Command	"CF_RSSENS_%1" [CR]	
%1	"BOTH" ----- Select both front and back receiver of projector "FRONT" ----- Select only front receiver of projector "BACK" ----- Select only back receiver of projector "UP" ----- Switch forward (BOTH → FRONT → BACK → BOTH) "DN" ----- Switch backward (BACK → FRONT → BOTH → BACK)	
Details	Select location of infrared remote receiver of remote control (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]



**8.10.8 CF\_LANG Command**

Command	"CF_LANG_%1" [CR]	
%1	"ENG" ----- Select ENGLISH "DEU" ----- Select German "FRA" ----- Select French "ITA" ----- Select Italian "ESP" ----- Select Spanish "POR" ----- Select Portuguese "NED" ----- Select Dutch "SVE" ----- Select Swedish "JPN" ----- Select Japanese "CHI" ----- Select Chinese "KOR" ----- Select Korean "RUS" ----- Select Russian	
Details	Set language for OSD (Available only in the normal Power ON status) The language set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.9 CF\_ON-STA Command**

Command	"CF_ON-STA_%1" [CR]	
%1	"ON" ----- Set Power On Start to ON. "OFF" ----- Set Power On Start to OFF. "UP" ----- Toggle between ON and OFF.(On→Off→On → - - -) "DN" ----- Toggle between ON and OFF.(On→Off→On → - - -) *"UP" and "DN" are exactly same operation.	
Details	Set/Cancel Power ON Start (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting value remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.10 CF\_P-MANE Command**

Command	"CF_P-MANE_%1" [CR]	
%1	"OFF" ----- Set Power Management to Off "READY" ----- Set Power Management to Ready "SHUTDOWN" ----- Set Power Management to Shut Down mode "UP" ----- Switch forward (Off→Ready→Shut down→Off) "DN" ----- Switch backward (Off→Shut down→Ready→Off)	
Details	Set/Cancel Power Management (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.11 CF\_P-MANETIME Command**

Command	"CF_P-MANETIME_%1" [CR]	
%1	"01" - "30" ----- Directly specify setting time by the minute "UP" ----- Increment value by 1 (Switched in 01→02→ --- → 30 → 01 order) "DN" ----- Decrement value by 1(Switched in 30→29→ --- → 01 → 30 order)	
Details	Set time of Power Management time (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.12 CF\_FANSPEED Command**

Command	"CF_FANSPEED_%1" [CR]	
%1	"MAX" ----- Select maximum fan speed "NOR" ----- Select normal fan speed	
Details	Switch Fan Control Speed mode.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.13 CF\_HIGHLAND Command**

Command	"CF_HIGHLAND_%1"[CR]	
%1	"ON" ----- Set Highland mode to ON "OFF" ----- Set Highland mode to OFF	
Details	Set/Cancel Highland mode. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

**8.10.14 CF\_SLANT Command**

Command	"CF_HIGHLAND_%1"[CR]	
%1	"OFF" ----- Install a projector without slant "L1" ----- Slant a projector at ? ~ ? degree angle "L2" ----- Slant a projector at ? ~ ? degree angle "UP" ----- Switch forward (Off -> L1 -> L2 -> Off) "DN" ----- Switch backward (Off -> L2 -> L1 -> Off)	
Details	Switch slant of the projector installed. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

**8.10.15 CF\_KEYDIS Command**

Command	"CF_KEYDIS_%1" [CR]	
%1	"NONE" ----- RC & Projector keys are valid (All are valid) "RCFULL" ----- All RC keys are invalid "RCPART" ----- Specific RC keys are invalid "KEYFULL" ----- All projector keys are invalid "KEYPART" ----- Specific projector keys are invalid	
Details	Set a ban on the use of RC keys/ projector keys (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.16 CF\_FDEFAULT Command**

Command	"CF_FDEFAULT_%1" [CR]	
%1	"RST"	
Details	Reset to Factory Default setting (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.17 CF\_PJPINCODE Command**

Command	"CF_PJPINCODE_%1" [CR]	
%1	"0000 – 9999" ----- Directly specify PJ PIN code	
Details	Enter PIN code to cancel PIN code lock (Available only in the normal Power ON status) PIN code can not be changed. (Only PIN code lock is canceled.) *When PIN code Lock is enabled: PIN code is matched ----- Command is valid (Acceptable) PIN code is mismatched ----- Command is invalid (Error code "102") PIN code is beyond %1 available range ----- Command is invalid (Error code "?") When PIN code lock is canceled: PIN code is within %1 range ----- Command is valid (Acceptable) PIN code is out of %1 range ----- Command is invalid (Error code is 102) This command is only valid when "PJ PIN code" dialog is displayed to enter PIN code after Power is ON and Countdown is completed. When PIN code lock is set to "On1", it needs to send this command every time the projector is turned on.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.18 CF\_TESTPAT Command**

Command	"CF_TESTPAT_%1" [CR]	
%1	"COLOR" ----- Display Color bar "GRAD1" ----- Display 16step(white→black) "GRAD2" ----- Display 16step(white←black) "GRAD3" ----- Display 16step(white↓black) "GRAD4" ----- Display 16step(white↑black) "WHITE" ----- Display all white "BALCK" ----- Display all black "CROSS" ----- Display Cross "OFF" ----- Do not show test pattern display "UP" ----- Switch forward "DN" ----- Switch backward	

Details	Execute test pattern display.(Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.19 CF\_FILH Command**

Command	"CF_FILH_%1" [CR]	
%1	"RST" ----- Reset Filter used time	
Details	Reset used time for filter of projector	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.20 CF\_FILTERTIMER Command**

Command	"CF_FILTERTIMER_%1" [CR]	
%1	"0100" ----- Set 100 hours "0200" ----- Set 200 hours "0300" ----- Set 300 hours "OFF" ----- Set Off(Do not warning display)	
Details	Set time to display Filter cleaning / replacement warning on screen	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.10.21 CF\_POINTER Command**

Command	"CF_POINTER_%1_%2"[CR]	
%1	"SPOTLIGHT" ----- Select Spotlight "ARROW" ----- Select Arrow "FINGER" ----- Select Finger "LASER" ----- Select Laser mark	
%2	"MAX" ----- Spotlight Large "MID" ----- Spotlight Medium "MIN" ----- Spotlight Small	
Details	Select Pointer display. (Available only in the normal Power ON status) Note1) %2 is valid only when "SPOTLIGHT" is specified in %1. When "ARROW"/"FINGER"/"LASER" is specified in %1, the command should be "CF_POINTER_%1"[CR]. Note2) When "SPOTLIGHT" is specified in %1, %2 cannot be omitted.	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

**8.11 Other Commands**

**8.11.1 CF\_KEYEMU Command**

Command	"CF_KEYEMU_%1" [CR]	
%1	"RIGHT" ----- Move Pointer rightward in On-Screen Display Menu "LEFT" ----- Move Pointer leftward in On-Screen Display Menu "UP" ----- Move Pointer to upward On-Screen Display Menu "DN" ----- Move Pointer to downward in On-Screen Display Menu "SELECT" ----- The same operation as "SELECT" button of RC "AUTOPC" ----- Execute Auto PC Adj. operation	

Details	The same operation as RC/Control Key. Auto PC Adj. operation is not stopped before getting back a return value during this Auto PC Adj. operation even if this command is received again.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.11.2 CF\_MENU Command

Command	"CF_MENU_%1" [CR]	
%1	"ON" ----- Display On-Screen Display Menu "OFF" ----- Hide On-Screen Display Menu	
Details	Set On-Screen Display mode. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.11.3 CF\_POWER Command

Command	"CF_POWER_%1" [CR]	
%1	"ON" ----- Power ON "OFF" ----- Power OFF * Issuing another command during countdown process forced countdown operation to be terminated. * Error Code is returned in some projector statuses, which indicates the command is impossible to be executed. (See [8.3] for details) * Returning the response "000" [CR] (acceptable) does not always mean that the status has already changed to Power ON. Example: When the temperature approaches abnormal status after returning "000" [CR] to the command CF_POWER ON. Therefore, to get the projector status requires using Status Read command.	
Details	Set Power to ON/OFF	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.11.4 CF\_FREEZE Command

Command	"CF_FREEZE_%1" [CR]	
%1	"ON" ----- Set Freeze to ON. "OFF" ----- Set Freeze to OFF. "UP" ----- Switch forward (On→Off→On→---) "DN" ----- Switch backward (On→Off→On→---) * The same operation for "UP" and "DN" as this model has only "ON" / "OFF".	
Details	Set / Cancel Freeze function. (Available only in the normal Power ON status) Receiving FREEZE_ON command when the projector is Freeze enabled, Freeze status is kept.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 9. Status Read Command

### 9.1 Format

- 1) PC issues commands in format as below:  
 “CR\_ **COMMAND**” [CR]  
 Command: String
- 2) When projector receives the appropriate command, it returns the required data as a string.  
 “000\_” %1 [CR]  
 %1: Required Data (String)
- 3) When the received data cannot be decoded, the projector returns “?” [CR]

### 9.2 Transfer Example

Get total dots of projector by Expand Serial Commands

PC → PJ: “CR\_TDOTS” [CR]

PC ← PJ: “000\_1344” [CR]

### 9.3 Operation Condition

Basically it should be always operated.

### 9.4 Image Status Read Command

#### 9.4.1 CR\_BRIGHT Command

Command	“CR_BRIGHT” [CR]	
Details	Get user controlled value of Brightness	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“?” [CR]

#### 9.4.2 CR\_CONT Command

Command	“CR_CONT” [CR]	
Details	Get user controlled value of Contrast	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“?” [CR]

#### 9.4.3 CR\_COLOR Command

Command	“CR_COLOR” [CR]	
Details	Get user controlled value of Color	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“?” [CR]

**9.4.4 CR\_TINT Command**

Command	"CR_TINT" [CR]	
Details	Get user controlled value of Tint	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input). "?" [CR] --- When unknown command is received

**9.4.5 CR\_SHARP Command**

Command	"CR_SHARP" [CR]	
Details	Get user controlled value of Sharpness	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 015"
	Unacceptable	"?" [CR]

**9.4.6 CR\_GAMMA Command**

Command	"CR_GAMMA" [CR]	
Details	Get user controlled value of Gamma	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 015"
	Unacceptable	"?" [CR]

**9.4.7 CR\_WBAL-R Command**

Command	"CR_WBAL-R" [CR]	
Details	Get user controlled Red value of White Balance	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

**9.4.8 CR\_WBAL-G Command**

Command	"CR_WBAL-G" [CR]	
Details	Get user controlled Green value of White Balance	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

**9.4.9 CR\_WBAL-B Command**

Command	"CR_WBAL-B" [CR]	
Details	Get user controlled Blue value of White Balance	
Response	Acceptable	"000_%1" [CR]
	%1	"000 – 063"
	Unacceptable	"?" [CR]

**9.4.10 CR\_COLTEMP Command**

Command	"CR_COLTEMP" [CR]	
Details	Get Color Temperature setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"000" ----- Xlow "001" ----- Low "002" ----- Mid "003" ----- High "BLANK" ---- Processing adjusting White Balance (Neither of Xlow / Low / Mid / High)
	Unacceptable	"?" [CR]

**9.4.11 CR\_NZRED Command**

Command	"CR_NZRED" [CR]	
Details	Get Noise Reduction setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Noise Reduction OFF "L1" ----- Noise Reduction L1 "L2" ----- Noise Reduction L2
	Unacceptable	"?" [CR]

**9.4.12 CR\_PROGV Command**

Command	"CR_PROGV" [CR]	
Details	Get Progressive scan setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Progressive scan OFF "L1" ----- Progressive Mode L1 (for moving image) "L2" ----- Progressive Mode L2 (for still image) "FILM" ----- Progressive Model FILM
	Unacceptable	"?" [CR]

**9.4.13 CR\_IMAGE Command**

Command	"CR_IMAGE" [CR]	
Details	Get image setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"DYNAMIC" ----- Dynamic "STAND" ----- Standard "REAL" ----- Real "CINEMA" ----- Cinema "CUSTOM1"~"CUSTOM4" ----- Image1~4
	Unacceptable	"Error Code"[CR] ---- When the command is invalid due to condition such as Input source "?"[CR] ----- When unclear command is received



**9.4.14 CR\_IMGGMD Command**

Command	"CR_IMGGMD" [CR]	
Details	Get setting status of Dynamic/Standard/Real/Cinema in Image Gamma	
Response	Acceptable	"000_%1" [CR]
	%1	"DYN" ----- Dynamic "STD" ----- Standard "REL" ----- Real "CNM" ----- Cinema
	Unacceptable	"?" [CR]

**9.5 PC Adjust Status Read Command**

**9.5.1 CR\_FSYNC Command**

Command	"CR_FSYNC" [CR]	
Details	Get value of Fine Sync	
Response	Acceptable	"000_%1" [CR]
	%1	"0000 – 0031"
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input) "?" [CR] --- When unknown command is received

**9.5.2 CR\_TDOTS Command**

Command	"CR_TDOTS" [CR]	
Details	Get value of Total Dots	
Response	Acceptable	"000_%1" [CR]
	%1	"mmmm" – "nnnn" (mmmm = Display area H + Position H) (nnnn = Maximum value less than 140 MHz of Dot Clock)
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

**9.5.3 CR\_CLPPHASE Command**

Command	"CR_CLPPHASE" [CR]	
Details	Get value of Clamp Phase value	
Response	Acceptable	"000_%1" [CR]
	%1	"0001"~"nnnn" ("nnnn" depends on input signal)
	Unacceptable	"Error Code" [CR]

**9.5.4 CR\_H-POS Command**

Command	"CR_H-POS" [CR]	
Details	Get value of Horizontal Position	
Response	Acceptable	"000_%1" [CR]
	%1	"0000 – nnnn" (nnnn = Total Dots – Display area H)
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

**9.5.5 CR\_V-POS Command**

Command	"CR_V-POS" [CR]	
Details	Get value of Vertical Position	
Response	Acceptable	"000_%1" [CR]
	%1	"0000 – nnnn" (nnnn = Total Line – Display area V)
	Unacceptable	"Error Code" [CR] ----- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

**9.5.6 CR\_DDOTS Command**

Command	"CR_DDOTS" [CR]	
Details	Get value of Display Dots	
Response	Acceptable	"000_%1" [CR]
	%1	"0100 – nnnn" (nnnn = Total Dots – Position H)
	Unacceptable	"Error Code" [CR] ---- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

**9.5.7 CR\_DLINE Command**

Command	"CR_DLINE" [CR]	
Details	Get value of Display Line	
Response	Acceptable	"000_%1" [CR]
	%1	"0100 – nnnn" (nnnn = Total Line – Position V)
	Unacceptable	"Error Code" [CR] ---- When command is not available in the given condition (such as being selected input "?" [CR] ----- When unknown command is received

**9.5.8 CR\_ORGMODE Command**

Command	"CR_ORGMODE" [CR]	
Details	Get the original signal of current selected Mode that is set in PC Adj. When MODE1- 10 or EXT11-50 is not selected, get the current signal.	
Response	Acceptable	"000_%1" [CR]
	%1	<p>When input signal is PC Analog;</p> <p>"VGA1" ----- Indicates signal is VGA1                      "VGA2" ----- Indicates signal is VGA2                      :                      :                      "XGA1" ----- Indicates signal is XGA1                      :                      :                      "WXGA3" ----- Indicates signal is WXGA3                      "1080i60" ----- Indicates signal is 1080i60                      "1080i50" ----- Indicates signal is 1080i50                      "1035i" ----- Indicates signal is 10350i                      "720p60" ----- Indicates signal is 720p60                      "720p50" ----- Indicates signal is 720p50                      "575p" ----- Indicates signal is 575p                      "480p" ----- Indicates signal is 480p                      "575i" ----- Indicates signal is 575i                      "480i" ----- Indicates signal is 480i</p> <p>Note; To differentiate between 60Hz and 50Hz in 1080i and 720p, "60" or "50" is necessary to add to the parameter in this command                      * When input signal is not PC Analog, error code "101" is returned.</p>
	Unacceptable	"?" [CR]

**9.5.9 CR\_PCSTORE Command**

Command	"CR_PCSTORE" [CR]	
Details	Get Free or Stored status of MODE1 -10 in PC Adjust. Data consists of 10 bytes and each byte represents MODE1-10. (F:Free, S:Stored)	
Response	Acceptable	"000_%1" [CR]
	%1	<p>"FFFFFFFF" ----- ALL Free                      "SFFFFFFFF" ----- Mode1 is Stored, others are Free                      :                      :                      "FFFFFFFFS" ----- Mode10 is Stored, others are Free                      "SSSSSSSSSS" ----- ALL Stored</p>
	Unacceptable	"?" [CR]

**9.5.10 CR\_SETPCADJ Command**

Command	"CR_SETPCADJ" [CR]	
Details	Get PC signal for current system	
Response	Acceptable	"000_%1" [CR]
	%1	<p>When input signal is PC Analog;</p> <p>"VGA1" ----- Indicates VGA1 is selected</p> <p>"VGA2" ----- Indicates VGA2 is selected</p> <p>  :</p> <p>  :</p> <p>"XGA1" ----- Indicates XGA1 is selected</p> <p>  :</p> <p>  :</p> <p>"WXGA3" ----- Indicates WXGA3 is selected</p> <p>"1080I" ----- Indicates 1080i is selected</p> <p>"1035I" ----- Indicates 10350i is selected</p> <p>"720p" ----- Indicates 720p is selected</p> <p>"575p" ----- Indicates 575p is selected</p> <p>"480p" ----- Indicates 480p is selected</p> <p>"575I" ----- Indicates 575i is selected</p> <p>"480I" ----- Indicates 480i is selected</p> <p>"1080P" ----- Indicates 1080p is selected</p> <p>"MODE1"----- Indicates Mode1 is selected</p> <p>  :</p> <p>"MODE10" ----- Indicates Mode10 is selected</p> <p>"EXT11" ----- EXT11 is selected</p> <p>  :</p> <p>"EXT60" ----- EXT60 is selected</p> <p>* Error Code "101" [CR] is returned for no signal.</p> <p>* When input signal is not PC Analog, error code "101" is returned.</p>
	Unacceptable	"?" [CR]

## 9.6 Video Status Read Command

### 9.6.1 CR\_SERSYS Command

Command	"CR_SERSYS" [CR]	
Details	Get selected current signal. Auto detected signal is returned in Auto mode Only available when Input is Y,Pb/Cb,Pr/Cr, S-Video or Video. (This is not the case for PC-Analog/PC-Digital/AV HDCP signals)	
Response	Acceptable	"000_%1" [CR]
	%1	"1080I60" ----- 1080i 60Hz "1080I50" ----- 1080i 50Hz "1035I" ----- 1035i "720P" ----- 720p "575P" ----- 575p "480P" ----- 480p "575I" ----- 575i (includes Composite signal such as PAL) "480I" ----- 480i (includes Composite signal such as NTSC) "NO_SIGNAL" ----- No signal
	Unacceptable	"101" [CR] --- When input signal is PC-Analog, PC-Digital or PC signals in AV HDCP "?" [CR] ----- When unknown command is received

## 9.7 Input Read Command

### 9.7.1 CR\_INPUT Command

Command	"CR_INPUT" [CR]	
Details	Get selected INPUT No.	
Response	Acceptable	"000_%1" [CR]
	%1	"1 - 4"
	Unacceptable	"?" [CR]

### 9.7.2 CR\_SOURCE Command

Command	"CR_SOURCE" [CR]	
Details	Get selected source	
Response	Acceptable	"000_%1" [CR]
	%1	"DIGITAL" ----- RGB (PC Digital) is selected "ANALOG" ----- RGB (PC Analog) is selected "SCART" ----- RGB (Scart) is selected "HDCP" ----- RGB (AV HDCP) is selected "VIDEO" ----- Video is selected "S-VIDEO" ----- S-Video is selected "YPBPR" ----- Y,Pb/Cb,Pr/Cr is selected "AUTO" ----- AUTO is selected "NETWORK" ----- Network is selected
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input) "?" [CR] ----- When unknown command is received

**9.7.3 CR\_SRCINP1 Command**

Command	"CR_SRCINP1" [CR]	
Details	Get Source of INPUT1	
Response	Acceptable	"000_%1" [CR]
	%1	"DIGITAL" ----- in PC Digital mode "ANALOG" ----- in PC Analog mode "SCART" ----- in Scart mode "HDCP" ----- in AV HDCP mode
	Unacceptable	"?" [CR]

**9.7.4 CR\_SRCINP2 Command**

Command	"CR_SRCINP2" [CR]	
Details	Get Source of INPUT2	
Response	Acceptable	"000_%1" [CR]
	%1	"VIDEO" ----- in Video mode "YPBPR" ----- in Y,Pb/Cb,Pr/Cr mode "ANALOG" ----- in RGB mode
	Unacceptable	"?" [CR]

**9.7.5 CR\_SRCINP3 Command**

Command	"CR_SRCINP3" [CR]	
Details	Get Source of INPUT3	
Response	Acceptable	"000_%1" [CR]
	%1	"AUTO" ----- Auto-selected Video/S-Video "VIDEO" ----- in Video mode "S-VIDEO" ----- in S-Video mode
	Unacceptable	"?" [CR]

**9.7.6 CR\_SRCINP4 Command**

Command	"CR_SRCINP4" [CR]	
Details	Get Source of INPUT4	
Response	Acceptable	"000_%1" [CR]
	%1	"NETWORK" ----- With PJ-Net attached and the power ON
	Unacceptable	"101" [CR] ----- With PJ-Net attached and the power ON "103" [CR] ----- With PJ-Net unattached "?" [CR] ----- When unknown command is received.

9.7.7 CR\_SYSTEM Command

Command	"CR_SYSTEM" [CR]		
Details	Get selected System		
Response	Acceptable	"000_%1" [CR]	
	%1	Input is PC Analog	"VGA1" ----- indicates VGA1 is selected "VGA2" ----- indicates VGA2 is selected : : "XGA1" ----- indicates XGA1 is selected : "WXGA3" ----- indicates WXGA3 is selected "1080I" ----- indicates 1080i is selected "1035I" ----- indicates 1035i is selected "720p" ----- indicates 720p is selected "575p" ----- indicates 575p is selected "480p" ----- indicates 480p is selected "575I" ----- indicates 575i is selected "480I" ----- indicates 480i is selected "MODE1" ----- indicates Mode1 is selected : : "MODE10" ----- indicates Mode10 is selected " EXT11" ----- indicates EXT11 is selected : : "EXT60" ----- indicates EXT60 is selected * Error Code "101" [CR] is returned for no signal
		Input is PC-Digital/ AV-HDCP	"D-XGA1" ----- indicates D-XGA1 is selected : "D-WXGA3" ----- indicates D-WXGA3 is selected "D-1080I" ----- indicates D-1080i is selected "D-1035I" ----- indicates D-1035i is selected "D-720P" ----- indicates D-720p is selected "D-575P" ----- indicates D-575p is selected "D-480P" ----- indicates D-480p is selected "D-575I" ----- indicates D-575i is selected "D-480I" ----- indicates D-480i is selected * Error Code "101" [CR] is returned for no signal
		Input is Y,Pb/Cb,Pr/Cr	"AUTO" ----- indicates Auto is selected "1080I" ----- indicates 1080i is selected "1035I" ----- indicates 1035i is selected "720P" ----- indicates 720p is selected "575P" ----- indicates 575p is selected "480P" ----- indicates 480p is selected "575I" ----- indicates 575i is selected "480I" ----- indicates 480i is selected * Selected System is returned, whether or not signal is coming.
		Input is Video or S-video	"AUTO" ----- indicates Auto is selected "NTSC" ----- indicates NTSC is selected "NTSC443" ----- indicates NTSC4.43 is selected "PAL" ----- indicates PAL is selected "SECAM" ----- indicates SECAM is selected "PAL-M" ----- indicates PAL-M is selected "PAL-N" ----- indicates PAL-N is selected * Selected System is returned, whether or not signal is coming.
Unacceptable	"Error Code" [CR]		

**9.7.8 CR\_SYSLIST Command**

Command	"CR_SYSLIST" [CR]	
Details	Get possible systems for System list	
Response	Acceptable	"000_%1_%2_---_%x" [CR]
	%1	<p>When Input is PC Analog:                      "XGA" ----- XGA is in the list                      "1080I" ----- 1080i is in the list                      "1080P" ----- 1080p is in the list                      *Auto, Mode1-10 shall not be returned.                      *When no signal is coming, error code "101" is returned.</p> <p>When Input is PC Digital/AV HDCP:                      "D-XGA" ----- D-XGA is in the list                      "D-720P" ----- D-720p is in the list                      *When no signal is coming, error code "101" is returned.</p> <p>When Input is Y,Pb/Cb,Pr/Cr:                      All possible systems in Menu, including Auto, are returned.                      "AUTO" ----- Auto is in the list                      "1080I" ----- 1080i is in the list                      "1035I" ----- 1035i is in the list                      :                      :                      "575I" ----- 575i is in the list                      "480I" ----- 480i is in the list                      *When no signal is coming, error code "101" is not returned.</p> <p>When Input is Video/S-Video:                      All possible systems in Menu, including Auto, are returned.                      "AUTO" ----- Auto is in the list                      "PAL" ----- PAL is in the list                      "SECAM" ----- SECAM is in the list                      :                      :                      "PAL-N" ----- PAL-N is in the list                      *When no signal is coming, error code "101" is not returned.</p>
	Unacceptable	"Error Code" [CR]

**9.7.9 CR\_MODELIST Command**

Command	"CR_MODELIST" [CR]	
Details	Get possible modes for Mode list	
Response	Acceptable	"000_%1_%2_---_%x" [CR]
	%1	<p>Error Code "101" is returned except for PC-Analog and for no signal with PC-Analog                      Possible modes in Mode1-10 are returned when PC-Analog signal is coming.</p> <p>"MODE1"                      "MODE2"                      "MODE3"                      :                      :                      "MODE8"                      "MODE9"                      "MODE10"</p>
	Unacceptable	"Error Code" [CR]



**9.7.10 CR\_HMSLOT Command**

Command	"CR_HMSLOT" [CR]	
Details	Get the total number of Input.	
Response	Acceptable	"000_%1" [CR]
	%1	"004" ----- When PJ-Net is attached. "003" ----- When PJ-Net is not attached.
	Unacceptable	"Error Code" [CR]

**9.7.11 CR\_NMSLOT1 Command**

Command	"CR_NMSLOT1" [CR]	
Details	Get terminal information of Input1	
Response	Acceptable	"000_%1" [CR]
	%1	"RGB"
	Unacceptable	"Error Code" [CR]

**9.7.12 CR\_NMSLOT2 Command**

Command	"CR_NMSLOT2" [CR]	
Details	Get terminal information of Input2	
Response	Acceptable	"000_%1" [CR]
	%1	"5BNC"
	Unacceptable	"Error Code" [CR]

**9.7.13 CR\_NMSLOT3 Command**

Command	"CR_NMSLOT3" [CR]	
Details	Get terminal information of Input3	
Response	Acceptable	"000_%1" [CR]
	%1	"VIDEO"
	Unacceptable	"Error Code" [CR]

**9.7.14 CR\_NMSLOT4 Command**

Command	"CR_NMSLOT4" [CR]	
Details	Get terminal information of Input4	
Response	Acceptable	"000_%1" [CR]
	%1	"NETWORK" ----- When PJ-Net is attached. *With PJ-Net unattached, this command is invalid and error code "103" is returned. *With PJ-Net attached and the power OFF, error code "101" is returned. *In models not supporting PJ-Net, error code "103" is returned.
	Unacceptable	"Error Code" [CR]

**9.7.15 CR\_IDSLOT1 Command**

Command	"CR_IDSLOT1" [CR]	
Details	Get ID information of Input1. This command is to determine sources possible to input.	
Response	Acceptable	"000_%1" [CR]
	%1	"30" ----- On-borad (DVI-D and D-Sub) Available source: DIGITAL, ANALOG, SCART, HDCP
	Unacceptable	"Error Code" [CR]

**9.7.16 CR\_IDSLOT2 Command**

Command	"CR_IDSLOT2" [CR]	
Details	Get ID information of Input2. This command is to determine sources possible to input.	
Response	Acceptable	"000_%1" [CR]
	%1	"41" ----- On-borad (5BNC) Available source: ANALOG, VIDEO, YPBPR
	Unacceptable	"Error Code" [CR]

**9.7.17 CR\_IDSLOT3 Command**

Command	"CR_IDSLOT3" [CR]	
Details	Get ID information of Input3. This command is to determine sources possible to input.	
Response	Acceptable	"000_%1" [CR]
	%1	"52" ----- On-borad (3BNC and S-VIDEO) Available source: AUTO, VIDEO, S-VIDEO
	Unacceptable	"Error Code" [CR]

**9.7.18 CR\_IDSLOT4 Command**

Command	"CR_IDSLOT4" [CR]	
Details	Get ID information of Input4. This command is to determine sources possible to input.	
Response	Acceptable	"000_%1" [CR]
	%1	"13" ----- PJ-Net (Viewer capable) Available source: Network *With PJ-Net unattached, this command is invalid and error code "103" is returned. *With PJ-Net attached and the power OFF, error code "101" is returned. *In models not supporting PJ-Net, error code "103" is returned.
	Unacceptable	"Error Code" [CR]

## 9.8 Screen Status Read Command

### 9.8.1 CR\_SCREEN Command

Command	"CR_SCREEN" [CR]	
Details	Get selected screen image size	
Response	Acceptable	"000_%1" [CR]
	%1	"NORMAL" ----- Normal mode "WIDE" ----- Wide mode "FULL" ----- Full mode "TRUE" ----- True mode "CUSTOM" ----- Custom mode
	Unacceptable	"Error Code" [CR] --- When command is not available in the given condition (such as being selected input). "?" [CR] --- When unknown command is received

### 9.8.2 CR\_KYSTNMODE Command

Command	"CR_KYSTNMODE" [CR]	
Details	Get setting status of Keystone Store Mode	
Response	Acceptable	"000_%1" [CR]
	%1	"STR" ----- Store mode is "Store" "RST" ----- Store mode is "Reset"
	Unacceptable	"?" [CR] ----- When unknown command is received

### 9.8.3 CR\_VSCALE Command

Command	"CR_VSCALE" [CR]	
Details	Get setting status of V scale	
Response	Acceptable	"000_%1" [CR]
	%1	"-32"—"032"
	Unacceptable	"?" [CR] ----- When unknown command is received

### 9.8.4 CR\_VPOS Command

Command	"CR_VPOS" [CR]	
Details	Get setting status of V Position	
Response	Acceptable	"000_%1" [CR]
	%1	"-15"—"015"
	Unacceptable	"?" [CR] ----- When unknown command is received

### 9.8.5 CR\_HSCALE Command

Command	"CR_HSCALE" [CR]	
Details	Get setting status of H scale	
Response	Acceptable	"000_%1" [CR]
	%1	"-32"—"032"
	Unacceptable	"?" [CR] ----- When unknown command is received

**9.8.6 CR\_HPOS Command**

Command	"CR_HPOS" [CR]	
Details	Get setting status of H Position	
Response	Acceptable	"000_%1" [CR]
	%1	"-15"—"015"
	Unacceptable	"?" [CR] ----- When unknown command is received

**9.9 Lamp Status Read Command**

**9.9.1 CR\_LAMPREPL Command**

Command	"CR_LAMPREPL" [CR]	
Details	Get information of Lamp Replacement time	
Response	Acceptable	"000_%1" [CR]
	%1	"1Y" ----- indicates over lamp replacement time "1N" ----- indicates under lamp replacement time  "1" means the number of lamps (1 lamp is used→ "1") "Y"/"N" means if it is time to replace lamp or not. Example: "1Y" ----- 1 lamp is used and it is over lamp replacement time
	Unacceptable	"?" [CR]

**9.9.2 CR\_LAMPH Command**

Command	"CR_LAMPH" [CR]	
Details	Get Lamp running time (in hours) * return actual lamp running time	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 - 99999"
	Unacceptable	"Error Code" [CR]

**9.9.3 CR\_LAMPCORRESPH Command**

Command	"CR_LAMPCORRESPH" [CR]	
Details	Get Lamp running time (in hours) *return lamp running time multiplied by a coefficient (not actual running time)	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 – 99999"
	Unacceptable	"Error Code" [CR]

**9.9.4 CR\_LAMPMODE Command**

Command	"CR_LAMPMODE" [CR]	
Details	Get setting status of Lamp mode	
Response	Acceptable	"000_%1" [CR]
	%1	"AUTO1" ----- Lamp Mode is Auto1 "AUTO2" ----- Lamp Mode is Auto2 "HIGH" ----- Lamp Mode is High "NORMAL" ----- Lamp Mode is Normal "ECO1" ----- Lamp Mode is Eco1 "ECO2" ----- Lamp Mode is Eco2
	Unacceptable	"?" [CR]

**9.9.5 CR\_LAMPSTS Command**

Command	"CR_LAMPSTS" [CR]	
Details	Get Lamp status	
Response	Acceptable	"000_%1" [CR]
	%1	"1" ----- Lamp is ON "10" ----- Lamp is OFF "1X" ----- Lamp Failure
	Unacceptable	"Error Code" [CR]

**9.9.6 CR\_PROJH Command**

Command	"CR_PROJH" [CR]	
Details	Get total running time of Projector (in hours)	
Response	Acceptable	"000_%1" [CR]
	%1	"0000000 – 0099999"
	Unacceptable	"?" [CR]

**9.9.7 CR\_HMLAMP Command**

Command	"CR_HMLAMP" [CR]	
Details	Get total lamp number	
Response	Acceptable	"000_%1" [CR]
	%1	"001"
	Unacceptable	"Error Code" [CR]

### 9.10 Sound Status Read Command

#### 9.10.1 CR\_VOLUME Command

Command	"CR_VOLUME"[CR]	
Details	Get Volume value of user control	
Response	Acceptable	"000_%1"[CR]
	%1	"000"~"063"
	Unacceptable	"?"[CR]

#### 9.10.2 CR\_MUTE Command

Command	"CR_MUTE"[CR]	
Details	Get sound mute setting status	
Response	Acceptable	"000_%1"[CR]
	%1	"ON" ----- Set Sound Mute ON "OFF" ----- Cancel Sound Mute
	Unacceptable	"?"[CR]

### 9.11 Setting Status Read Command

#### 9.11.1 CR\_BACKGND Command

Command	"CR_BACKGND" [CR]	
Details	Get setting status of Screen for no signal	
Response	Acceptable	"000_%1" [CR]
	%1	"BLUE" ----- Blue Back is selected "USER" ----- User is selected "BLACK" ----- Black Back is selected
	Unacceptable	"Error Code" [CR]

#### 9.11.2 CR\_DISP Command

Command	"CR_DISP" [CR]	
Details	Get setting status of Display	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Display is ON "CNTDWNOFF" ----- Count down is OFF "OFF" ----- Display is OFF
	Unacceptable	"?" [CR]

#### 9.11.3 CR\_LOGO Command

Command	"CR_LOGO" [CR]	
Details	Get setting status of Logo	
Response	Acceptable	"000_%1" [CR]
	%1	"DFLT" ----- Default Logo is enabled "USER" ----- User is enabled "OFF" ----- Logo is disabled
	Unacceptable	"?" [CR]

**9.11.4 CR\_LOGOLOCK Command**

Command	"CR_LOGOLOCK" [CR]	
Details	Get setting status of Logo Lock function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Logo Lock is ON "OFF" ----- Logo Lock is OFF
	Unacceptable	"Error Code" [CR]

**9.11.5 CR\_CEIL Command**

Command	"CR_CEIL" [CR]	
Details	Get setting status of Ceiling	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Ceiling projection is enabled "OFF" ----- Ceiling projection is disabled
	Unacceptable	"Error Code" [CR]

**9.11.6 CR\_REAR Command**

Command	"CR_REAR" [CR]	
Details	Get setting status of Rear function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Rear projection is enabled "OFF" ----- Rear projection is disabled
	Unacceptable	"Error Code" [CR]

**9.11.7 CR\_RCODE Command**

Command	"CR_RCODE" [CR]	
Details	Get selected Remote Control Code	
Response	Acceptable	"000_%1" [CR]
	%1	"001" ----- Code 1 is selected "002" ----- Code 2 is selected "003" ----- Code 3 is selected "004" ----- Code 4 is selected "005" ----- Code 5 is selected "006" ----- Code 6 is selected "007" ----- Code 7 is selected "008" ----- Code 8 is selected
	Unacceptable	"?" [CR]

**9.11.8 CR\_RCSENSOR Command**

Command	"CR_RCSENSOR"[CR]	
Details	Get selected location of infrared remote receiver of remote control	
Response	Acceptable	"000_%1" [CR]
	%1	"BOTH" ----- Both front and back part are valid "FRONT" ----- Front part is valid and back part is invalid "BACK" ----- Front part is invalid and back part is valid
	Unacceptable	"?" [CR]

**9.11.9 CR\_RTYPE Command**

Command	"CR_RTYPE" [CR]	
Details	Get status of supported Remote Control (IR/RF).	
Response	Acceptable	"000_%1" [CR]
	%1	"IR" ----- IR "RF" ----- RF (cannot be returned as this model supports only IR remote control)
	Unacceptable	"Error Code" [CR]

**9.11.10 CR\_LANG Command**

Command	"CR_LANG" [CR]	
Details	Get selected language	
Response	Acceptable	"000_%1" [CR]
	%1	"ENG" ----- English is selected "DEU" ----- German is selected "FRA" ----- French is selected "ITA" ----- Italian is selected "ESP" ----- Spanish is selected "POR" ----- Portuguese is selected "NED" ----- Dutch is selected "SVE" ----- Swedish is selected "JPN" ----- Japanese is selected "CHI" ----- Chinese is selected "KOR" ----- Korean is selected "RUS" ----- Russian is selected
	Unacceptable	"?" [CR]

**9.11.11 CR\_ON-STA Command**

Command	"CR_ON-STA" [CR]	
Details	Get setting status of Power ON Start	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Power ON Start is ON "OFF" ----- Power ON Start is OFF
	Unacceptable	"?" [CR]

**9.11.12 CR\_P-MANE Command**

Command	"CR_P-MANE" [CR]	
Details	Get setting status of Power management	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Power Management is disabled "READY" ----- Power Management is set to Ready "SHUTDOWN" ----- Power Management is set to Shut Down mode
	Unacceptable	"?" [CR]



**9.11.13 CR\_P-MANETIME Command**

Command	"CR_P-MAETIME" [CR]	
Details	Get setting time for starting Power Management function	
Response	Acceptable	"000_%1" [CR]
	%1	"001 – 030" ----- 1 to 30 minutes
	Unacceptable	"?" [CR]

**9.11.14 CR\_FANSPEED Command**

Command	"CR_FANSPEED" [CR]	
Details	Get selected Fan Control Speed mode.	
Response	Acceptable	"000_%1" [CR]
	%1	"MAX" ----- Max mode is selected "NOR" ----- Normal mode is selected
	Unacceptable	"?" [CR]

**9.11.15 CR\_HIGHLAND Command**

Command	"CR_HIGHLAND"[CR]	
Details	Get selected Highland mode	
Response	Acceptable	"000_%1"[CR]
	%1	"ON" ----- Highland mode is ON "OFF" ----- Highland mode is OFF
	Unacceptable	"?"[CR]

**9.11.16 CR\_SLANT Command**

Command	"CR_SLANT"[CR]	
Details	Get setting status of Slant setting	
Response	Acceptable	"000_%1"[CR]
	%1	"OFF" ----- Projector is installed without slant "L1" ----- Projector is slanted at ?~? degree angle "L2" ----- Projector is slanted at ?~? degree angle
	Unacceptable	"?"[CR]

**9.11.17 CR\_KEYDIS Command**

Command	"CR_KEYDIS" [CR]	
Details	Get RC/Control key prohibit status (valid or invalid)	
Response	Acceptable	"000_%1" [CR]
	%1	"NONE" ----- RC&Control keys are valid "RCALL" ----- All RC keys are invalid "RCPART" ----- Specific RC keys are invalid "KEYALL" ----- All Projector Keys are invalid "KEYPART" ----- Specific Projector Keys are invalid
	Unacceptable	"?" [CR]

**9.11.18 CR\_SECURITY Command**

Command	"CR_SECURITY" [CR]	
Details	Get ON/OFF setting status of Security on menu.	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- PJ Lock is set to On1/ On2 on the menu "OFF" ----- PJ Lock is set to OFF on the menu
	Unacceptable	"Error Code" [CR]

**9.11.19 CR\_PJLOCKNOW Command**

Command	"CR_PJLOCKNOW" [CR]	
Details	Get actual setting status of PIN code lock	
Response	Acceptable	"000_%1" [CR]
	%1	"LOCK" ----- PJ is locked PIN code lock is set to ON1/ON2 on the menu and PJ PIN code is not entered, therefore PJ is actually locked. "FREE" ----- PJ is unlocked (either A or B) A) PJ lock is set to OFF on the menu B) PJ lock is set to ON1/ON2 on the menu, but PIN code Lock mode is canceled because PJ PIN code is entered.
	Unacceptable	"Error Code" [CR]

**9.11.20 CR\_PJLOCKMENU Command**

Command	"CR_PJLOCKMENU" [CR]	
Details	Get ON/OFF setting status of PIN code lock on menu	
Response	Acceptable	"000_%1" [CR]
	%1	"ON1" ----- PIN code lock ON 1 is set on the menu "ON2" ----- PIN code lock ON 2 is set on the menu "OFF" ----- PIN code lock OFF is set on the menu
	Unacceptable	"Error Code" [CR]

**9.11.21 CR\_TESTPAT Command**

Command	"CR_TESTPAT" [CR]	
Details	Get setting status of Test pattern	
Response	Acceptable	"000_%1" [CR]
	%1	"COLOR" ----- Color bar is displayed "GRAD1" ----- 16step(white→black) is displayed "GRAD2" ----- 16step(white←black) is displayed "GRAD3" ----- 16step(white↓black) is displayed "GRAD4" ----- 16step(white↑black) is displayed "WHITE" ----- All white is displayed "BALCK" ----- All black is displayed "CROSS" ----- Cross is displayed "OFF" ----- Test pattern display is not displayed
	Unacceptable	"Error Code" [CR]

**9.11.22 CR\_FILH Command**

Command	"CR_FILH" [CR]	
Details	Get Filter used time	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 - 99999"
	Unacceptable	"Error Code" [CR]

**9.11.23 CR\_FILCOND Command**

Command	"CR_FILCOND" [CR]	
Details	Get status of filter clog	
Response	Acceptable	"000_%1" [CR]
	%1	"CLOG" = Filter is clogged "WARN" = Filter is nearly clogged(Warning status) "CLEAN" = Filter is not clogged
	Unacceptable	"Error Code" [CR]

**9.11.24 CR\_FILREPL Command**

Command	"CR_FILREPL" [CR]	
Details	Get status of Filter cleaning / replacement time	
Response	Acceptable	"000_%1" [CR]
	%1	"1Y"-----Filter Exchange time is over value of Filter Message. "1N"--Filter Exchange time is not over value of Filter Message.
	Unacceptable	"Error Code" [CR]

**9.11.25 CR\_FILTIMER Command**

Command	"CR_FILTIMER" [CR]	
Details	Get Filter used time	
Response	Acceptable	"000_%1" [CR]
	%1	"100" ----- 100 hours "200" ----- 200 hours "300" ----- 300 hours "OFF" ----- Warning OSD is not displayed
	Unacceptable	"Error Code" [CR]

**9.11.26 CR\_POINTER Command**

Command	"CR_POINTER"[CR]	
Details	Get setting status of Pointer	
Response	Acceptable	"000_%1_%2"[CR]
	%1	"SPOTLIGHT" ----- Spotlight mode "ARROW" ----- Arrow mode "FINGER" ----- Finger mode "LASER" ----- Laser mark mode
	%2	When %1 is "SPOTLIGHT": "MAX" ----- Spotlight Large "MID" ----- Spotlight Medium "MIN" ----- Spotlight Small
	Unacceptable	"?"[CR]

**9.12 Other Status Read Commands**

**9.12.1 CR\_STATUS Command**

COMMAND	"CR_STATUS" [CR]	
Detail	Get operating status of Projector Same as "CR0" in basic command except error code follows it.	
Response	Acceptable	"000_%1" [CR]
	%1	"00" = Power ON "80" = Standby "40" = Countdown in process "20" = Cooling Down in process "10" = Power Failure "28" = Cooling Down in process due to abnormal temperature "88" = Standby after Cooling Down due to abnormal temperature "02" = Invalid RS-232C Command "24" = Power Save/Cooling Down in process "04" = Power Save "21" = Cooling Down in process after turned Off due to lamp failure "81" = Standby after Cooling Down due to lamp failure
	Unacceptable	"Error Code" [CR]

**9.12.2 CR\_SIGNAL Command**

Command	"CR_SIGNAL" [CR]	
Details	Get status whether there is any signal or not.	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- There is signal "OFF" ----- There is no signal
	Unacceptable	"?" [CR]

**9.12.3 CR\_VMUTE Command**

Command	"CR_VMUTE" [CR]	
Details	Get setting status of No Show.	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- No Show is ON "OFF" ----- No Show is OFF
	Unacceptable	"?" [CR]

**9.12.4 CR\_FREEZE Command**

Command	"CR_FREEZE" [CR]	
Details	Get setting status of Freeze.	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Freeze is ON "OFF" ----- Freeze is OFF
	Unacceptable	"?" [CR]

**9.12.5 CR\_ALLPFAIL Command**

Command	"CR_ALLPFAIL"(CR)	
Details	Get all the information on Power Failure. Return all the responses of "CR_PFAIL01"~"CR_PFAIL12" at once. Therefore it consists of 276(23 bytes x 12) bytes totally.	
Response	Acceptable	"000_%1_%2"[CR] "000_%3_%4"[CR] "000_%5_%6"[CR] : : "000_%21_%22"[CR] "000_%23_%24"[CR] (Send all 7 blocks above at one time)
	%1~%24	%1, %3, . . . %23 (Odd number) ---- Item name of Power Failure (16-byte fixed length) %2, %4, . . . %24 (Even number) ---- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code"[CR]

**9.12.6 CR\_HMPFAIL Command**

Command	"CR_HMPFAIL" [CR]	
Details	Get total number of detectable Power Failure	
Response	Acceptable	"000_%1" [CR]
	%1	"012"
	Unacceptable	"Error Code" [CR]

**9.12.7 CR\_PFAIL01 Command**

Command	"CR_PFAIL01" [CR]	
Details	Get item name and status of Power Failure No.1	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.8 CR\_PFAIL02 Command**

Command	"CR_PFAIL02" [CR]	
Details	Get the item name and status of Power Failure No.2	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.9 CR\_PFAIL03 Command**

Command	"CR_PFAIL03" [CR]	
Details	Get the item name and status of Power Failure No.3	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.10 CR\_PFAIL04 Command**

Command	"CR_PFAIL04" [CR]	
Details	Get the item name and status of Power Failure No.4	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.11 CR\_PFAIL05 Command**

Command	"CR_PFAIL05" [CR]	
Details	Get the item name and status of Power Failure No.5	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.12 CR\_PFAIL06 Command**

Command	"CR_PFAIL06" [CR]	
Details	Get the item name and status of Power Failure No.6	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.13 CR\_PFAIL07 Command**

Command	"CR_PFAIL07" [CR]	
Details	Get the item name and status of Power Failure No.7	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG" Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.14 CR\_PFAIL08 Command**

Command	"CR_PFAIL08" [CR]	
Details	Get the item name and status of Power Failure No.8	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG", Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.15 CR\_PFAIL09 Command**

Command	"CR_PFAIL09" [CR]	
Details	Get the item name and status of Power Failure No.9	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG", Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.16 CR\_PFAIL10 Command**

Command	"CR_PFAIL10" [CR]	
Details	Get the item name and status of Power Failure No.10	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG", Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.17 CR\_PFAIL11 Command**

Command	"CR_PFAIL11" [CR]	
Details	Get the item name and status of Power Failure No.11	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG", Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.18 CR\_PFAIL12 Command**

Command	"CR_PFAIL12" [CR]	
Details	Get the item name and status of Power Failure No.12	
Response	Acceptable	"000_%1_%2" [CR]
	%1, %2	%1 ----- Item name of Power Failure (16-byte fixed length) %2 ----- Power status (2-byte fixed length) Power is failed: "NG", Power status is normal: "OK"
	Unacceptable	"Error Code" [CR]

**9.12.19 CR\_TEMPFAIL Command**

Command	"CR_TEMPFAIL" [CR]	
Details	Get the temperature inside a projector when abnormal temperature status occurs. It is possible to get the temperatures all at once when several sensors installed.	
Response	Acceptable	"000_%1_%2_%3" [CR]
	%1,%2,%3	<p>%1 ----- Sensor 1 temp. %2 ----- Sensor 2 temp. %3 ----- Sensor 3 temp. e.g. "_31.5F"</p> <p>"_" indicates a space. When the temperature goes under 0, the first character is "-", not a space, as in "-05.5F". With more than one temperature sensors installed, projector returns responses in a row. e.g. "_31.5F _35.2S _38.0W" [CR] The first data indicates sensor 1 data, then one space, and sensor 2 data. Last character in each data indicates the sensor's status. "F" ----- Exceeding critical temp. (abnormal temp.) "W" ----- Approaching critical temp. (Warning temp.) "S" ----- Sensor temp. is safe (Safe temp.) "N" ----- Sensor detects no critical temp. "E" ----- Unable to return the temp. data</p> <p>The example 1 shows that sensor 1 indicates 31.5 degrees and the temperature is abnormal, sensor 2 indicates 35.2 degrees and the temperature is safe, sensor 3 indicates 38.0 degrees and the temperature is approaching critical state. When the temperature is safe, all data is represented as "_00.0S". When the projector is reset, "_00.0S" is set, and every time abnormal temperature occurs, it renews the data and returns it. In short, it only returns the renewed data of the latest abnormal temperature and the previous data is deleted.</p>
	Unacceptable	"?" [CR]



**9.12.20 CR\_TEMP Command**

Command	"CR_TEMP" [CR]	
Details	Get the current temperature information inside a projector. It is possible to get the temperatures all at once when several sensors installed.	
Response	Acceptable	"000_%1_%2_%3" [CR]
	%1, %2, %3	<p>%1 ----- Sensor 1 temp. (External temp.)                  %2 ----- Sensor 2 temp. (Internal temp.1)                  %3 ----- Sensor 3 temp. (Internal temp.2)                  %1, %2 are fixed 6 characters                  There is one space between %1 and %2                  There is one space between %2 and %3                  e.g. "_31.5F"]                  "_" indicates a space. When the temperature goes under 0,                  the first character is "-", not a space, as in "-05.5F".                  Last character in each data indicates the sensor's status.                  "F" ----- Exceeding critical temp. (abnormal temp.)                  "W" ----- Approaching critical temp. (Warning temp.)                  "S" ----- Sensor temp. is safe (Safe temp.)                  "N" ----- Sensor detects no critical temp.                  "E" ----- Unable to return the temp. data</p> <p>With more than one temperature sensors installed, projector returns responses in a row.                  e.g. "_31.5F __35.2S __38.0W " [CR]                  The first data indicates sensor 1 data, then one space, and sensor 2 data.</p> <p>The example 1 shows that sensor 1 indicates 31.5 degrees and the temperature is abnormal, sensor 2 indicates 35.2 degrees and the temperature is safe, sensor 3 indicates 38.0 degrees and the temperature is approaching critical state.                  When it cannot return the temperature data due to hardware error, the last character is "E" as in "_00.0E"                  It might happen for some projectors that the temperature continues to go up to abnormal status as long as lamp ballasts are hot. Therefore when in StandBy mode or for several tens of seconds after Power is ON, any treatment of Power Failure is not processed. In that case, the temperature data is represented as "_ - - - - N".</p>
	Unacceptable	"Error Code" [CR]