


## IR Command Code Protocol of Remote Control

### A type: Use in non-interactive models

System Code		6AH	Remote Control ID
Custom Code		0x6A	
Data Code			
Item	Value	Command Description	
1	0x00	POWER	
2	0x01	INPUT	
3	0x27	MENU	
4	0x14	UP	
5	0x16	LEFT	
6	0x18	RIGHT	
7	0x19	DOWN	
8	0x13	MUTE	
9	0x23	BLANK	
10	0x1F	AUTO	
11	----	LASER	



### B type: Use in interactive models

System Code		6AH	Remote Control ID
Custom Code		0x6A	
Data Code			
Item	Value	Command Description	
1	0x00	POWER	
2	0x01	INPUT	
3	0x27	MENU	
4	0x14	UP	
5	0x16	LEFT	
6	0x18	RIGHT	
7	0x19	DOWN	
8	0x13	MUTE	
9	0x22	Keystone+	
10	0x21	Keystone-	
11	0x0B	VOL+	
12	0x0F	VOL-	
13	0x1F	Auto	
14	0x26	ESC	
15	0x23	BLANK	
16	0x24	STILL	
17	----	LASER	

